PINION GEAR/RING GEAR/TONE RING (Continued)

(6) Install pinion depth shim on the pinion shaft. Install rear pinion bearing on the pinion gear with Installer W-262 and a press (Fig. 97).

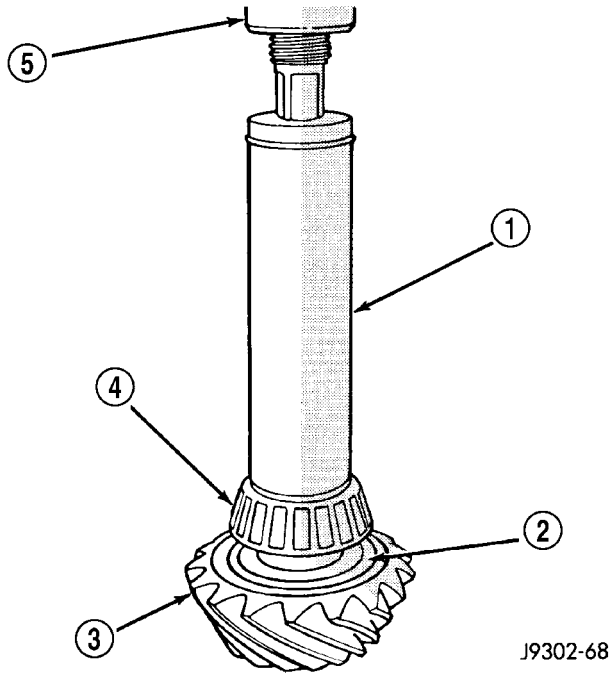

Fig. 97 REAR PINION BEARING

1 - INSTALLER
2 - SHIM
3 - DRIVE PINION GEAR
4 - REAR PINION BEARING
5 - PRESS

(7) Install pinion gear into the housing.

(8) Install yoke with Installer W-162-B, Cup 8109 and Spanner Wrench 6958 (Fig. 98).

(9) Install pinion washer and a **new** nut hold pinion yoke Spanner Wrench 6958 (Fig. 99) and tighten nut to 217-271 N·m (160-200 ft. lbs.).

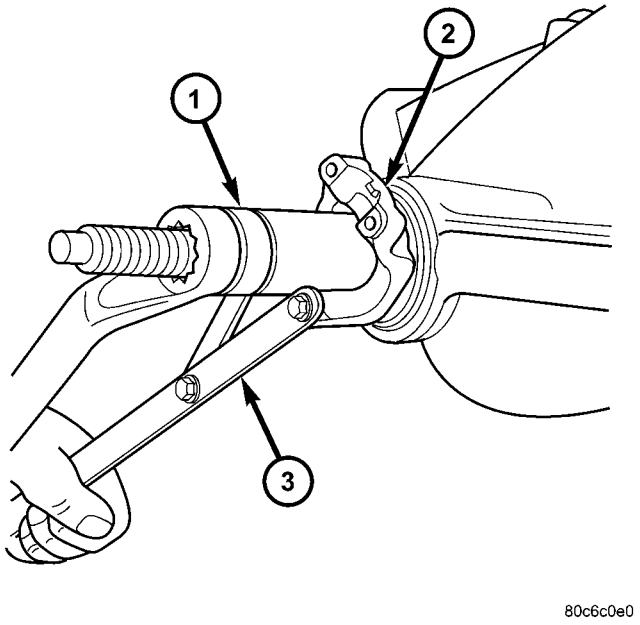

Fig. 98 PINION YOKE INSTALLER

1 - INSTALLER
2 - PINION YOKE
3 - SPANNER WRENCH

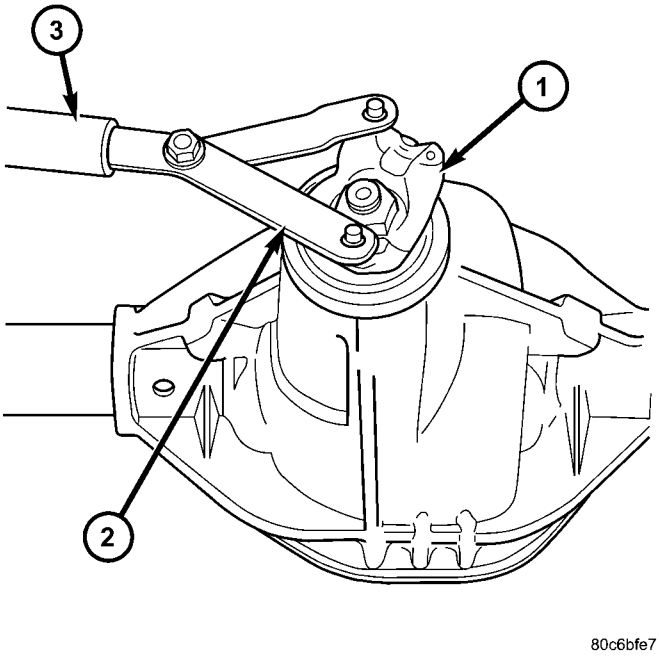

Fig. 99 YOKE SPANNER WRENCH

1 - PINION YOKE
2 - SPANNER WRENCH
3 - PIPE