DISC BRAKE CALIPERS (Continued)

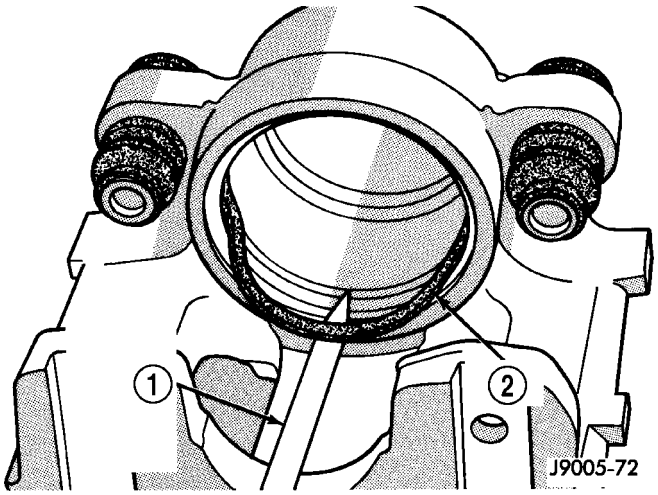


Fig. 15 Piston Seal Removal

1 - REMOVE SEAL WITH WOOD PENCIL OR SIMILAR TOOL
2 - PISTON SEAL

(7) Remove caliper mounting bolt bushings and boots (Fig. 16).

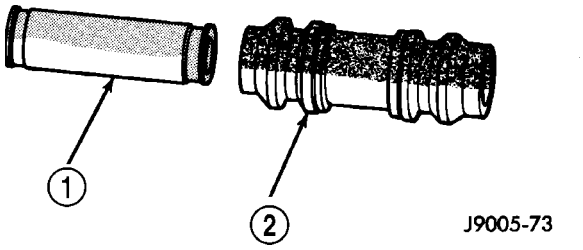


Fig. 16 Mounting Bolt Bushing And Boot

1 - CALIPER SLIDE BUSHING
2 - BOOT

CLEANING

Clean the caliper components with clean brake fluid or brake clean only. Wipe the caliper and piston dry with lint free towels or use low pressure compressed air.

CAUTION: Do not use gasoline, kerosene, paint thinner, or similar solvents. These products may leave a residue that could damage the piston and seal.

INSPECTION

The piston is made from a phenolic resin (plastic material) and should be smooth and clean.

The piston must be replaced if cracked or scored. Do not attempt to restore a scored piston surface by sanding or polishing.

CAUTION: If the caliper piston is replaced, install the same type of piston in the caliper. Never interchange phenolic resin and steel caliper pistons. The pistons, seals, seal grooves, caliper bore and piston tolerances are different.

The bore can be **lightly** polished with a brake hone to remove very minor surface imperfections (Fig. 17). The caliper should be replaced if the bore is severely corroded, rusted, scored, or if polishing would increase bore diameter more than 0.025 mm (0.001 inch).

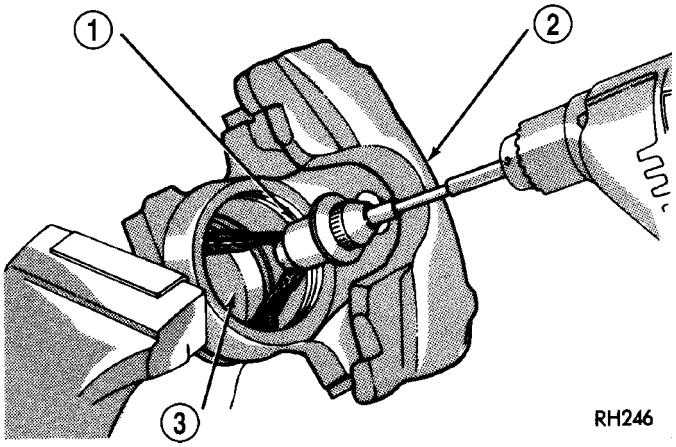


Fig. 17 Polishing Piston Bore

1 - SPECIAL HONE
2 - CALIPER
3 - PISTON BORE

ASSEMBLY

CAUTION: Dirt, oil, and solvents can damage caliper seals. Insure assembly area is clean and dry.

(1) Lubricate caliper piston bore, new piston seal and piston with clean brake fluid.

(2) Lubricate caliper bushings and interior of bushing boots with silicone grease.