DISC BRAKE CALIPERS (Continued)

(3) Install bushing boots in caliper, then insert bushing into boot and push bushing into place (Fig. 18).

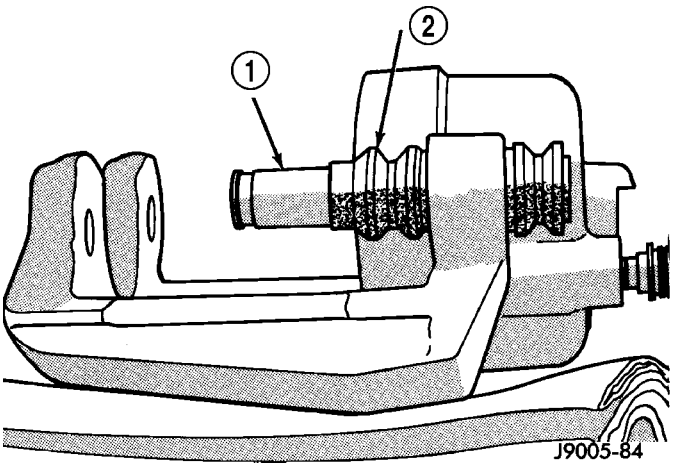


Fig. 18 Bushings And Boots Installation

1 - BUSHING
2 - BOOT

(4) Install new piston seal into seal groove with finger (Fig. 19).

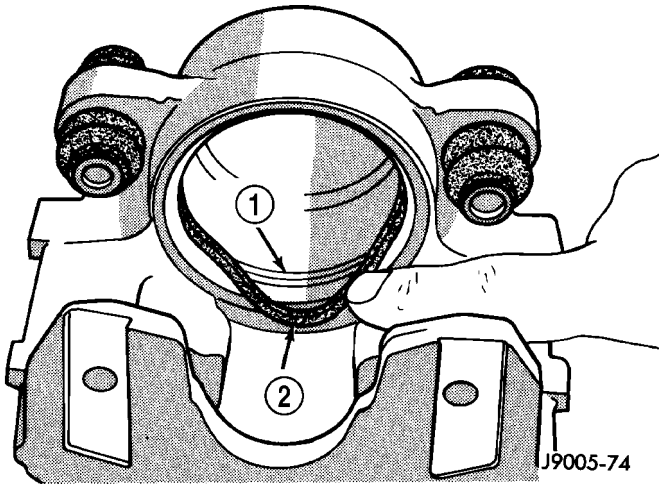


Fig. 19 Piston Seal Installation

1 - SEAL GROOVE
2 - PISTON SEAL

(5) Install new dust boot on caliper piston and seat boot in piston groove (Fig. 20).

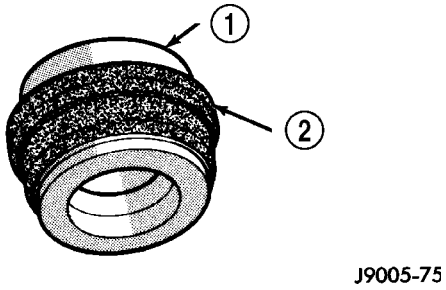


Fig. 20 Dust Boot On Piston

1 - PISTON
2 - DUST BOOT

(6) Press piston into caliper bore by hand, use a turn and push motion to work piston into seal (Fig. 21).

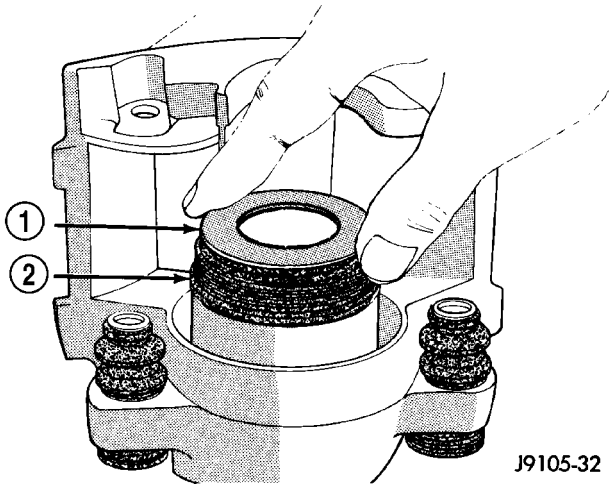


Fig. 21 Caliper Piston Installation

1 - PISTON
2 - BOOT

(7) Press caliper piston to bottom of bore.

(8) Seat dust boot in caliper with Installer Tool C-4842 and Tool Handle C-4171 (Fig. 22).

(9) Replace caliper bleed screw if removed.