MASTER CYLINDER (Continued)

INSTALLATION

NOTE: If master cylinder is replaced, bleed cylinder before installation.

(1) Remove protective sleeve from primary piston shank on new master cylinder.
(2) Check condition of seal at rear of cylinder body. Reposition seal if dislodged. Replace seal if cut, or torn.
(3) Install master cylinder onto brake booster studs and tighten mounting nuts to 17 N·m (13 ft. lbs.).

NOTE: Use only original or factory replacement nuts.

(4) Install combination valve onto brake booster studs and tighten mounting nuts to 20 N·m (15 ft. lbs.).
(5) Install brake lines to master cylinder and combination valve by hand to avoid cross threading.
(6) Tighten master cylinder brake lines to 19 N·m (14 ft. lbs.).
(7) Tighten combination valve brake lines to 19 N·m (14 ft. lbs.).
(8) Install evaporative canister.
(9) Bleed base brake system. (Refer to 5 - BRAKES - STANDARD PROCEDURE).

PEDAL

DESCRIPTION

A suspended-type brake pedal is used, the pedal pivots on a shaft mounted in the pedal support bracket. The bracket is attached to the dash panel.

The brake pedal assembly and pedal pad are the only serviceable component.

OPERATION

The brake pedal is attached to the booster push rod. When the pedal is depressed, the primary booster push rod is depressed which moves the booster secondary rod. The booster secondary rod depresses the master cylinder piston.

REMOVAL

(1) Remove negative battery cable.
(2) Remove brake lamp switch.
(3) Remove ABS controller if equipped.
(4) Remove retainer clip securing booster push rod to pedal (Fig. 46) and clutch rod retainer clip if equipped.
(5) Remove bolts from brake pedal support and booster mounting nuts. Remove mounting stud plate nuts or clutch cylinder mounting nuts if equipped.
(6) Slid brake booster/master cylinder assembly forward.
(7) Remove mounting stud plate or slid clutch cylinder forward if equipped.
(8) Tilt the pedal support down to gain shaft clearance.
(9) Remove pedal shaft C–clip from passenger side of the shaft.
(10) Slide the pedal shaft toward the drivers side and remove the remaining C-clip.
(11) Slid the shaft out of the pedal bracket and remove the pedal.
(12) Remove pedal bushings if they are to be replaced.

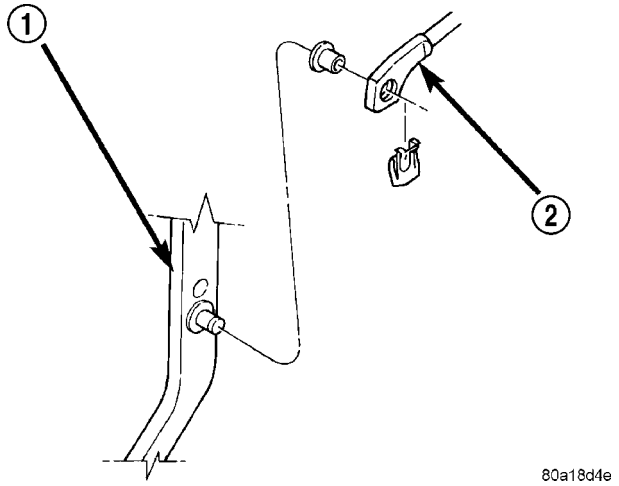

Fig. 46 Push Rod Attachment

1 - BRAKE PEDAL
2 - BOOSTER ROD

INSTALLATION

(1) Install new bushings in pedal. Lubricate bushings and shaft with multi-purpose grease.
(2) Position pedal in bracket and install shaft.
(3) Install new pivot pin C-clip.
(4) Position pedal support and install support bolts and tighten to 28 N·m (21 ft. lbs.).
(5) Slid the booster/master cylinder assembly into place, install mounting nuts and tighten to 39 N·m (29 ft. lbs.).
(6) Install stud plate or clutch cylinder if equipped and tighten mounting nut to 28 N·m (21 ft. lbs.).

Install retainer clip securing booster push rod to pedal (Fig. 46) and clutch rod retainer clip if equipped.

(7) Install ABS controller if equipped.
(8) Install and connect brake lamp switch.
(9) Install negative battery cable.