WHEEL CYLINDERS (Continued)

(2) Install first piston in cylinder bore. Then install first cup in bore and against piston. **Be sure lip of piston cup is facing inward (toward spring and expander) and flat side is against piston.**

(3) Install spring and expander followed by remaining piston cup and piston.

(4) Install boots on each end of cylinder and insert push rods in boots.

(5) Install cylinder bleed screw.

INSTALLATION

(1) Apply bead of silicone sealer around cylinder mounting surface of support plate.

(2) Install cylinder mounting bolts and tighten to 10 N·m (7 ft. lbs.).

(3) Install brake line to cylinder and tighten to 16 N·m (12 ft. lbs.).

(4) Install brake shoe return spring.

(5) Install brake drum.

(6) Install wheel and tire assembly. (Refer to 22 - TIRES/WHEELS/WHEELS - STANDARD PROCEDURE).

(7) Bleed base brake system. (Refer to 5 - BRAKES - STANDARD PROCEDURE).

SUPPORT PLATE

REMOVAL

(1) Remove wheel and tire assembly.

(2) Remove the disc brake caliper (Refer to 5 - BRAKES/HYDRAULIC/MECHANICAL/DISC BRAKE CALIPERS - REMOVAL).

(3) Remove the rotor (Fig. 58), (Refer to 5 - BRAKES/HYDRAULIC/MECHANICAL/ROTORS - REMOVAL).

(4) Remove the axle shaft (Fig. 59), (Refer to 3 - DIFFERENTIAL & DRIVELINE/REAR AXLE - AXLE SHAFTS - REMOVAL).

(5) Remove the park brake shoes (Fig. 59), (Refer to 5 - BRAKES/PARKING BRAKE/SHOES - REMOVAL).

(6) Remove the parking brake cable from the brake lever.

(7) Remove the bolts attaching the support plate to the axle and remove the support plate.

INSTALLATION

(1) Install support plate on axle flange. Tighten attaching bolts to 115 N·m (85 ft. lbs.).

(2) Install the park brake shoes (Fig. 59), (Refer to 5 - BRAKES/PARKING BRAKE/SHOES - INSTALLATION).

(3) Install parking brake cable in the brake lever.

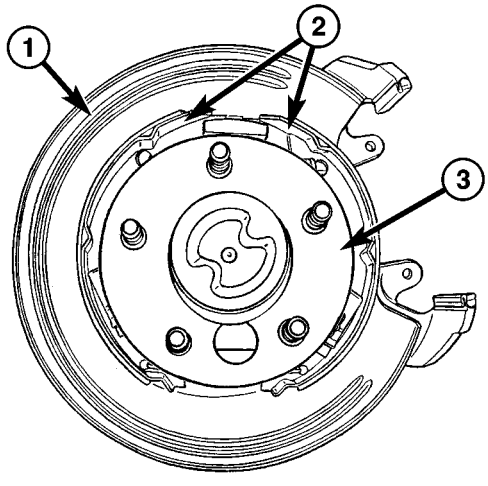

Fig. 58 PARK BRAKE SHOES INSTALLED

1 - SUPPORT PLATE
2 - PARK BRAKE SHOES
3 - AXLE

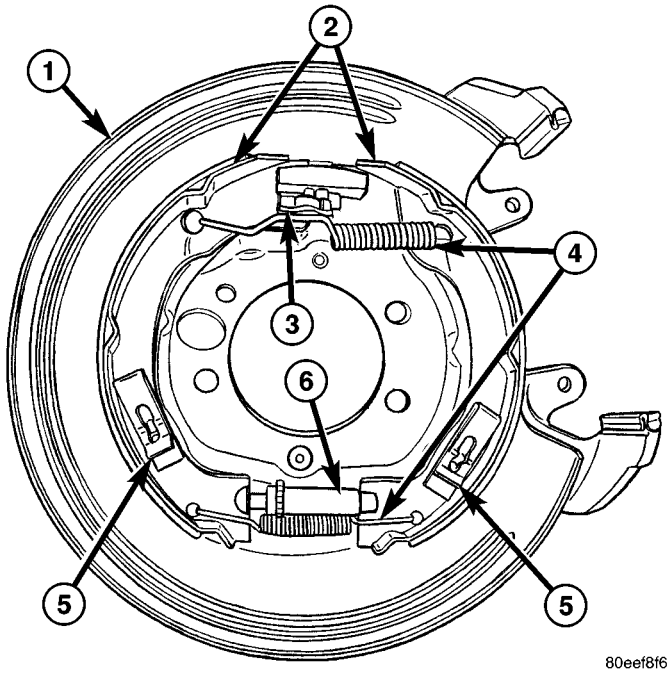

Fig. 59 BRAKE SHOES

1 - SUPPORT PLATE
2 - PARK BRAKE SHOES
3 - EQUALIZER
4 - SPRINGS
5 - HOLD DOWN CLIPS
6 - ADJUSTER

(4) Install axle shaft, (Fig. 58), (Refer to 3 - DIFFERENTIAL & DRIVELINE/REAR AXLE - AXLE SHAFTS - INSTALLATION).

(5) Adjust brake shoes to drum with brake gauge (Refer to 5 - BRAKES/PARKING BRAKE/SHOES - ADJUSTMENTS).