SHOES (Continued)

(1) Raise vehicle.
(2) Remove tire and wheel.
(3) Remove disc brake caliper from caliper adapter (Refer to 5 - BRAKES/HYDRAULIC/MECHANICAL/ DISC BRAKE CALIPERS - REMOVAL).
(4) Remove rotor from the axleshaft (Refer to 5 - BRAKES/HYDRAULIC/MECHANICAL/ROTORS - REMOVAL).

NOTE: When measuring the brake drum diameter, the diameter should be measured in the center of the area in which the park brake shoes contact the surface of the brake drum.

(5) Using Brake Shoe Gauge, Special Tool C-3919, or equivalent, **accurately** measure the inside diameter of the park brake drum portion of the rotor (Fig. 65).

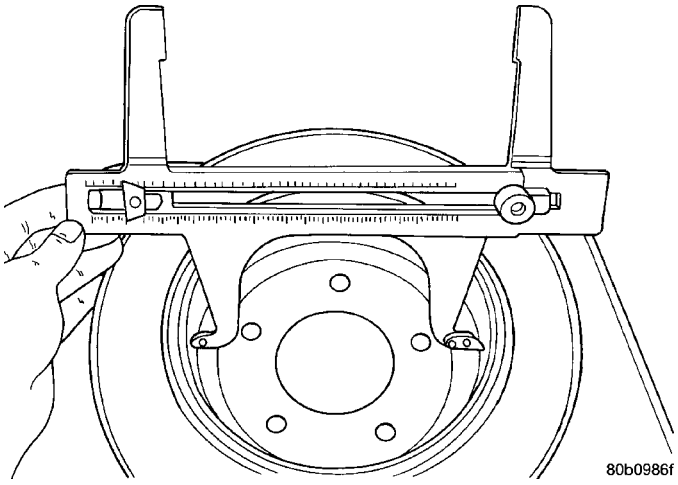

Fig. 65 MEASURING PARK BRAKE DRUM DIAMETER

(6) Using a ruler that reads in 64th of an inch, accurately read the measurement of the inside diameter of the park brake drum from the special tool (Fig. 66).
(7) Reduce the inside diameter measurement of the brake drum that was taken using Special Tool C-3919 by 1/64 of an inch. Reset Gauge, Brake Shoe, Special Tool C-3919 or the equivalent used, so that the outside measurement jaws are set to the reduced measurement (Fig. 67).
(8) Place Gauge, Brake Shoe, Special Tool C-3919, or equivalent over the park brake shoes. The special tool must be located diagonally across at the top of one shoe and bottom of opposite shoe (widest point) of the park brake shoes.
(9) Using the star wheel adjuster, adjust the park brake shoes until the lining on the park brake shoes just touches the jaws on the special tool.
(10) Repeat step 8 above and measure shoes in both directions.

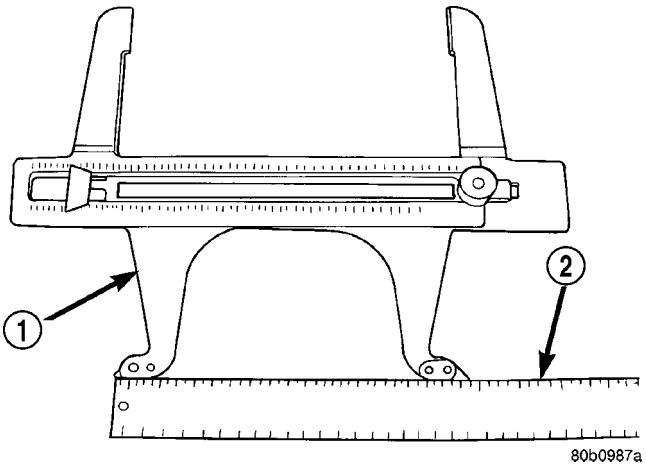

Fig. 66 READING PARK BRAKE DRUM DIAMETER

1 - SPECIAL TOOL C-3919
2 - RULER

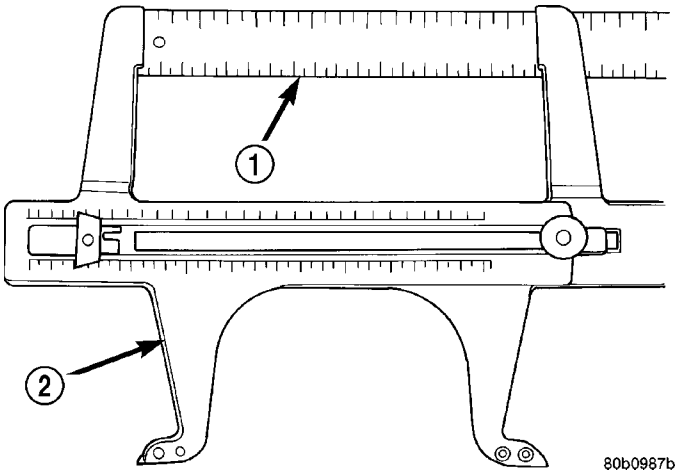

Fig. 67 SETTING GAUGE TO PARK BRAKE SHOE MEASUREMENT

1 - RULER
2 - SPECIAL TOOL C-3919

(11) Install brake rotor on the axleshaft (Refer to 5 - BRAKES/HYDRAULIC/MECHANICAL/ROTORS - INSTALLATION).
(12) Rotate rotor to verify that the park brake shoes are not dragging on the brake drum. If park brake shoes are dragging, remove rotor and back off star wheel adjuster one notch and recheck for brake shoe drag against drum. Continue with the previous step until brake shoes are not dragging on brake drum.
(13) Install disc brake caliper on caliper adapter (Refer to 5 - BRAKES/HYDRAULIC/MECHANICAL/ DISC BRAKE CALIPERS - INSTALLATION).
(14) Install wheel and tire.
(15) Tighten the wheel mounting nuts in the proper sequence until all nuts are torqued to half the specified torque. Then repeat the tightening sequence to the full specified torque of 129 N·m (95 ft. lbs.).
(16) Lower vehicle.