FRONT WHEEL SPEED SENSOR (Continued)

(3) Position sensor on steering knuckle. Seat sensor locating tab in hole in knuckle and install sensor attaching bolt finger tight.

(4) Tighten sensor attaching bolt to 4-6 N·m (34-50 in. lbs.).

(5) If original sensor has been installed, check sensor air gap. Air gap should be 0.40 to 1.3 mm (0.0157 to 0.051 in.). If gap is incorrect, sensor is either loose, or damaged.

(6) Route sensor wire and install into mounting retainers.

(7) Connect sensor wire to harness.

G-SWITCH

DESCRIPTION

The G-switch is located in front of the console/shifter mounted to a bracket on the floor pan. The switch has directional arrow and must be mounted with the arrow pointing towards the front of the vehicle.

OPERATION

The switch (Fig. 3) , provides an additional vehicle deceleration reference during 4-wheel drive operation. The switch is monitored by the CAB at all times. The switch reference signal is utilized by the CAB when all wheels are decelerating at the same speed.

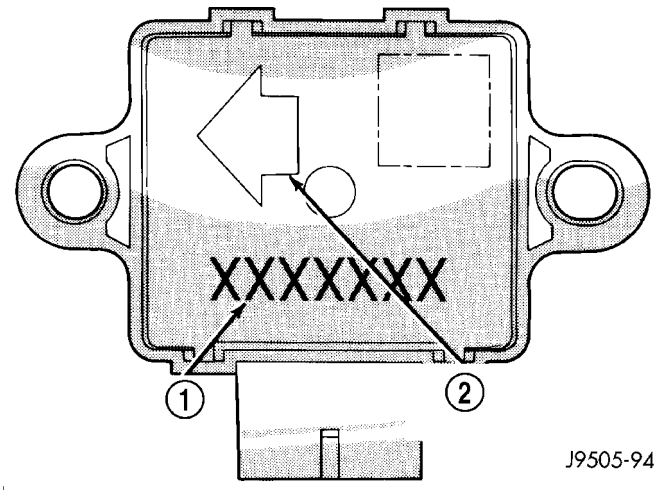

Fig. 3 G-Switch

1 - SWITCH PART NUMBER
2 - ARROW INDICATES FRONT OF SWITCH FOR PROPER MOUNTING

REMOVAL

(1) From the drivers side lift carpet back in front of the console/shifter.

(2) Disconnect harness for switch.

(3) Remove mounting bolts and remove switch (Fig. 4).

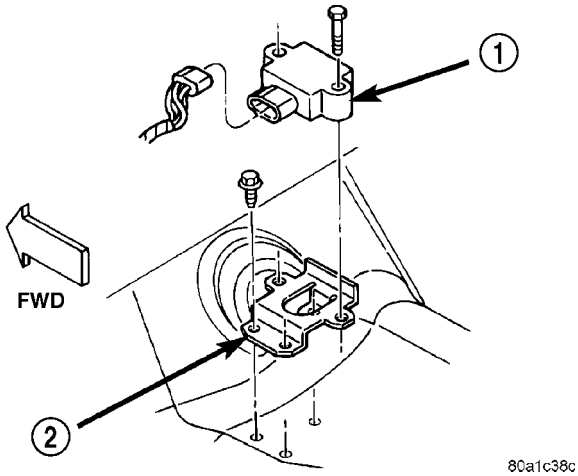

Fig. 4 G-Switch

1 - ACCELERATION SWITCH
2 - MOUNTING BRACKET

INSTALLATION

CAUTION: The mercury switch (inside the G-switch), will not function properly if the switch is installed incorrectly. Verify that the switch locating arrow is pointing to the front of the vehicle (Fig. 3).

(1) Position switch on mounting bracket.

(2) Install mounting bolts and tighten to 4-5 N·m (35-45 in. lbs.)

(3) Connect harness to switch.

(4) Place carpet back into position.

REAR WHEEL SPEED SENSOR

DESCRIPTION

A speed sensor is used at each wheel. The front sensors are mounted to the steering knuckles. The rear sensors are mounted to the rear brake backing plate.

OPERATION

The sensors convert wheel speed into a small AC electrical signal. This signal is transmitted to the CAB. The CAB convert the AC signal into a digital signal for each wheel. This voltage is generated by magnetic induction when a tone wheel passes by the stationary magnetic of the wheel speed sensor.

A gear type tone ring serves as the trigger mechanism for each sensor. The tone rings are mounted at the outboard ends of the front and rear axle shafts.

Different sensors are used at the front and rear wheels (Fig. 1). The front/rear sensors have the same electrical values but are not interchangeable. The