REAR WHEEL SPEED SENSOR (Continued)

sensors have a resistance between 900 and 1300 ohms.

REMOVAL

(1) Disconnect sensors at rear harness connectors.
(2) Remove wheel and tire assembly.
(3) Remove brake drum.
(4) Remove clips securing sensor wires to brake lines, rear axle and, brake hose.
(5) Unseat sensor wire support plate grommet.
(6) Remove bolt attaching sensor to bracket (Fig. 5) and remove sensor.

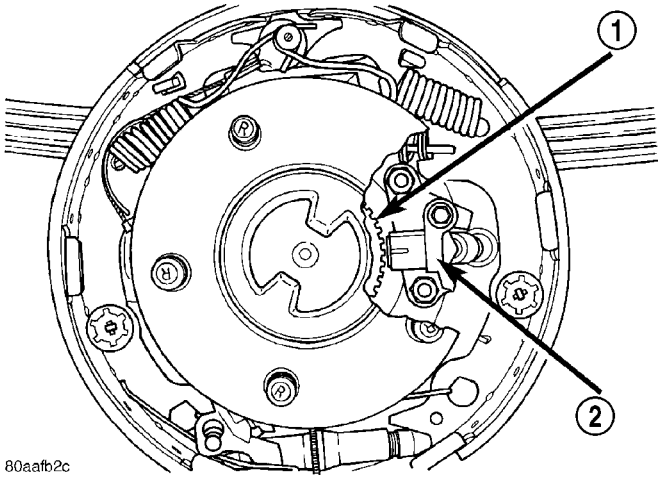

Fig. 5 Wheel Speed Sensor

1 - TONE WHEEL
2 - WHEEL SPEED SENSOR

INSTALLATION

(1) If **original sensor** is being installed, remove any remaining pieces of cardboard spacer from sensor pickup face. Use dry shop towel only to remove old spacer material.
(2) Insert sensor wire through support plate hole. Then seat sensor grommet in support plate.
(3) Apply Mopar Lock N' Seal or Loctite ® 242 to original sensor bolt. Use new bolt if original is worn or damaged.
(4) Install sensor bolt finger tight only at this time.
(5) If **original** rear sensor was installed, adjust sensor air gap to 0.28-1.5 mm (0.011-0.059 in.). Use feeler gauge to measure air gap (Fig. 6). Tighten sensor bolt to 12-14 N·m (106-124 in. lbs.).
(6) If **new** sensor was installed, push cardboard spacer on sensor face against tone ring (Fig. 7). Then tighten sensor bolt to 12-14 N·m (106-124 in. lbs.). Correct air gap will be established as tone ring rotates and peels spacer off sensor face.
(7) Secure the rear sensor wires to the retainer clips. Verify that wire is clear of rotating components.
(8) Connect sensor wire to harness connector.

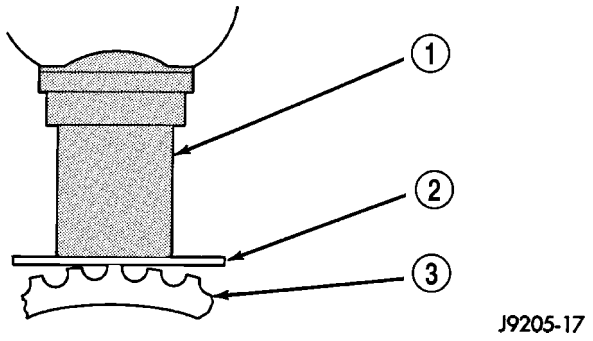

Fig. 6 Setting Air Gap On Original Rear Sensor

1 - WHEEL SPEED SENSOR
2 - BRASS FEELER GAUGE
3 - TONE RING

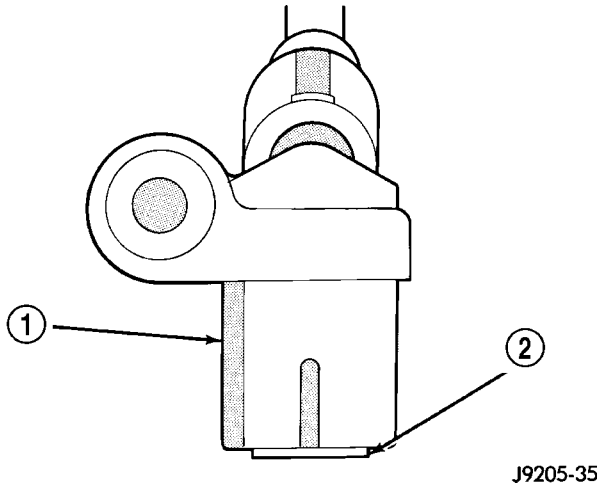

Fig. 7 New Rear Sensor

1 - REAR SENSOR
2 - AIR GAP SPACER ATTACHED TO SENSOR FACE

(9) Install brake drum and wheel and tire assembly. (Refer to 22 - TIRES/WHEELS/WHEELS - STANDARD PROCEDURE).
(10) Lower vehicle.
(11) Connect sensor wire to harness connector.

HCU (HYDRAULIC CONTROL UNIT)

DESCRIPTION

The HCU consists of a valve body, pump motor, and wire harness.

OPERATION

Accumulators in the valve body store extra fluid released to the system for ABS mode operation. The pump provides the fluid volume needed and is operated by a DC type motor. The motor is controlled by the CAB.