CLUTCH DISC

REMOVAL

(1) Remove transmission.
(2) Mark position of pressure plate on flywheel for installation reference, if original pressure plate will be reused.
(3) Remove pressure plate bolts and remove cover and disc (Fig. 1).

CAUTION: If original pressure plate will be reused, loosen cover bolts evenly in rotation to relieve spring tension equally. Failure to heed caution may result in damage.

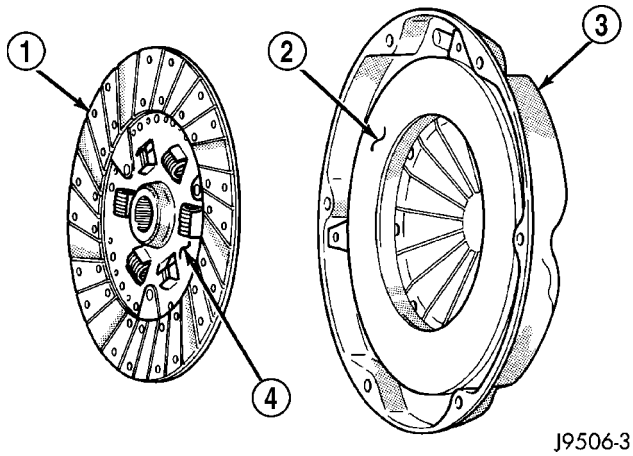

Fig. 1 CLUTCH DISC AND PRESSURE PLATE

1 - DISC
2 - PRESSURE PLATE
3 - PRESSURE PLATE COVER
4 - "FLYWHEEL SIDE" STAMPED ON THIS SURFACE

INSTALLATION

(1) Lightly sand flywheel face with 180 grit emery cloth. Then clean surface with a wax and grease remover.
(2) Lubricate pilot bearing with Mopar high temperature bearing grease.
(3) Position clutch disc on flywheel with side marked flywheel positioned against flywheel.

NOTE: If disc is not marked, flat side of disc hub goes towards the flywheel.

(4) Insert alignment tool through disc and into the pilot bearing on the flywheel (Fig. 2).
(5) Position pressure plate over disc and on flywheel (Fig. 2).

NOTE: Align reference marks if pressure plate is reused.

(6) Install clutch cover bolts finger tight.

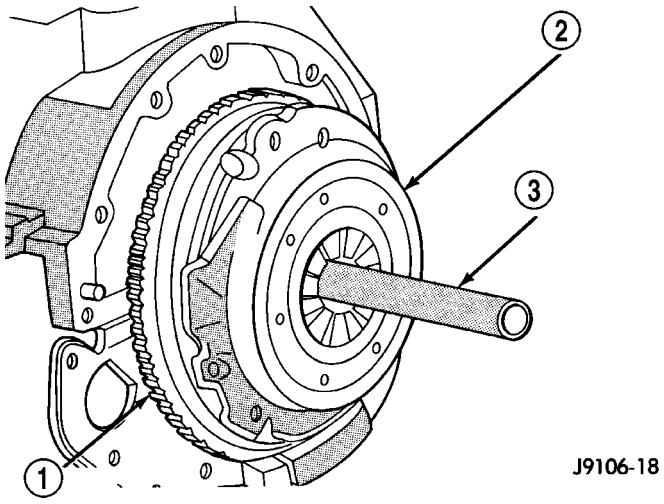

Fig. 2 ALIGNING CLUTCH DISC

1 - FLYWHEEL
2 - PRESSURE PLATE AND DISC
3 - ALIGNMENT TOOL

(7) Tighten cover bolts evenly and in rotation a few threads at a time. Tightening bolts to:
- 2.5L Engine - 31 N·m (23 ft. lbs.)
- 4.0L Engine - 50 N·m (37 ft. lbs.)

CAUTION: Cover bolts must be tightened evenly and to specified torque. Failure to heed caution may result in damage.

(8) Lightly coat clutch disc hub and transmission input shaft splines with Mopar high temperature bearing grease or equivalent.

CAUTION: Over lubricating shaft splines will result in grease contamination of disc. Failure to heed caution may result in damage.

(9) Install transmission.

CLUTCH RELEASE BEARING

REMOVAL

(1) Remove transmission.
(2) Disconnect release bearing from release lever and remove bearing (Fig. 3).
(3) Inspect bearing slide surface of transmission front bearing retainer. Replace retainer if slide surface is scored, worn or cracked.
(4) Inspect release fork and fork pivot. Verify pivot is secure and in good condition, fork is not distorted or worn and retainer spring is not bent or damaged.

INSTALLATION

(1) Lubricate crankshaft pilot bearing, input shaft splines, bearing retainer slide surface, fork pivot and