BELT TENSIONERS (Continued)

REMOVAL

REMOVAL - 2.4L ENGINE

NOTE: The belt routing schematics are published from the latest information available at the time of publication. If anything differs between these schematics and the Belt Routing Label, use the schematics on Belt Routing Label. This label is located in the engine compartment.

CAUTION: DO NOT LET TENSIONER ARM SNAP BACK TO THE FREEARM POSITION, SEVERE DAMAGE MAY OCCUR TO THE TENSIONER.

Belt tension is not adjustable. Belt adjustment is maintained by an automatic (spring load) belt tensioner.

(1) Disconnect negative battery cable from battery.

(2) Rotate belt tensioner until it contacts its stop. Remove belt, then slowly rotate the tensioner into the freearm position.

REMOVAL

On 4.0L engines, the tensioner arm has three marks. Upon installation of a new belt, the double line marks close to each other should be very close to the mark on the base. The belt should be replaced if the single line mark lines up with the mark on the base.

If the above specification cannot be met, check for:

- The wrong belt being installed (incorrect length/ width)
- Worn bearings on an engine accessory (A/C compressor, power steering pump, water pump, idler pulley or generator)
- A pulley on an engine accessory being loose
- Misalignment of an engine accessory
- Belt incorrectly routed.

NOTE: A used belt should be replaced if tensioner indexing arrow has moved to the minimum travel indicator. Tensioner travel stops at this point.

(1) Remove accessory drive belt (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - REMOVAL).

(2) Remove tensioner assembly from mounting bracket (Fig. 2).

WARNING: BECAUSE OF HIGH SPRING TENSION, DO NOT ATTEMPT TO DISASSEMBLE AUTOMATIC TENSIONER. UNIT IS SERVICED AS AN ASSEMBLY.

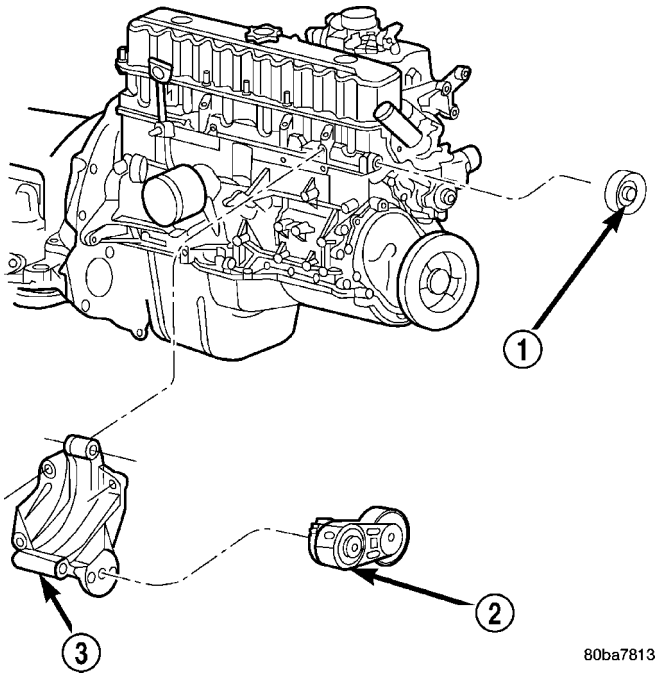

Fig. 2 Automatic Belt Tensioner - 4.0L Engine

1 - IDLER PULLEY TIGHTEN TO 47 N·m (35 FT. LBS.)
2 - AUTOMATIC BELT TENSIONER
3 - GENERATOR MOUNTING BRACKET

INSTALLATION

INSTALLATION - 2.4L ENGINE

NOTE: The belt routing schematics are published from the latest information available at the time of publication. If anything differs between these schematics and the Belt Routing Label, use the schematics on Belt Routing Label. This label is located in the engine compartment.

Belt tension is not adjustable. Belt adjustment is maintained by an automatic (spring load) belt tensioner.

(1) Check condition of all pulleys.

CAUTION: When installing the serpentine accessory drive belt, the belt MUST be routed correctly. If not, the engine may overheat due to the water pump rotating in the wrong direction.

(2) Install new belt (Fig. 3) or (Fig. 4). Route the belt around all pulleys except the idler pulley. Rotate the tensioner arm until it contacts its stop position. Route the belt around the idler and slowly let the tensioner rotate into the belt. Make sure the belt is seated onto all pulleys.

(3) With the drive belt installed, inspect the belt wear indicator. On 2.4L Engines the gap between the tang and the housing stop (measurement A) must not exceed 24 mm (.94 inches).