BELT TENSIONERS (Continued)

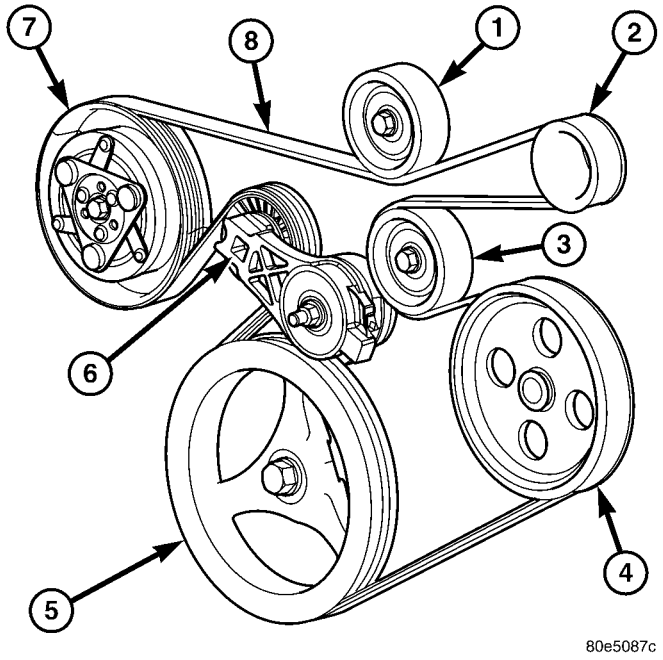

Fig. 3 Belt Routing 2.4L With A/C

1 - IDLER PULLEY
2 - GENERATOR PULLEY
3 - IDLER PULLEY
4 - POWER STEERING PUMP PULLEY
5 -CRANKSHAFT PULLEY
6 - TENSIONER
7 - A/C COMPRESSOR PULLEY
8 - ACCESSORY DRIVE BELT

INSTALLATION

(1) Install tensioner assembly to mounting bracket, align the two dowels on the tensioner with the mounting bracket and hand start the bolt. Tighten bolt to 28 N·m (250 in. lbs.).

(2) Install accessory drive belt (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - INSTALLATION).

(3) Check belt indexing marks.

DRIVE BELTS - 2.4L

DIAGNOSIS AND TESTING - ACCESSORY DRIVE BELT

VISUAL DIAGNOSIS

When diagnosing serpentine accessory drive belts, small cracks that run across the ribbed surface of the belt from rib to rib (Fig. 5), are considered normal. These are not a reason to replace the belt. However, cracks running along a rib (not across) are **not** normal. Any belt with cracks running along a rib must be replaced (Fig. 5). Also replace the belt if it has excessive wear, frayed cords or severe glazing.

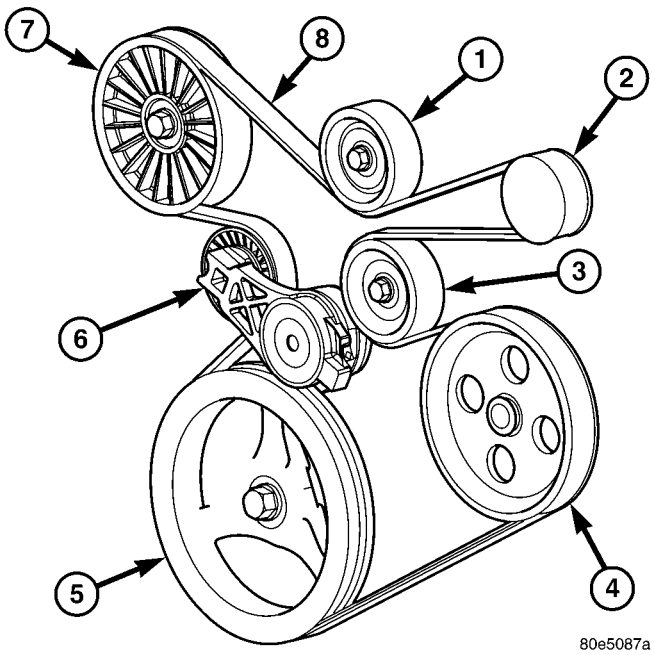

Fig. 4 Belt Routing 2.4L Without A/C

1 - IDLER PULLEY
2 - GENERATOR PULLEY
3 - IDLER PULLEY
4 - POWER STEERING PUMP PULLEY
5 -CRANKSHAFT PULLEY
6 - TENSIONER
7 - NON A/C IDLER PULLEY
8 - ACCESSORY DRIVE BELT

Refer to the ACCESSORY DRIVE BELT DIAGNOSIS CHART for further belt diagnosis.

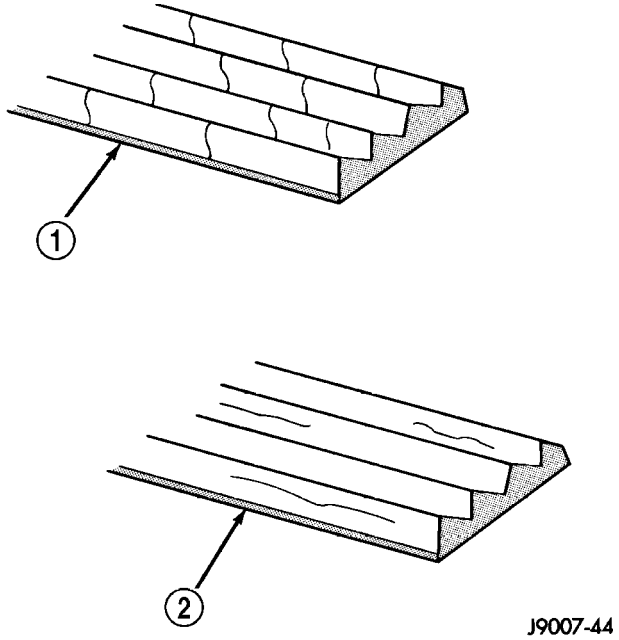

Fig. 5 Belt Wear Patterns

1 - NORMAL CRACKS BELT OK
2 - NOT NORMAL CRACKS REPLACE BELT