DRIVE BELTS - 2.4L (Continued)

REMOVAL

REMOVAL

NOTE: The belt routing schematics are published from the latest information available at the time of publication. If anything differs between these schematics and the Belt Routing Label, use the schematics on Belt Routing Label. This label is located in the engine compartment.

CAUTION: DO NOT LET TENSIONER ARM SNAP BACK TO THE FREEARM POSITION, SEVERE DAMAGE MAY OCCUR TO THE TENSIONER.

Belt tension is not adjustable. Belt adjustment is maintained by an automatic (spring load) belt tensioner.

(1) Disconnect negative battery cable from battery.

(2) Rotate belt tensioner until it contacts its stop. Remove belt, then slowly rotate the tensioner into the freearm position.

REMOVAL

NOTE: The belt routing schematics are published from the latest information available at the time of publication. If anything differs between these schematics and the Belt Routing Label, use the schematics on Belt Routing Label. This label is located in the engine compartment.

CAUTION: DO NOT LET TENSIONER ARM SNAP BACK TO THE FREEARM POSITION, SEVERE DAMAGE MAY OCCUR TO THE TENSIONER.

Belt tension is not adjustable. Belt adjustment is maintained by an automatic (spring load) belt tensioner.

(1) Disconnect negative battery cable from battery.

(2) Rotate belt tensioner until it contacts its stop. Remove belt, then slowly rotate the tensioner into the freearm position. (Fig. 6) or (Fig. 7).

INSTALLATION

INSTALLATION

NOTE: The belt routing schematics are published from the latest information available at the time of publication. If anything differs between these schematics and the Belt Routing Label, use the schematics on Belt Routing Label. This label is located in the engine compartment.

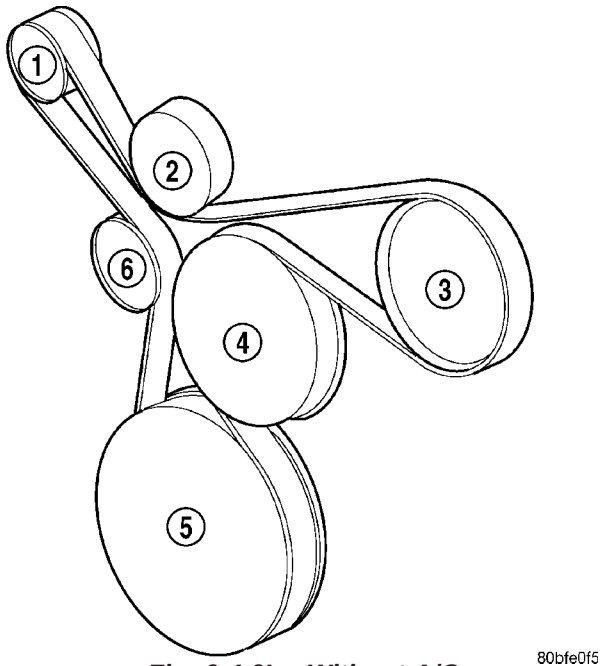

Fig. 6 4.0L - Without A/C

1 - GENERATOR PULLEY
2 - IDLER PULLEY
3 - POWER STEERING PUMP PULLEY
4 - WATER PUMP PULLEY
5 - CRANKSHAFT PULLEY
6 - TENSIONER PULLEY

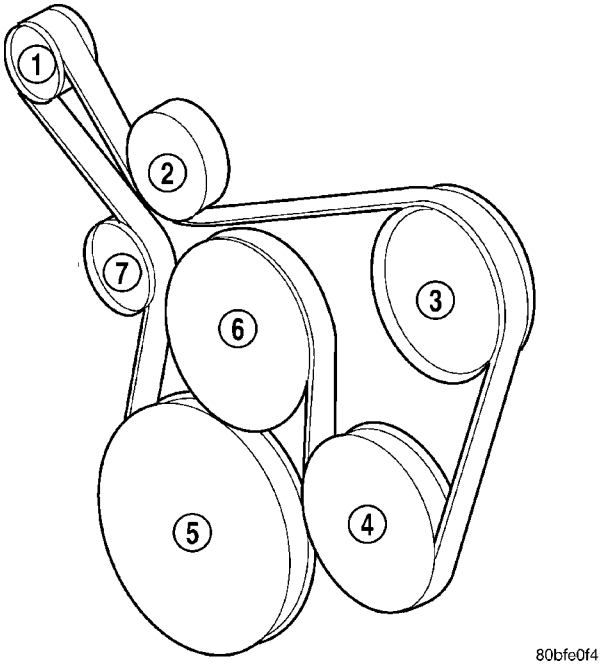

Fig. 7 4.0L Engines - With A/C

1 - GENERATOR PULLEY
2 - IDLER PULLEY
3 - POWER STEERING PUMP PULLEY
4 - AIR CONDITIONING COMPRESSOR PULLEY
5 - CRANKSHAFT PULLEY
6 - WATER PUMP PULLEY
7 - TENSIONER PULLEY