ENGINE COOLANT THERMOSTAT (Continued)

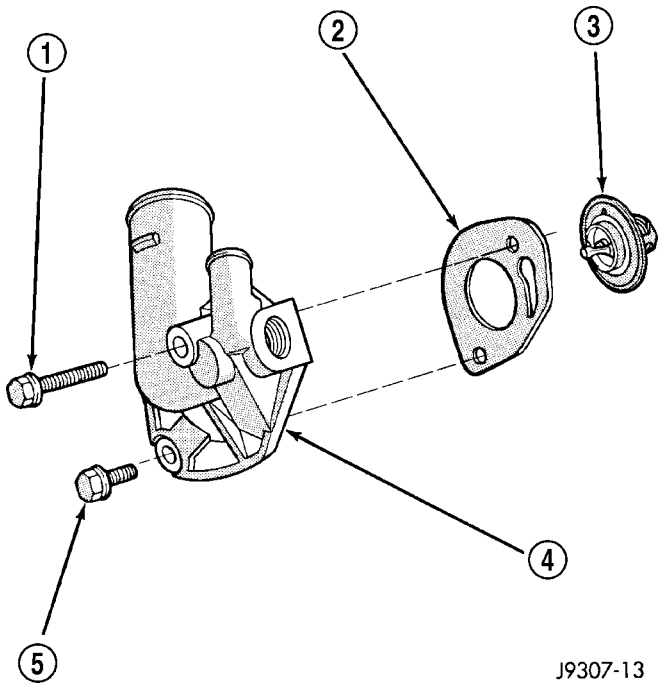

Fig. 9 Thermostat Removal/Installation

1 - LONG BOLT
2 - GASKET
3 - THERMOSTAT
4 - THERMOSTAT HOUSING
5 - SHORT BOLT

REMOVAL

(1) Drain cooling system below thermostat housing level.
(2) Disconnect engine coolant temperature sensor.
(3) Disconnect heater supply hose.
(4) Remove housing attaching bolts (Fig. 10).
(5) Remove housing, gasket and thermostat (Fig. 10).

INSTALLATION

INSTALLATION

(1) Install the replacement thermostat so that the pellet, which is encircled by a coil spring, faces the engine. All thermostats are marked on the outer flange to indicate the proper installed position.
(2) Observe the recess groove in the engine cylinder head (Fig. 11).
(3) Position thermostat into this groove with arrow and air bleed hole on outer flange pointing up.
(4) Install replacement gasket and thermostat housing.

CAUTION: Tightening the thermostat housing unevenly or with the thermostat out of its recess may result in a cracked housing.

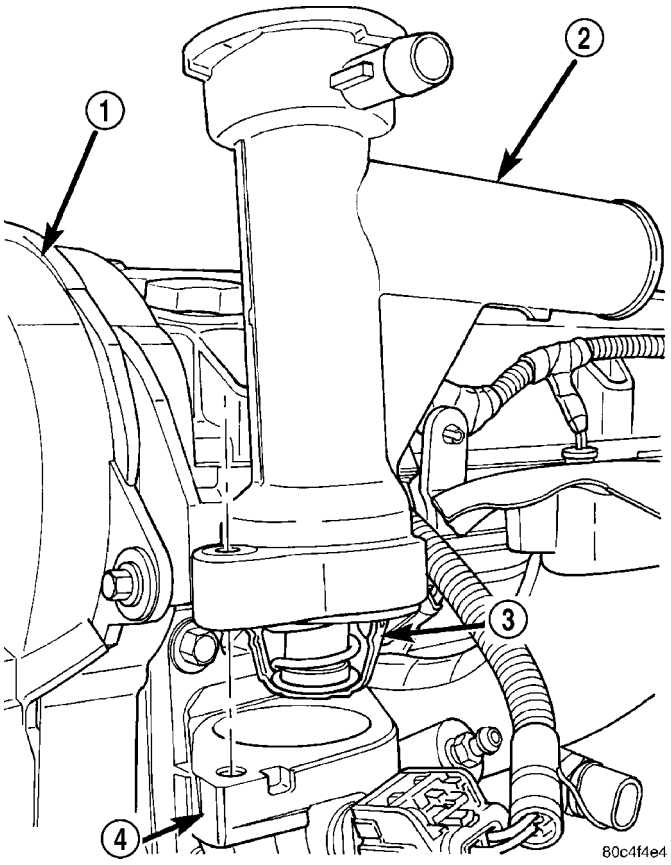

Fig. 10 Thermostat and Coolant Outlet Connector

1 - TIMING BELT COVER
2 - OUTLET CONNECTOR
3 - THERMOSTAT
4 - HOUSING

(5) Tighten the housing bolts to 20 N·m (15 ft. lbs.) torque.
(6) Install hoses to thermostat housing.
(7) Install electrical connector to coolant temperature sensor.
(8) Be sure that the radiator draincock is tightly closed. Fill the cooling system (Refer to 7 - COOLING - STANDARD PROCEDURE).
(9) Start and warm the engine. Check for leaks.

INSTALLATION

(1) Clean all gasket sealing surfaces.
(2) Place a new gasket (dipped in clean water) on the coolant outlet connector surface. Position thermostat with air bleed at 12 o'clock position in thermostat housing (Fig. 12).
(3) Position the coolant outlet connector and gasket over the thermostat, making sure thermostat is seated in the thermostat housing.
(4) Position outlet connector to thermostat housing and install bolts. Tighten bolts to 28 N·m (20 ft. lbs.).
(5) Install radiator hose to coolant outlet housing.
(6) Connect engine coolant temperature sensor.