FAN DRIVE VISCOUS CLUTCH (Continued)

CAUTION: When installing a serpentine accessory drive belt, the belt MUST be routed correctly. If not, the engine may overheat due to the water pump rotating in the wrong direction.

(3) Install accessory drive belt (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - INSTALLATION).

RADIATOR

DESCRIPTION

CAUTION: Plastic tanks, while stronger than brass, are subject to damage by impact, such as wrenches, mishandling, etc.

A heavy duty down-flow aluminum/plastic radiator is used (Fig. 18). The radiator consists of an aluminum core and plastic end tanks, which are fastened to the core with clinch tabs and sealed with a high temperature rubber gasket. On automatic transmission equipped vehicles, the lower tank contains a concentric-tube transmission oil cooler.

If the plastic tank has been damaged, individual parts are not available, and the radiator must be replaced.

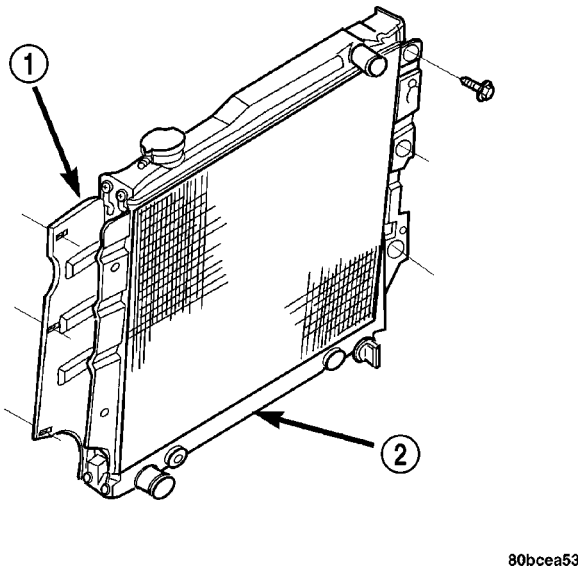

Fig. 18 Downflow Radiator - Typical

1 - DOWNFLOW RADIATOR
2 - INTEGRAL TRANSMISSION OIL COOLER (INTERNAL TO RADIATOR)

OPERATION

As air passes through the radiator core, the heat within the coolant is dissipated into the ambient air.

DIAGNOSIS AND TESTING - RADIATOR COOLANT FLOW

The following procedure will determine if coolant is flowing through the cooling system.

If engine is cold, idle engine until normal operating temperature is reached. Then feel the upper radiator hose. If hose is hot, the thermostat is open and water is circulating through cooling system.

REMOVAL

WARNING: DO NOT REMOVE THE CYLINDER BLOCK DRAIN PLUGS OR LOOSEN THE RADIATOR DRAINCOCK WITH THE SYSTEM HOT AND PRESSURIZED. SERIOUS BURNS FROM THE COOLANT CAN OCCUR.

Do not waste reusable coolant. If the solution is clean, drain the coolant into a clean container for reuse.

WARNING: CONSTANT TENSION HOSE CLAMPS ARE USED ON MOST COOLING SYSTEM HOSES. WHEN REMOVING OR INSTALLING, USE ONLY TOOLS DESIGNED FOR SERVICING THIS TYPE OF CLAMP, SUCH AS SPECIAL CLAMP TOOL NUMBER 6094 (Fig. 19). ALWAYS WEAR SAFETY GLASSES WHEN SERVICING CONSTANT TENSION CLAMPS.

CAUTION: A number or letter is stamped into the tongue of constant tension clamps (Fig. 20). If replacement is necessary, use only an original equipment clamp with matching number or letter.

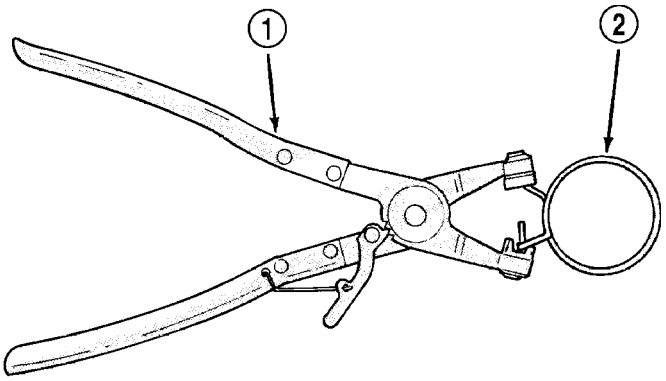

Fig. 19 Hose Clamp Tool - Typical

1 - HOSE CLAMP TOOL 6094
2 - HOSE CLAMP