RADIATOR (Continued)

**CAUTION: When removing the radiator or A/C condenser for any reason, note the location of all radiator-to-body and radiator-to-A/C condenser rubber air seals (Fig. 21). These are used at the top, bottom and sides of the radiator and A/C condenser. To prevent overheating, these seals must be installed to their original positions.**

(1) Disconnect negative battery cable at battery.

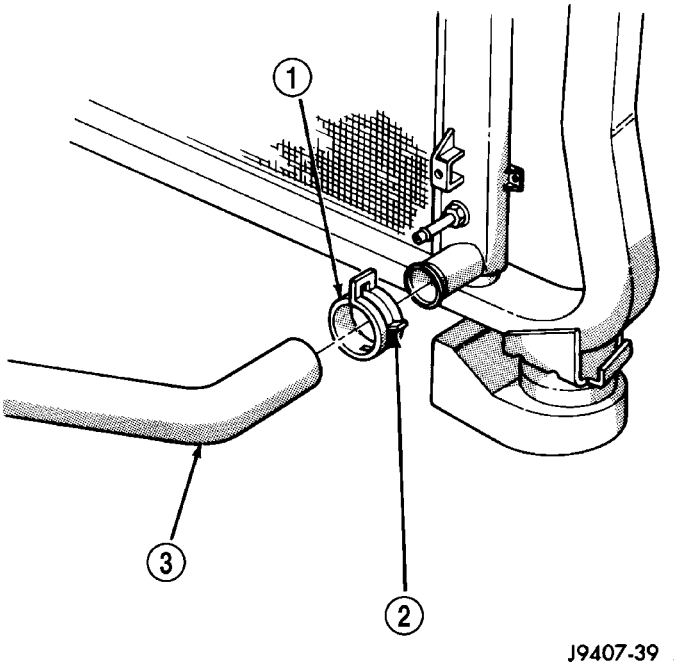


***Fig. 20 Clamp Number/Letter Location - Typical***

1 - TYPICAL CONSTANT TENSION HOSE CLAMP
2 - CLAMP NUMBER/LETTER LOCATION
3 - TYPICAL HOSE

(2) Observe the previous **WARNING.** Remove the radiator cap.

(3) Remove the condenser lower seal from the lower core support (Fig. 22).

(4) Drain cooling system (Refer to 7 - COOLING - STANDARD PROCEDURE) drain coolant into a clean container for reuse.

(5) Remove radiator upper and lower hose clamps. Remove radiator hoses.

(6) Disconnect coolant reserve/overflow tank hose from radiator.

(7) 2.4L ONLY - Remove the electric cooling fan (Refer to 7 - COOLING/ENGINE/RADIATOR FAN - REMOVAL).

(8) 4.0L ONLY - Remove the reservoir tank and power steering reservoir and position out of the way.

(9) 4.0L ONLY - Remove the four fan shroud mounting bolts (Fig. 23). Position the fan shroud back over the fan blades.

(10) If equipped, disconnect and plug automatic transmission fluid cooler lines.

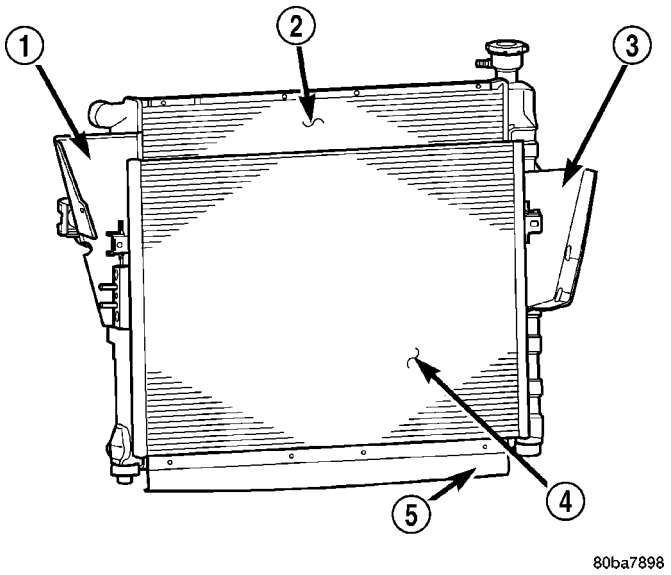


***Fig. 21 Air Seals - Typical***

1 - AIR DAM
2 - RADIATOR
3 - AIR DAM
4 - A/C CONDENSER
5 - AIR SEAL

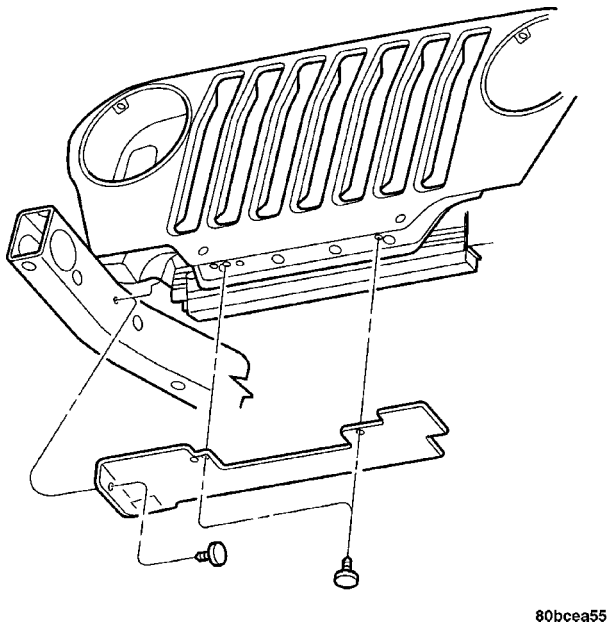


***Fig. 22 Condenser Lower Seal***

(11) Remove six radiator mounting bolts. Position the front axle vent hose (Fig. 23) to the side.

(12) The lower part of radiator is equipped with two alignment dowel pins (Fig. 24). They are located on the bottom of radiator tank and fit into rubber grommets. These rubber grommets are pressed into the radiator lower crossmember.

(13) Lift radiator straight up and out of vehicle taking care not to damage radiator fins.