RADIATOR (Continued)

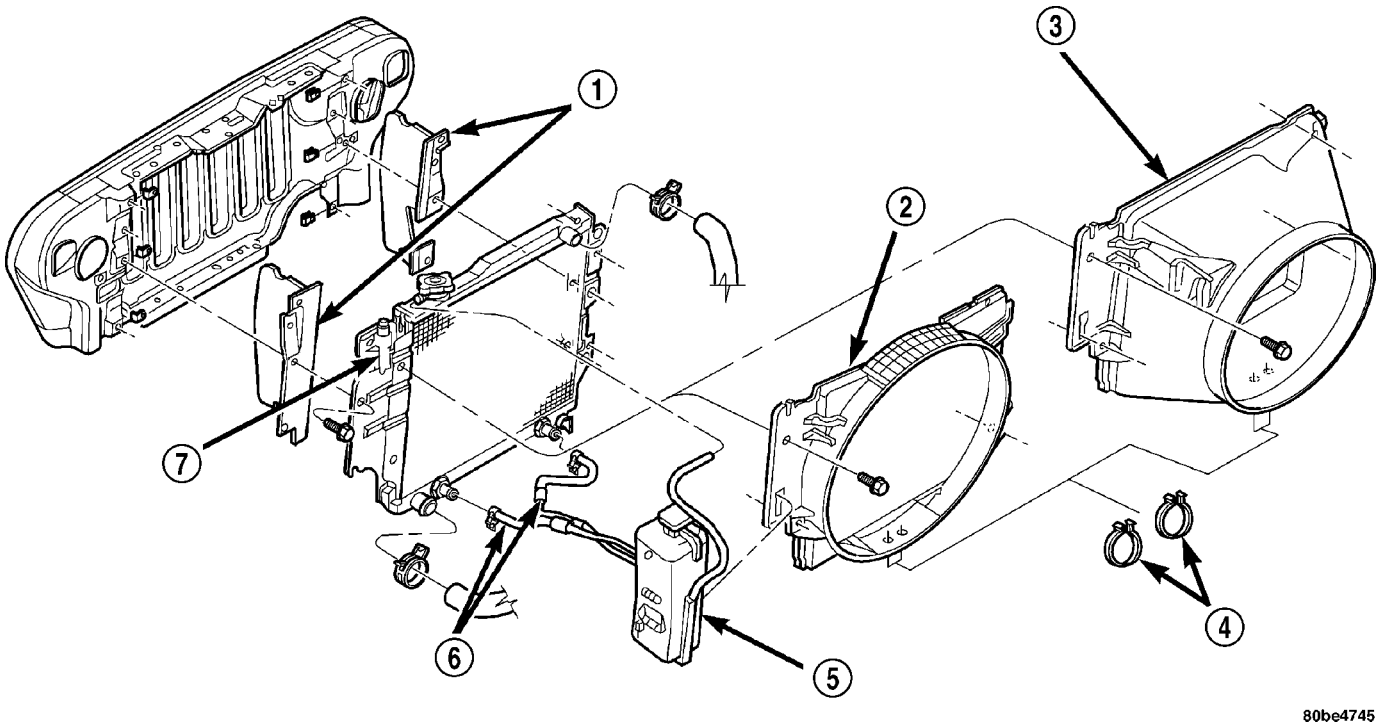

Fig. 23 Radiator - Remove/Install

1 - A/C CONDENSER SEALS
2 - FAN SHROUD (4.0L)
3 - FAN SHROUD (2.5L)
4 - TRANSMISSION OIL COOLER LINES RETAINER CLIPS
5 - COOLANT RECOVERY BOTTLE
6 - TRANSMISSION COOLER LINES (IF EQUIPPED)
7 - FRONT AXLE VENT HOSE

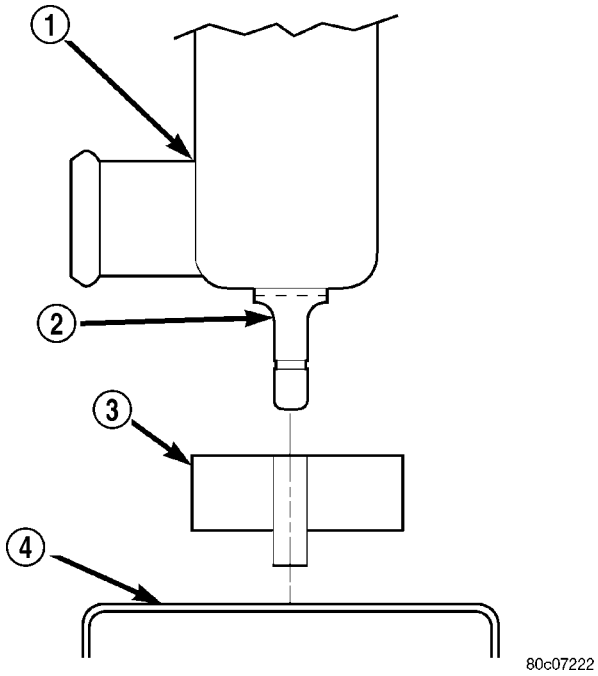

Fig. 24 Radiator Alignment Dowels - Typical

1 - RADIATOR
2 - ALIGNMENT DOWEL
3 - RADIATOR LOWER ISOLATOR
4 - RADIATOR LOWER CROSSMEMBER

(14) When removing radiator, note position of the rubber seals located on the top and bottom of radiator (on certain models only) (Fig. 23). To prevent possible overheating, these seals must be installed to their original positions.

CLEANING

Clean radiator fins. With the engine cold, apply cold water and compressed air to the back (engine side) of the radiator to flush the radiator and/or A/C condenser of debris.

INSPECTION

The radiator cooling fins should be checked for damage or deterioration. Inspect cooling fins to make sure they are not bent or crushed, these areas result in reduced heat exchange causing the cooling system to operate at higher temperatures. Inspect the plastic end tanks for cracks, damage or leaks.

Inspect the radiator neck for damage or distortion.