WATER PUMP - 2.4L (Continued)

REMOVAL - 2.4L

(1) Drain cooling system (Refer to 7 - COOLING/ ENGINE - STANDARD PROCEDURE).

(2) Remove timing belt (Refer to 9 - ENGINE/ VALVE TIMING/TIMING BELT AND SPROCKETS - REMOVAL).

(3) Remove camshaft sprockets and rear timing belt cover (Refer to 9 - ENGINE/VALVE TIMING/ TIMING BELT AND SPROCKETS - REMOVAL).

(4) Remove screws attaching water pump to engine. Remove pump (Fig. 26).

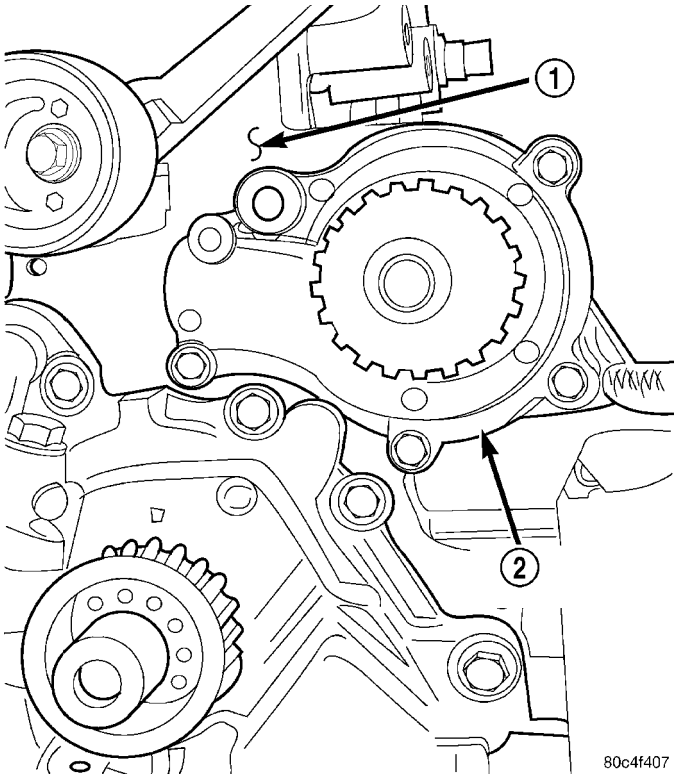

Fig. 26 Water Pump

1 - CYLINDER BLOCK
2 - WATER PUMP

INSTALLATION

INSTALLATION 2.4L

(1) Apply Mopar® Dielectric Grease to new O-ring before installation (Fig. 27).

(2) Install O-ring gasket in water pump body groove (Fig. 27).

CAUTION: Make sure O-ring gasket is properly seated in water pump groove before tightening screws. An improperly located O-ring may cause damage to the O-ring, resulting in a coolant leak.

(3) Assemble pump body to block (Fig. 26) and tighten screws to 12 N·m (105 in. lbs.).

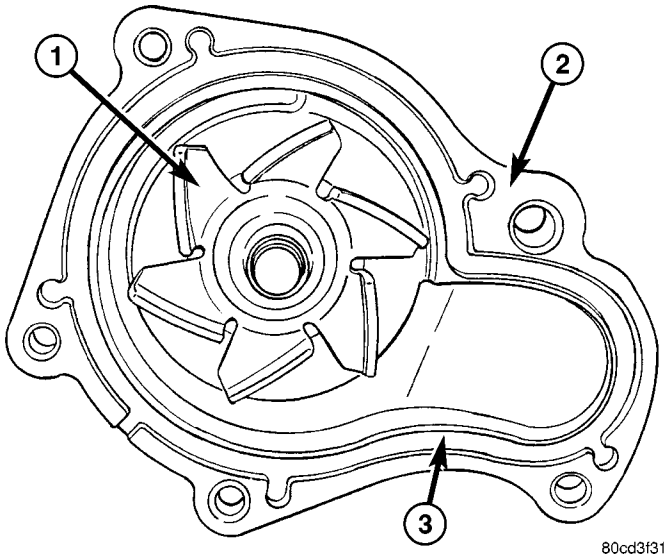

Fig. 27 Water Pump Body

1 - IMPELLER
2 - WATER PUMP BODY
3 - O-RING LOCATING GROOVE

(4) Rotate pump by hand to check for freedom of movement.

(5) Fill cooling system (Refer to 7 - COOLING/ENGINE - STANDARD PROCEDURE). Pressurize cooling system to 103 Kpa (15 psi) with pressure tester and check water pump shaft seal and O-ring for leaks.

(6) Install rear timing belt cover and camshaft sprockets (Refer to 9 - ENGINE/VALVE TIMING/ TIMING BELT AND SPROCKETS - INSTALLATION).

(7) Install timing belt (Refer to 9 - ENGINE/ VALVE TIMING/TIMING BELT AND SPROCKETS - INSTALLATION).

WATER PUMP - 4.0L

DESCRIPTION

CAUTION: The 4.0L 6-cylinder engines is equipped with a reverse (counterclockwise) rotating water pump and thermal viscous fan drive assembly. REVERSE is stamped or imprinted on the cover of the viscous fan drive and inner side of the fan. The letter R is stamped into the back of the water pump impeller. Engines from previous model years, depending upon application, may have been equipped with a forward (clockwise) rotating water pump. Installation of the wrong water pump or viscous fan drive will cause engine over heating.