WATER PUMP - 4.0L (Continued)

This aluminum water pump (Fig. 28) is the heart of the cooling system. The water pump is located at the front of the cylinder block, above the timing chain cover

The water pump impeller is pressed onto the rear of a shaft that rotates in bearings pressed into the housing. The housing has two small holes to allow seepage to escape. The water pump seals are lubricated by the antifreeze in the coolant mixture. No additional lubrication is necessary.

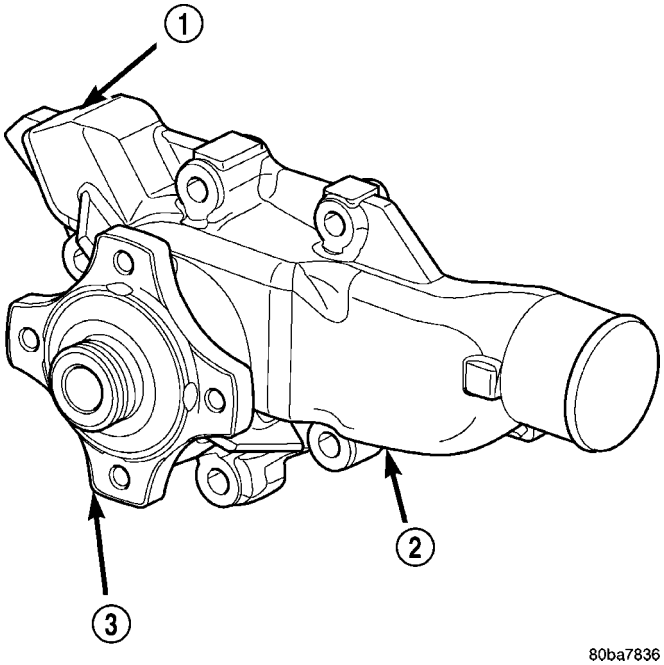

Fig. 28 Water Pump - Typical

1 - HEATER HOSE FITTING BORE
2 - WATER PUMP
3 - WATER PUMP HUB

OPERATION

A centrifugal water pump circulates coolant through the water jackets, passages, intake manifold, radiator core, cooling system hoses and heater core. The pump is driven from the engine crankshaft by a single serpentine drive belt on all engines.

REMOVAL

The water pump can be removed without discharging the air conditioning system (if equipped).

CAUTION: All engines have a reverse (counterclockwise) rotating water pump. The letter R is stamped into the back of the water pump impeller (Fig. 29) to identify. Engines from previous model years, depending upon application, may be equipped with a forward (clockwise) rotating water pump. Installation of the wrong water pump will cause engine over heating.

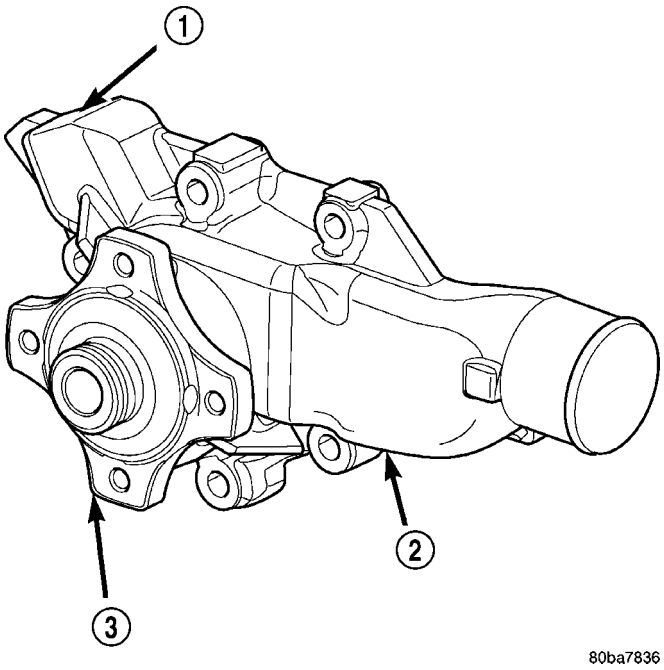

Fig. 29 Water Pump - 4.0L Engine

1 - HEATER HOSE FITTING BORE
2 - WATER PUMP
3 - WATER PUMP HUB

The water pump impeller is pressed on the rear of the pump shaft and bearing assembly. The water pump is serviced only as a complete assembly.

WARNING: DO NOT REMOVE THE BLOCK DRAIN PLUG(S) OR LOOSEN RADIATOR DRAINCOCK WITH THE SYSTEM HOT AND UNDER PRESSURE. SERIOUS BURNS FROM COOLANT CAN OCCUR.

DO NOT WASTE reusable coolant. If the solution is clean, drain coolant into a clean container for reuse.

(1) Disconnect negative battery cable at battery.

(2) Drain the cooling system (Refer to 7 - COOLING - STANDARD PROCEDURE).

NOTE: The engine accessory drive belt must be removed prior to removing the fan.

(3) Remove accessory drive belt (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - REMOVAL).

(4) The thermal viscous fan drive/fan blade assembly is attached (threaded) to water pump hub shaft. Remove fan blade/viscous fan drive assembly from water pump by turning mounting nut counterclockwise as viewed from front. Threads on viscous fan drive are **RIGHT HAND.** Using a suitable fan wrench loosen the fan drive (Fig. 30).

(5) Remove power steering pump (Refer to 19 - STEERING/PUMP - REMOVAL).