WATER PUMP - 4.0L (Continued)

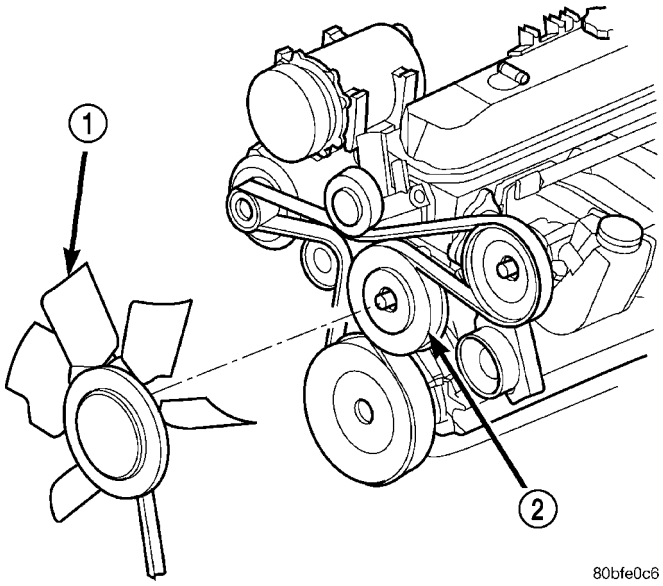

Fig. 30 Fan and Fan Drive Mounting - 4.0L Engine

1 - FAN AND FAN DRIVE
2 - WATER PUMP PULLEY

WARNING: CONSTANT TENSION HOSE CLAMPS ARE USED ON MOST COOLING SYSTEM HOSES. WHEN REMOVING OR INSTALLING, USE ONLY TOOLS DESIGNED FOR SERVICING THIS TYPE OF CLAMP, SUCH AS SPECIAL CLAMP TOOL NUMBER 6094 (Fig. 31). ALWAYS WEAR SAFETY GLASSES WHEN SERVICING CONSTANT TENSION CLAMPS.

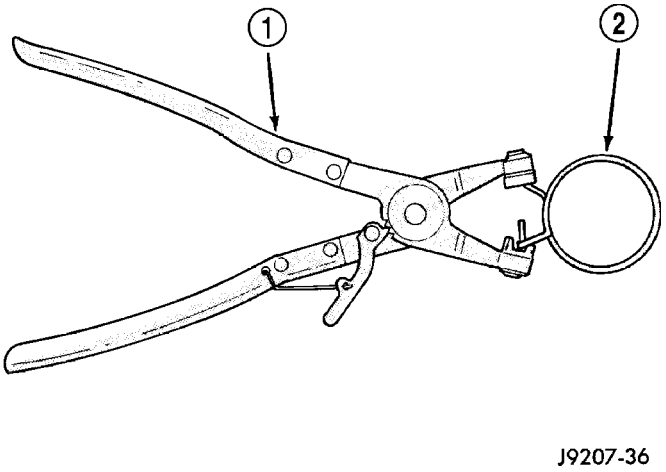

Fig. 31 Hose Clamp Tool - Typical

1 - HOSE CLAMP TOOL 6094
2 - HOSE CLAMP

CAUTION: A number or letter is stamped into the tongue of constant tension clamps (Fig. 32). If replacement is necessary, use only an original equipment clamp with matching number or letter.

(6) Remove lower radiator hose from water pump. Remove heater hose from water pump fitting.

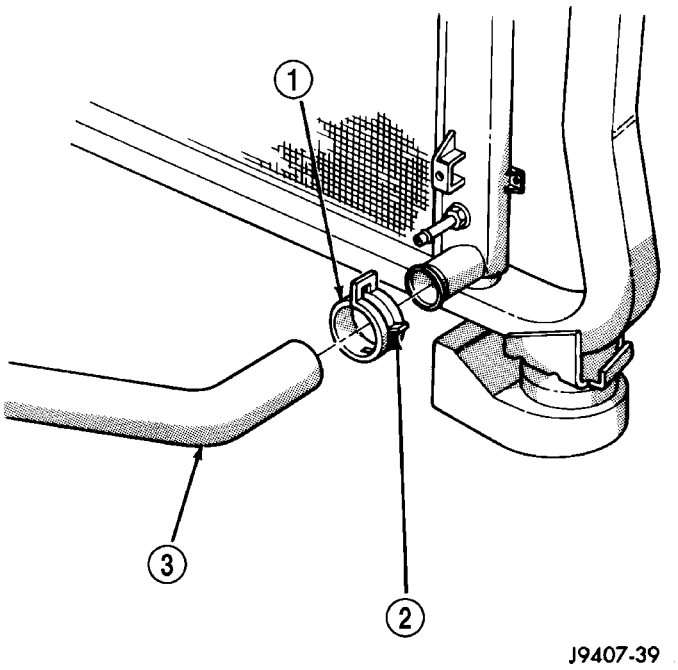

Fig. 32 Clamp Number/Letter Location

1 - TYPICAL CONSTANT TENSION HOSE CLAMP
2 - CLAMP NUMBER/LETTER LOCATION
3 - TYPICAL HOSE

(7) After removing fan blade/viscous fan drive assembly, **do not** place thermal viscous fan drive in horizontal position. If stored horizontally, silicone fluid in viscous fan drive could drain into its bearing assembly and contaminate lubricant.

(8) Remove the four pump mounting bolts (Fig. 33) and remove pump from vehicle. Discard old gasket. Note that one of the four bolts is longer than the other bolts.

(9) If pump is to be replaced, the heater hose fitting must be removed. Note position of fitting before removal.

INSTALLATION

(1) If pump is being replaced, install the heater hose fitting to the pump. Use a sealant on the fitting such as Mopar® Thread Sealant With Teflon. Refer to the directions on the package.

(2) Clean the gasket mating surfaces. If the original pump is used, remove any deposits or other foreign material. Inspect the cylinder block and water pump mating surfaces for erosion or damage from cavitation.

(3) Install the gasket and water pump. The silicone bead on the gasket should be facing the water pump. Also, the gasket is installed dry. Tighten mounting bolts to 23 N·m (200 in. lbs.) torque. Rotate the shaft by hand to be sure it turns freely.

(4) Connect the radiator and heater hoses to the water pump.