RADIATOR PRESSURE CAP (Continued)

spring and a rubber gasket. This gasket is used to seal to radiator filler neck top surface. Use of proper cap will allow coolant return to radiator.

RADIATOR FAN

DESCRIPTION

The electric cooling fan replaces the engine driven mechanical fan. The electric cooling fan is integral to the fan shroud and is located between the radiator and the engine.

The electric fan is controlled by the electronic control module (ECM).

The electric cooling fan is not serviceable. Any failure of the fan blade, electric motor or fan shroud requires replacement of the fan module.

CAUTION: Do not attempt to service the electric cooling fan or fan blades separately, replace the cooling module as an assembly. Failure to do so may cause severe damage to the electric cooling fan assembly.

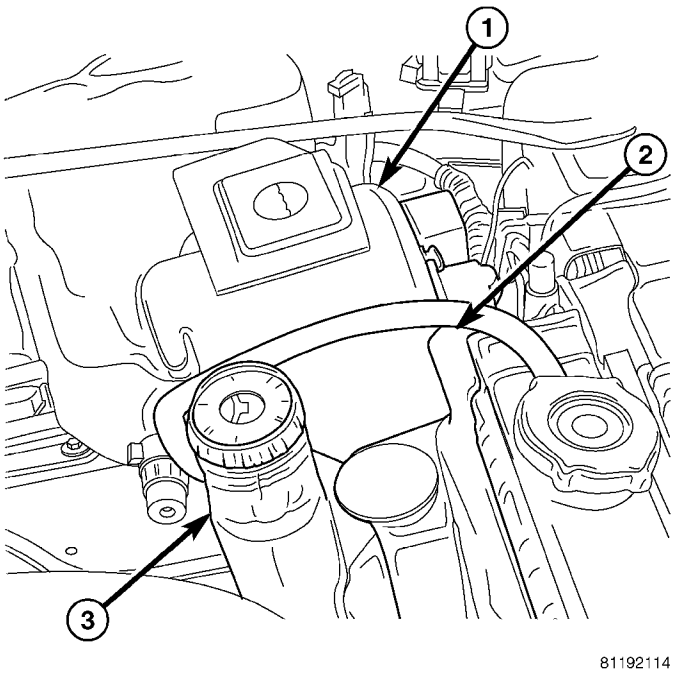

Fig. 36 Coolant Recovery Bottle

1 - COOLANT RECOVERY BOTTLE
2 - COOLING FAN ASSEMBLY
2 - POWER STEERING RESERVOIR

REMOVAL

REMOVAL

(1) Remove the coolant recovery bottle and position out of the way (Fig. 36).

(2) Remove and position the power steering reservoir out of the way.

(3) Disconnect the electrical connector.

(4) Remove the mounting screws.

(5) Remove the cooling fan assembly (Fig. 37).

REMOVAL - 4.0L

(1) Remove the thermal viscous fan drive/fan blade assembly (Refer to 7 - COOLING/ENGINE/FAN DRIVE VISCOUS CLUTCH - REMOVAL).

(2) Remove the four fan retaining bolts.

(3) Seperate the fan blade from the thermal viscous fan drive.

CLEANING

Clean the fan blades using a mild soap and water. Do not use an abrasive to clean the blades.

INSPECTION

WARNING: DO NOT ATTEMPT TO BEND OR STRAIGHTEN FAN BLADES IF FAN IS NOT WITHIN SPECIFICATIONS.

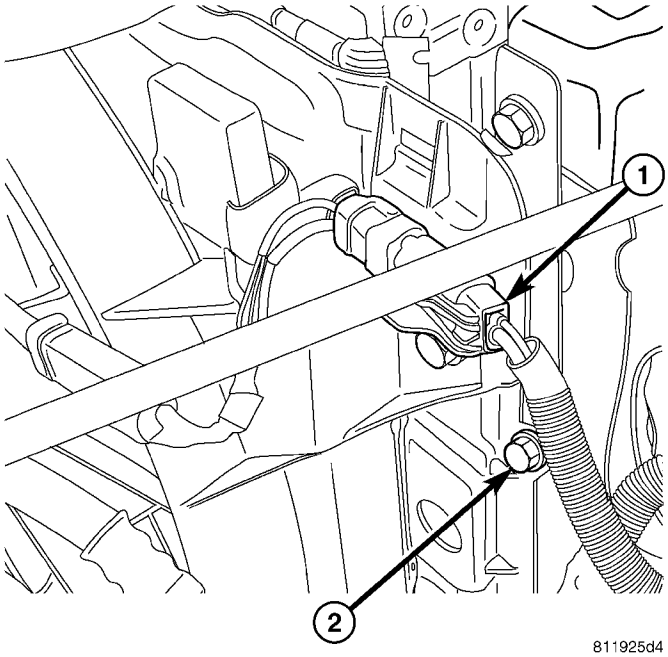

Fig. 37 Electrical Connector

1 - ELECTRICAL CONNECTOR
2 - MOUNTING SCREW