AMPLIFIED SUBWOOFER (Continued)

(3) Install the mounting screws to the side of the console.

(4) Connect wire harness connector and retainer.

(5) Install the center console (Refer to 23 - BODY/INTERIOR/CENTER CONSOLE - INSTALLATION).

(6) Connect the battery negative cable.

ANTENNA BODY & CABLE

DESCRIPTION

All models use a fixed-length stainless steel rod-type antenna mast, installed on the right front cowl side panel of the vehicle. The antenna mast is connected to the center wire of the coaxial antenna cable, and is not grounded to any part of the vehicle.

To eliminate static, the antenna base must have a good ground. The antenna coaxial cable shield (the outer wire mesh of the cable) is grounded to the antenna base and the radio chassis.

The antenna coaxial cable has an additional disconnect, located behind the right end of the instrument panel between the radio and the right cowl side panel. This additional disconnect allows the instrument panel assembly to be removed and installed without removing the radio.

DIAGNOSIS AND TESTING - ANTENNA BODY AND CABLE

WARNING: ON VEHICLES EQUIPPED WITH AIRBAGS, (REFER TO ELECTRICAL/RESTRAINTS) BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY.

The following four tests are used to diagnose the antenna with an ohmmeter:

- **Test 1** - Mast to ground test
- **Test 2** - Tip-of-mast to tip-of-conductor test
- **Test 3** - Body ground to battery ground test
- **Test 4** - Body ground to coaxial shield test.

The ohmmeter test lead connections for each test are shown in Antenna Tests (Fig. 1).

NOTE: This model has a two-piece antenna coaxial cable. Tests 2 and 4 must be conducted in two steps to isolate an antenna cable problem. First, test the primary antenna cable (integral to the antenna body and cable) from the coaxial cable connector behind the right side of the instrument panel between the radio and the right side cowl panel, to the antenna body. Then, test the secondary antenna cable (instrument panel antenna cable) from the coaxial connector behind the right side of the instrument panel between the radio and the right side cowl panel, to the coaxial cable connector at the radio.

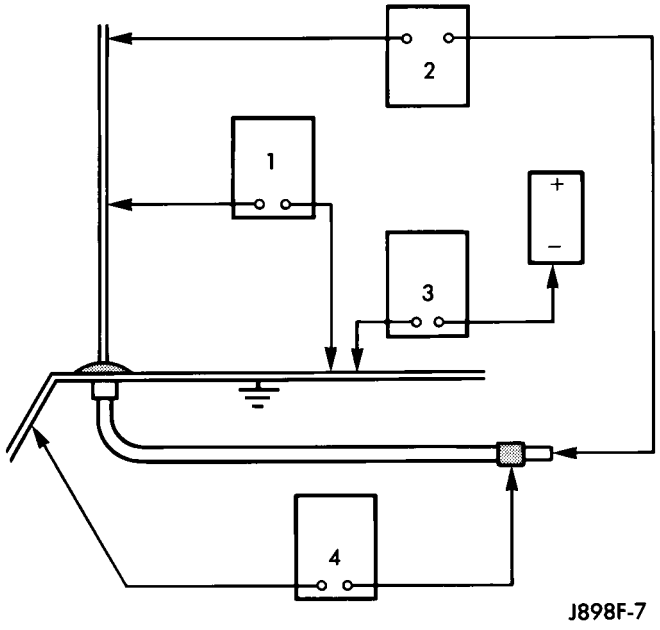

Fig. 1 Antenna Tests

TEST 1

Test 1 determines if the antenna mast is insulated from the base. Proceed as follows:

(1) Unplug the antenna coaxial cable connector from the radio chassis and isolate.

(2) Connect one ohmmeter test lead to the tip of the antenna mast. Connect the other test lead to the antenna base. Check for continuity.

(3) There should be no continuity. If continuity is found, replace the faulty or damaged antenna base and cable assembly.

TEST 2

Test 2 checks the antenna for an open circuit as follows:

(1) Unplug the antenna coaxial cable connector from the radio chassis.

(2) Connect one ohmmeter test lead to the tip of the antenna mast. Connect the other test lead to the center pin of the antenna coaxial cable connector.

(3) Continuity should exist (the ohmmeter should only register a fraction of an ohm). High or infinite resistance indicates damage to the base and cable assembly. Replace the faulty base and cable, if required.

TEST 3

Test 3 checks the condition of the vehicle body ground connection. This test should be performed with the battery positive cable removed from the bat-