ANTENNA BODY & CABLE (Continued)

tery. Disconnect both battery cables, the negative cable first. Reconnect the battery negative cable and perform the test as follows:

(1) Connect one ohmmeter test lead to the vehicle fender. Connect the other test lead to the battery negative post.

(2) The resistance should be less than one ohm.

(3) If the resistance is more than one ohm, check the braided ground strap connected to the engine and the vehicle body for being loose, corroded, or damaged. Repair or replace the ground strap connection, if required.

TEST 4

Test 4 checks the condition of the ground between the antenna base and the vehicle body as follows:

(1) Connect one ohmmeter test lead to the vehicle fender. Connect the other test lead to the outer crimp on the antenna coaxial cable connector.

(2) The resistance should be less then one ohm.

(3) If the resistance is more then one ohm, clean and/or tighten the antenna base to fender mounting hardware.

REMOVAL

WARNING: ON VEHICLES EQUIPPED WITH AIRBAGS, (REFER TO ELECTRICAL/RESTRAINTS) BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY.

(1) Disconnect and isolate the battery negative cable.

(2) Remove the glove box from the instrument panel. (Refer to 23 - BODY/INSTRUMENT PANEL/ GLOVE BOX - REMOVAL).

(3) Reach through the instrument panel glove box opening to unplug the two antenna coaxial cables in line connector. Unplug the connector by pulling it apart while twisting the metal connector halves. Do not pull on the cable.

(4) Unscrew the antenna mast from the antenna body base on the right outer cowl side panel (Fig. 2).

(5) Using a trim stick, gently pry the edge of the antenna base trim cover to unsnap it from the antenna body base.

(6) Remove the three screws that secure the antenna body base to the right outer cowl side panel.

(7) From inside the passenger compartment, push the coaxial cable grommet on the antenna body half of the coaxial cable out through the hole in the right inner cowl side panel.

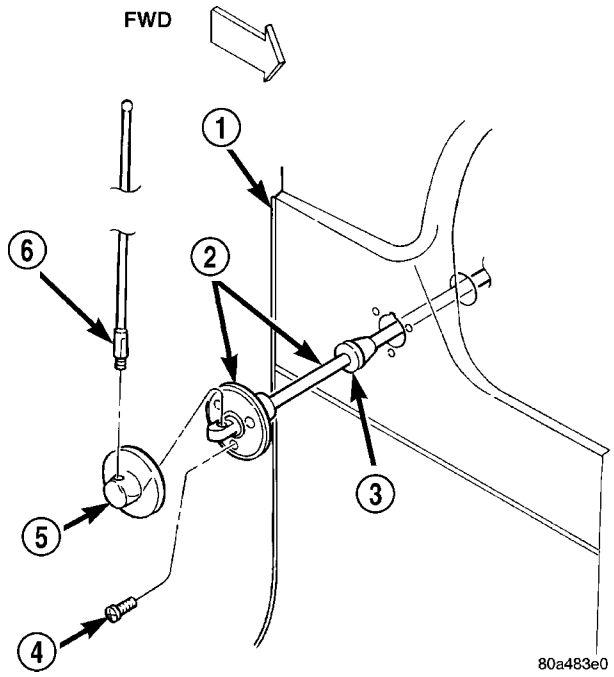

Fig. 2 Antenna Remove/Install

1 - RIGHT COWL SIDE PANEL
2 - BASE & CABLE
3 - GROMMET
4 - SCREW
5 - COVER
6 - MAST

(8) From the outside of the vehicle, pull the antenna body base and cable assembly out through the hole in the right outer cowl side panel.

INSTALLATION

WARNING: ON VEHICLES EQUIPPED WITH AIRBAGS, (REFER TO ELECTRICAL/RESTRAINTS) BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY.

(1) From outside the vehicle, feed the antenna cable and base assembly through the outer cowl side panel and into the inner cowl side panel hole.

(2) From inside the passenger compartment, pull the cable and grommet into the hole in the inside cowl side panel until the grommet is fully seated.

(3) Install the three screws retaining the antenna body base to right outer cowl side panel. Tighten the screws to 3.3 N·m (30 in. lbs.).

(4) Snap on the antenna base trim cover to the antenna body base.

(5) Install antenna mast. Tighten to 5 N·m (46 in. lbs.). **Ensure that the antenna mast is fully**