SPEAKER (Continued)

NOTE: If poor sound quality is noted in the audio system, check the Cabin Equalization curve programmed in the instrument cluster. Make sure a base speaker system has the Base Cabin Equalization Curve programmed to the vehicle. If the vehicle has a premium speaker system, make sure the Premium Cabin Equalization Curve is programmed to the vehicle

(1) If all speakers are inoperative, check the fuses in the Power Distribution Center (PDC). If OK, go to Step 2. If not OK, repair the shorted circuit or component as required and replace the faulty fuse.

(2) Turn the ignition switch to the ON position. Turn the radio receiver ON. Adjust the balance and fader control controls to check the performance of each individual speaker. Note the speaker locations that are not performing correctly. Go to Step 3.

(3) Turn the radio receiver OFF. Turn the ignition OFF. Disconnect and isolate the battery negative cable. Remove the radio receiver. Go to Step 4.

(4) Check both the speaker feed (+) circuit and return (-) circuit cavities for the inoperative speaker at the radio receiver wire harness connector for continuity to ground. There should be no continuity. If OK, go to Step 5. If not OK, repair the shorted speaker feed (+) and/or return (-) circuits(s) to the speaker as required.

(5) Disconnect wire harness connector at the inoperative speaker. Check for continuity between the speaker feed (+) circuit cavities of the radio receiver wire harness connector and the speaker wire harness connector. Repeat the check between the speaker return (-) circuit cavities of the radio receiver wire harness connector and the speaker wire harness connector. In each case, there should be continuity. If OK, replace the faulty speaker. If not OK, repair the open speaker feed (+) and/or return (-) circuits(s) as required.

REMOVAL

WARNING: ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE AIRBAG SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE AIRBAG SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE AIRBAG SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY.

FRONT

(1) Disconnect and isolate the battery negative cable.

(2) Remove the two screws that secure the outboard end of the speaker bezel to the instrument panel (Fig. 4).

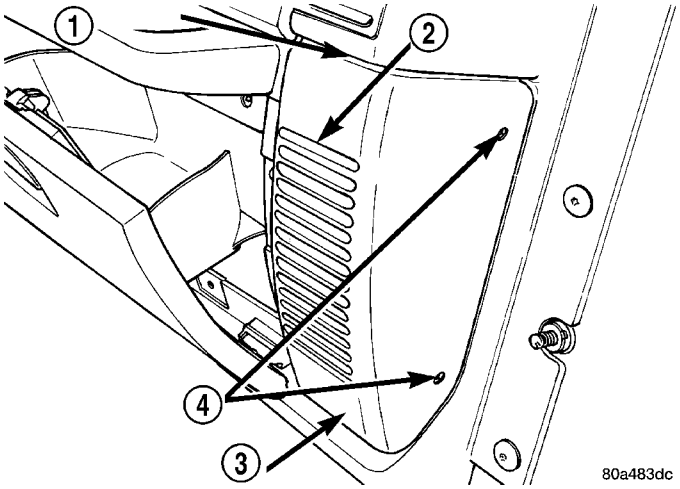

Fig. 4 Instrument Panel Speaker Bezel Remove/ Install

1 - PRY HERE
2 - SPEAKER BEZEL
3 - PRY HERE
4 - MOUNTING SCREWS

(3) Using a trim stick, gently pry at the top and bottom edges of the speaker bezel to release the two snap clip retainers that secure the bezel to the instrument panel.

(4) Remove the speaker bezel from the instrument panel.

(5) Remove the four screws that secure the speaker to the instrument panel (Fig. 5).

(6) Pull the speaker away from the instrument panel far enough to access the speaker wire harness connector.

(7) Unplug the wire harness connector from the speaker.

REAR

(1) Disconnect and isolate the battery negative cable.

(2) Remove mounting screws and speaker grill.

(3) Remove speaker from housing and disconnect wire harness connector.