SENTRY KEY IMMOBILIZER MODULE (Continued)

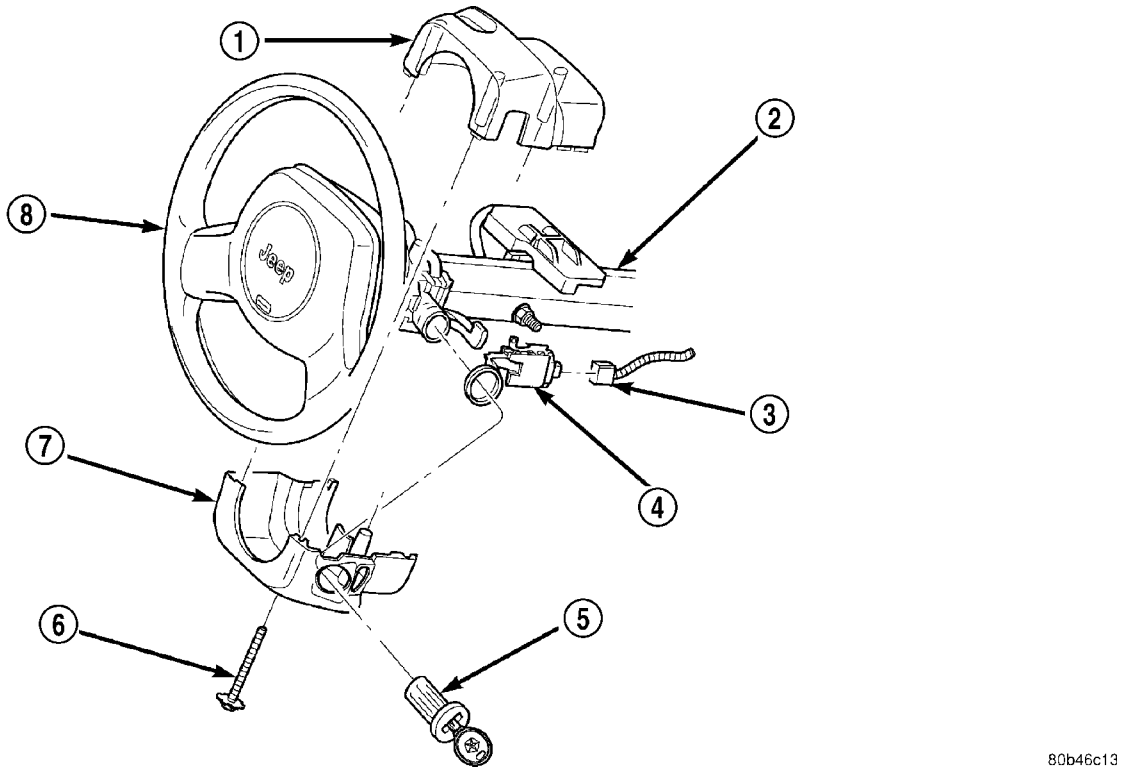

Fig. 11 Sentry Key Immobilizer Module - Typical

1 - UPPER SHROUD
2 - STEERING COLUMN
3 - WIRE HARNESS CONNECTOR
4 - SENTRY KEY IMMOBILIZER MODULE
5 - IGNITION LOCK CYLINDER
6 - SCREW
7 - LOWER SHROUD
8 - STEERING WHEEL

INSTALLATION

WARNING: ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE AIRBAG SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE AIRBAG SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE AIRBAG SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY.

(1) Position the Sentry Key Immobilizer Module (SKIM) (Fig. 11). On models with a manual transmission, lift the multi-function switch upward off of the upper steering column housing far enough to insert the SKIM antenna formation between the ignition key release button and the multi-function switch housing.

(2) Slide the SKIM antenna ring around the ignition switch lock cylinder housing, then rotate the SKIM and its mounting bracket upwards and toward the steering column.

(3) Align the SKIM mounting bracket clip with the inboard lower flange of the steering column and, push upward firmly on the connector end of the SKIM mounting bracket to engage the clip with the steering column.

(4) Reconnect the cross body wire harness connector for the SKIM to the SKIM connector.

(5) On models equipped with a manual transmission, install and tighten the screws that secure the multi-function switch assembly to the upper steering column housing. Tighten the screws to 2 N·m (20 in. lbs.).

(6) Position both the upper and lower shrouds onto the steering column (Fig. 10).

(7) Install and tighten the screws that secure the lower steering column shroud to the upper shroud. Tighten the screws to 2 N·m (18 in. lbs.).

(8) Move the tilt steering column to the fully raised position and secure it in place by moving the tilt release lever back to the locked (up) position.