BATTERY CABLES (Continued)

(6) Install and tighten the nut that secures the battery negative cable ground eyelet terminal to the stud on the right side of the engine block. Tighten the nut to 16.9 N·m (150 in. lbs.).

(7) Install the generator output cable eyelet terminal onto the generator output terminal stud.

(8) Install and tighten the nut that secures the generator output cable eyelet terminal to the generator output terminal stud. Tighten the nut to 8.4 N·m (75 in. lbs.).

(9) Position the cover for the generator output terminal stud housing onto the back of the generator and snap it into place.

(10) Install and tighten the screw that secures the battery negative cable eyelet terminal to the dash panel near the battery. Tighten the screw to 48.7 N·m (36 ft. lbs.).

(11) Install the battery positive cable and the generator output cable eyelet terminal onto the PDC B(+) terminal studs.

(12) Install and tighten the two nuts that secure the battery positive cable and the generator output cable eyelet terminal to the PDC B(+) terminal studs. Tighten the nuts to 11.3 N·m (100 in. lbs.).

(13) Engage the tabs on the lower edge of the B(+) terminal stud cover in the slots on the rear of the PDC housing, then engage the latch on the top of the cover with the latch tabs on the PDC housing.

(14) Reconnect the battery positive cable terminal clamp to the battery positive terminal post. Tighten the terminal clamp pinch-bolt hex nut to 8.4 N·m (75 in. lbs.).

(15) Reconnect the battery negative cable terminal clamp to the battery negative terminal post. Tighten the terminal clamp pinch-bolt hex nut to 8.4 N·m (75 in. lbs.).

(16) Apply a thin coating of petroleum jelly or chassis grease to the exposed surfaces of the battery cable terminal clamps and the battery terminal posts.

BATTERY TRAY

DESCRIPTION

The battery is mounted in a stamped steel tray (Fig. 18) located in the passenger side rear corner of the engine compartment. The battery tray is secured by four hex screws with washers to the reinforcement located between the engine compartment side of the dash panel and the rear of the front fender wheelhouse inner panel.

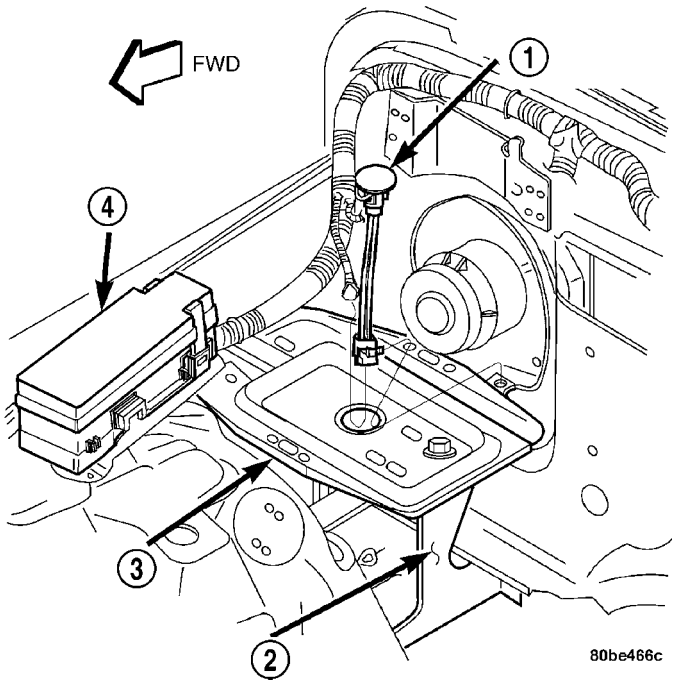

Fig. 18 Battery Tray

1 - BATTERY TEMPERATURE SENSOR
2 - REINFORCEMENT
3 - BATTERY TRAY
4 - POWER DISTRIBUTION CENTER

A hole in the bottom of the battery tray is fitted with a battery temperature sensor (Refer to 8 - ELECTRICAL/CHARGING/BATTERY TEMPERATURE SENSOR - DESCRIPTION).

OPERATION

The battery tray provides a secure mounting location and supports the battery. On some vehicles, the battery tray also provides the anchor point/s for the battery holddown hardware. The battery tray and the battery holddown hardware combine to secure and stabilize the battery in the engine compartment, which prevents battery movement during vehicle operation. Unrestrained battery movement during vehicle operation could result in damage to the vehicle, the battery, or both.