BATTERY TRAY (Continued)

REMOVAL

(1) Remove the battery from the battery tray (Refer to 8 - ELECTRICAL/BATTERY SYSTEM/BATTERY - REMOVAL).

(2) Remove the battery temperature sensor from the battery tray (Refer to 8 - ELECTRICAL/CHARGING/BATTERY TEMPERATURE SENSOR - REMOVAL).

(3) Remove the four screws with washers that secure the battery tray to the reinforcement located between the dash panel and the rear of the front wheelhouse inner panel in the engine compartment (Fig. 19).

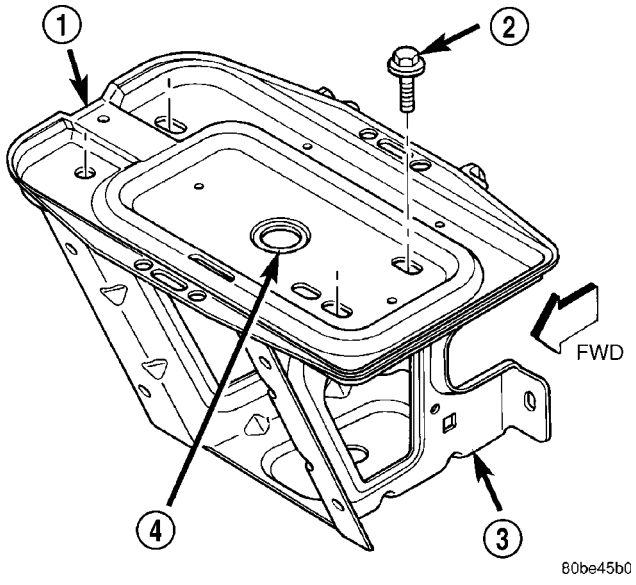

Fig. 19 Battery Tray Remove/Install

1 - BATTERY TRAY
2 - SCREW (4)
3 - REINFORCEMENT
4 - BATTERY TEMPERATURE SENSOR MOUNTING HOLE

(4) Remove the battery tray from the reinforcement in the engine compartment.

INSTALLATION

(1) Clean and inspect the battery tray (Refer to 8 - ELECTRICAL/BATTERY SYSTEM - CLEANING), and (Refer to 8 - ELECTRICAL/BATTERY SYSTEM - INSPECTION).

(2) Position the battery tray onto the reinforcement in the engine compartment.

(3) Install and tighten the four screws with washers that secure the battery tray to the reinforcement located between the dash panel and the rear of the front wheelhouse inner panel in the engine compartment. Tighten the screws to 22.6 N·m (200 in. lbs.).

(4) Install the battery temperature sensor onto the battery tray (Refer to 8 - ELECTRICAL/CHARGING/BATTERY TEMPERATURE SENSOR - INSTALLATION).

(5) Install the battery onto the battery tray (Refer to 8 - ELECTRICAL/BATTERY SYSTEM/BATTERY - INSTALLATION).