CHARGING (Continued)

TORQUE

DESCRIPTION	N-m	Ft. Lbs.	In. Lbs.
Generator Mounting Bolts (2.4L)	57	42	-
Generator Mounting Bolt (4.0L)	55	41	-
Generator Pivot Bolt/Nut (4.0L)	55	41	-
Generator B+ Cable Nut	13	-	115

SPECIAL TOOLS

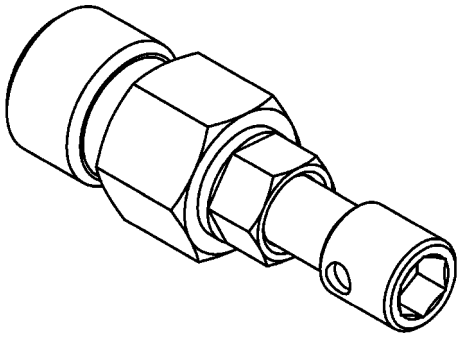

GENERATOR DECOUPLER TOOL #8433

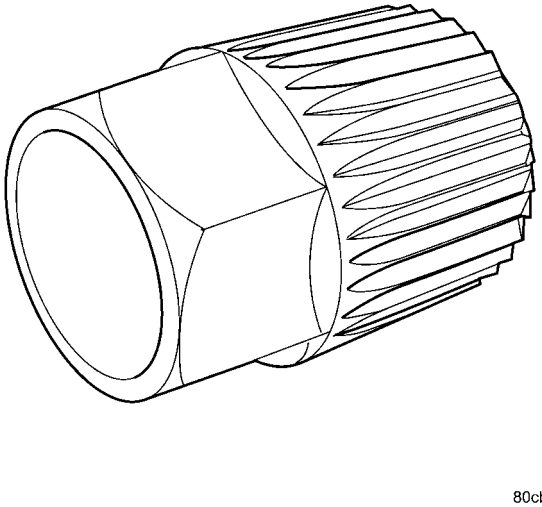

GENERATOR DECOUPLER TOOL #8823

BATTERY TEMPERATURE SENSOR

DESCRIPTION

The Battery Temperature Sensor (BTS) is attached to the battery tray located under the battery.

OPERATION

The BTS is used to determine the battery temperature and control battery charging rate. This temperature data, along with data from monitored line voltage, is used by the PCM to vary the battery charging rate. System voltage will be higher at colder temperatures and is gradually reduced at warmer temperatures.

The PCM sends 5 volts to the sensor and is grounded through the sensor return line. As temperature increases, resistance in the sensor decreases and the detection voltage at the PCM increases.

The BTS is also used for OBD II diagnostics. Certain faults and OBD II monitors are either enabled or disabled, depending upon BTS input (for example, disable purge and enable Leak Detection Pump (LDP) and O2 sensor heater tests). Most OBD II monitors are disabled below 20 degrees F.

REMOVAL

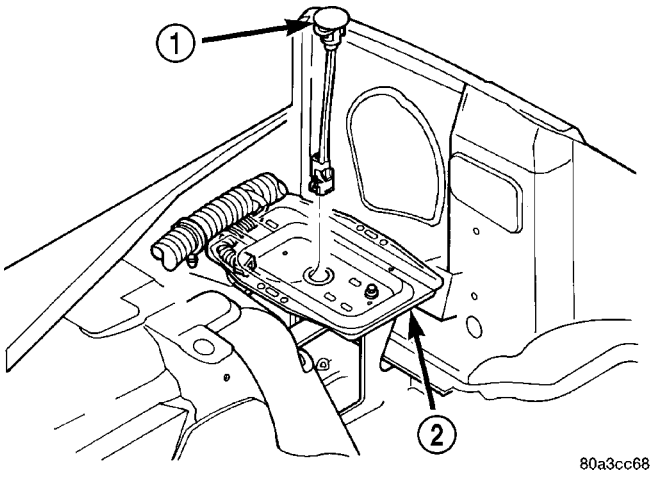

Fig. 1 Battery Temperature Sensor Remove/Install

1 - BATTERY TEMPERATURE SENSOR
2 - BATTERY TRAY

The battery temperature sensor is located under the vehicle battery (Fig. 1) and is attached to a mounting hole on battery tray.