GENERATOR (Continued)

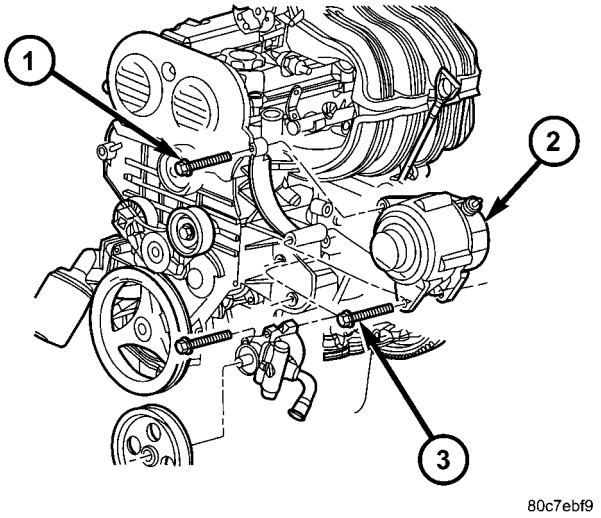


Fig. 3 GENERATOR MOUNTING- 2.4L

1 - UPPER MOUNTING BOLT
2 - GENERTOR
3 - LOWER MOUNTING BOLT

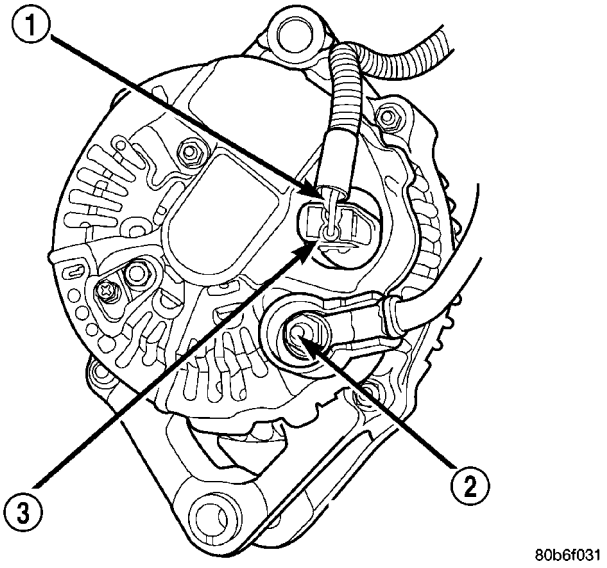


Fig. 4 GENERATOR CONNECTORS (TYPICAL DENSO)

1 - FIELD WIRES
2 - B+ (OUTPUT TERMINAL)
3 - FIELD WIRE CONNECTOR

CAUTION: When installing a serpentine accessory drive belt, the belt MUST be routed correctly. The water pump will be rotating in the wrong direction if the belt is installed incorrectly, causing the engine to overheat. Refer to belt routing label in engine compartment, or refer to Belt Schematics in 7, Cooling System.

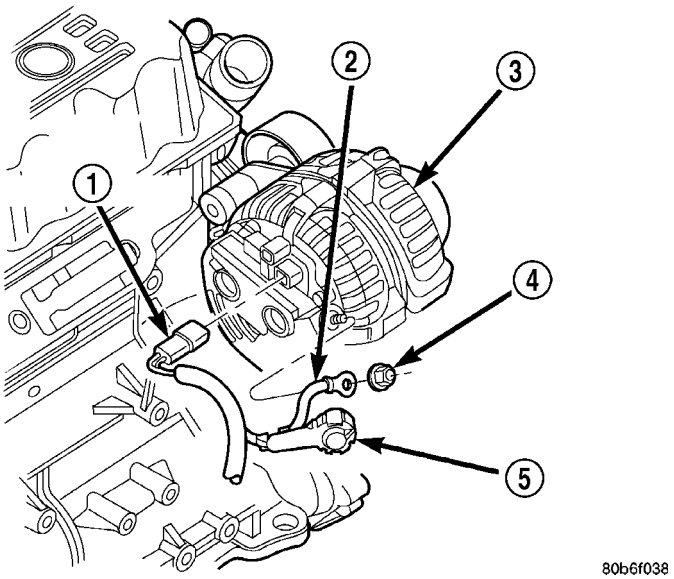


Fig. 5 GENERATOR CONNECTORS - 4.0L

1 - FIELD WIRE CONNECTOR
2 - B+ CABLE
3 - GENERATOR
4 - B+ CABLE MOUNTING NUT
5 - CABLE PROTECTOR

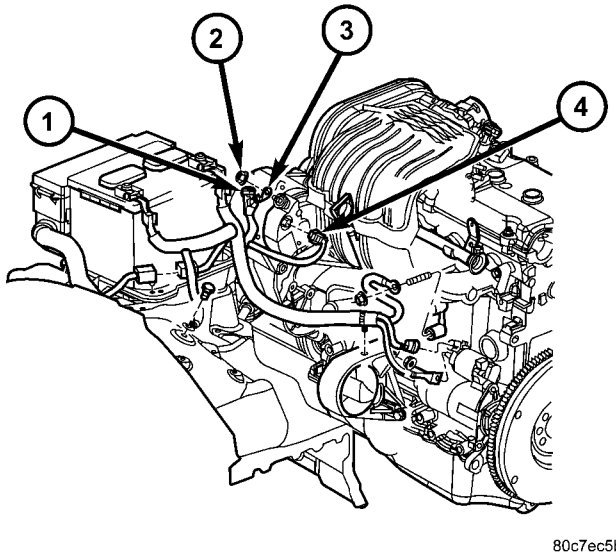


Fig. 6 GENERATOR ELECTRICAL CONNECTORS - 2.4L - TYPICAL

1 - PROTECTIVE CAP
2 - B+ NUT
3 - B+ TERMINAL
4 - FIELD ELECTRICAL CONNECTOR

(5) Install generator drive belt. Refer to 7, Cooling System for procedure.

(6) Install negative battery cable to battery.