GENERATOR DECOUPLER PULLEY (Continued)

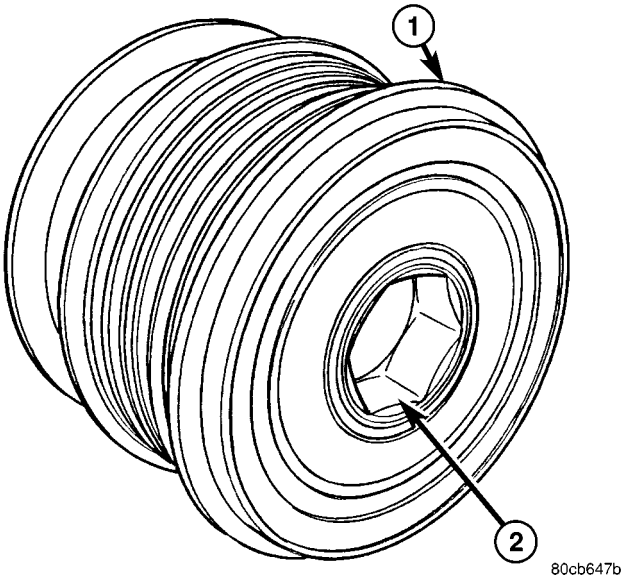


Fig. 9 GENERATOR DECOUPLER PULLEY (LITENS)

1 - DECOUPLER (LITENS)
2 - HEX OPENING

(5) The generator shaft uses conventional right-hand threads to attach decoupler. To break decoupler loose from generator threads, rotate end of tool clockwise (Fig. 13) or, (Fig. 14).

(6) After breaking loose with tool, unthread decoupler by hand from generator.

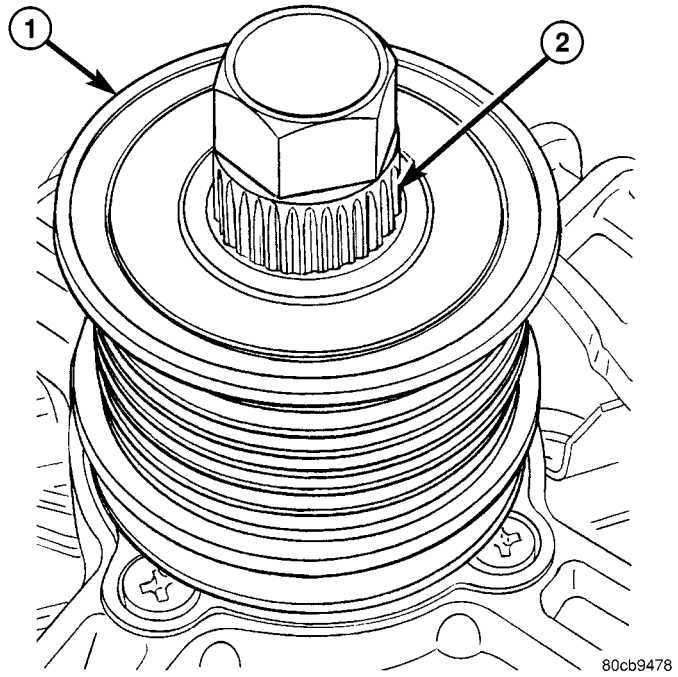


Fig. 10 #8823 TOOL AND INA DECOUPLER

1 - INA DECOUPLER
2 - TOOL #8823 (VM.1048)

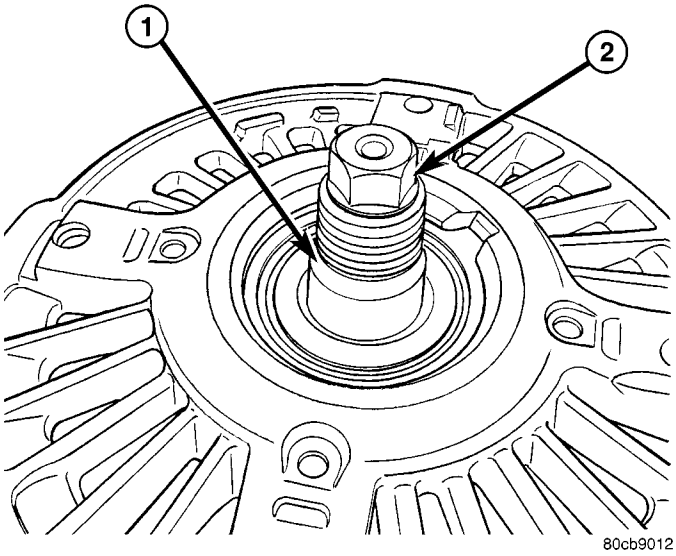


Fig. 11 END OF GENERATOR SHAFT (HEX)

1 - GENERATOR SHAFT
2 - HEX

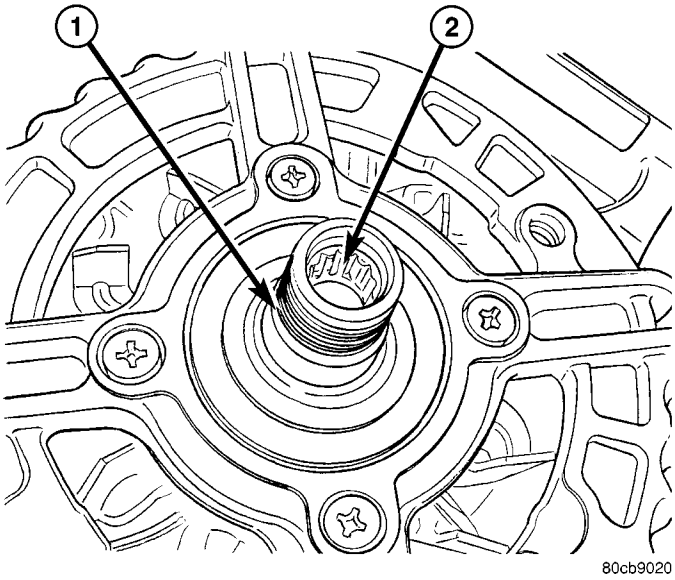


Fig. 12 END OF GENERATOR SHAFT (SPLINED)

1 - GENERATOR SHAFT
2 - SPLINES