GENERATOR DECOUPLER PULLEY (Continued)

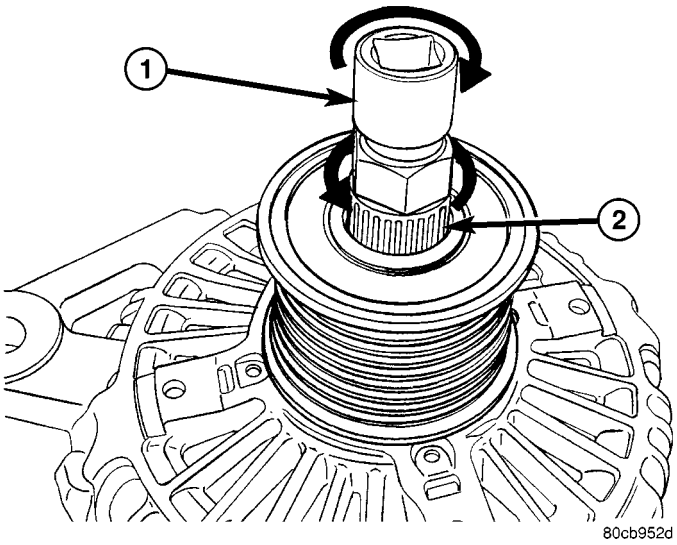


Fig. 13 DECOUPLER REMOVAL (INA-HEX)

1 - DEEP 10 MM SOCKET
2 - TOOL #8823 (VM.1048)

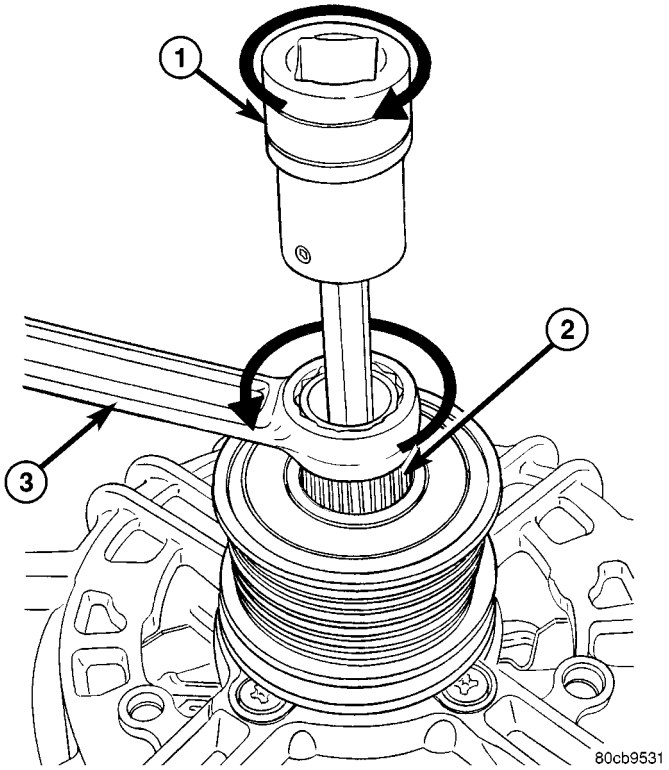


Fig. 14 DECOUPLER REMOVAL (INA-SPLINED)

1 - DRIVER
2 - TOOL #8823 (VM.1048)
3 - 17 MM WRENCH

Litens Decoupler

(1) Disconnect negative battery cable.

(2) Remove generator and accessory drive belt. Refer to Generator Removal.

(3) Position Special Tool #8433 (Fig. 15) into decoupler. Align to hex end of generator shaft.

(4) The generator shaft uses conventional right-hand threads to attach decoupler. To break decoupler loose from generator threads, rotate end of tool clockwise (Fig. 16).

(5) After breaking loose with tool, unthread decoupler by hand from generator.

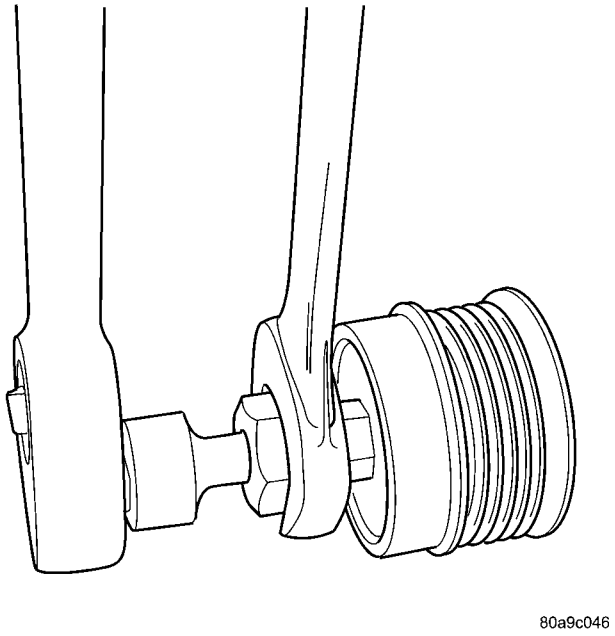


Fig. 15 # 8433 TOOL AND LITENS DECOUPLER

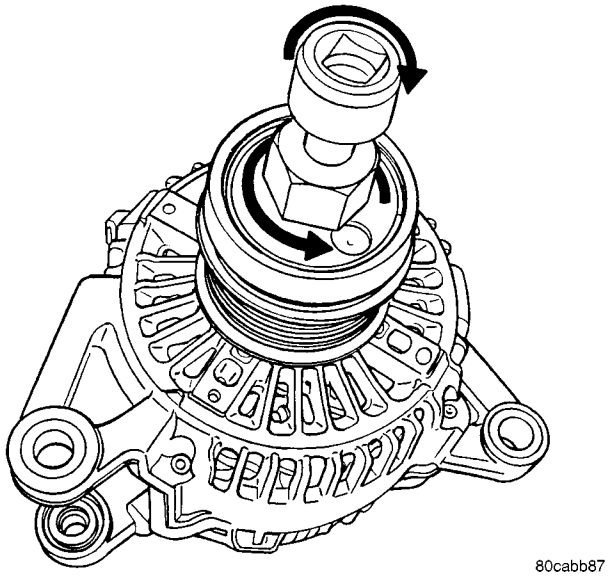


Fig. 16 DECOUPLER REMOVAL (LITENS)