GENERATOR DECOUPLER PULLEY (Continued)

INSTALLATION

INA Decoupler

(1) Thread decoupler pulley onto generator shaft by hand (right-hand threads).

(2) Position Special Tool #8823 (VM.1048) into decoupler (Fig. 10).

(3) Determine if end of generator shaft is hex shaped (Fig. 11) or is splined (Fig. 12). If hex is used, insert a 10MM deep socket into tool #8823 (VM.1048) (Fig. 17). If splined, insert a 5/16" 6-point hex driver, or a 10MM 12-point triple square driver into tool #8823 (VM.1048) (Fig. 18).

(4) **Do not use an adjustable, ratcheting "click type" torque wrench. Most "click type" wrenches will only allow torque to be applied in a clockwise rotation. Use a dial-type or beam-type wrench.** Tighten in counter-clockwise rotation (Fig. 17) or, (Fig. 18). Refer to torque specifications.

(5) Install accessory drive belt, and generator. Refer to Generator Installation.

(6) Connect negative battery cable.

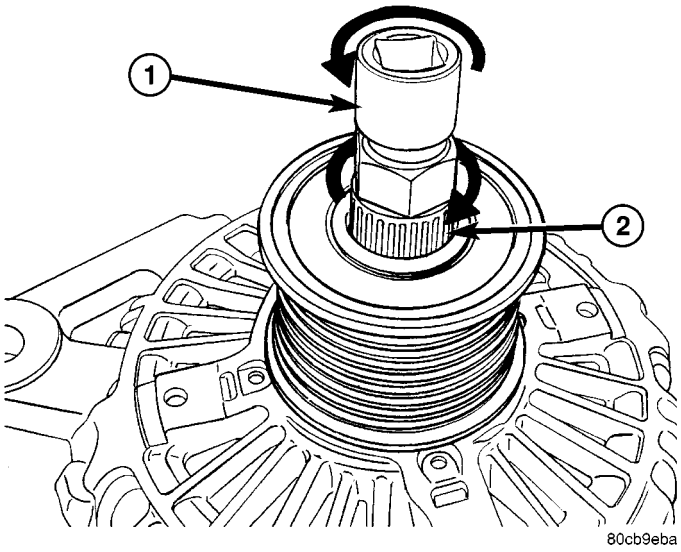


Fig. 17 DECOUPLER INSTALLATION (INA-HEX)

1 - 10MM DEEP SOCKET
2 - TOOL # 8823 (VM.1048)

Litens Decoupler

(1) Thread decoupler pulley onto generator shaft by hand (right-hand threads).

(2) Position Special Tool 8433 (Fig. 15) into decoupler. Align tool to hex end of generator shaft.

(3) **Do not use an adjustable, ratcheting "click type" torque wrench. Most "click type" wrenches will only allow torque to be applied in a clockwise rotation. Use a dial-type or beam-type wrench.** Tighten in counter-clockwise rotation (Fig. 19). Refer to torque specifications.

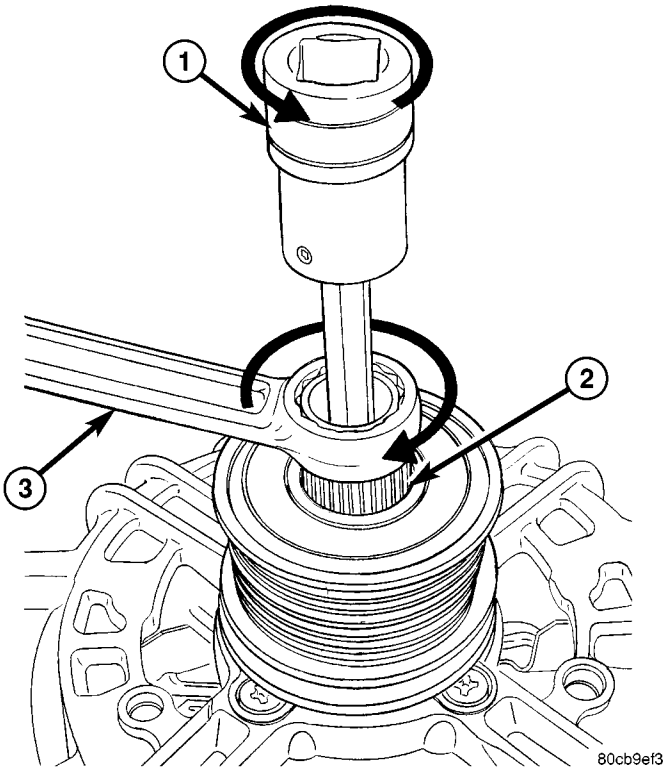


Fig. 18 DECOUPLER INSTALLATION (INA SPLINED)

1 - DRIVER
2 - TOOL # 8823 (VM.1048)

(4) Install accessory drive belt, and generator. Refer to Generator Installation.

(5) Connect negative battery cable.

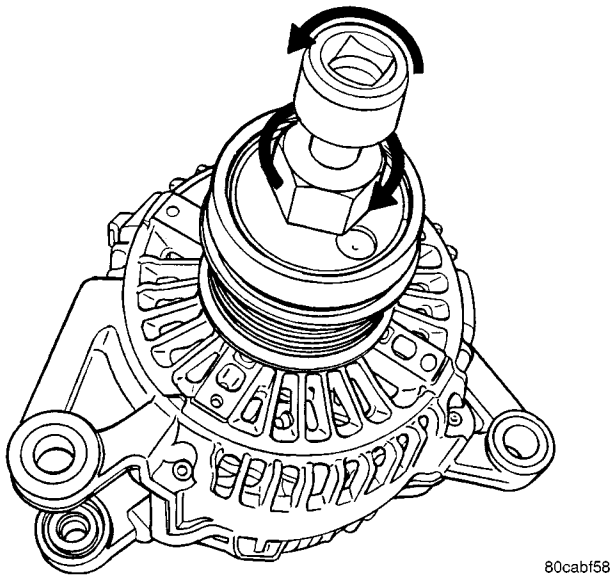


Fig. 19 DECOUPLER INSTALLATION (Litens)