HEATED GLASS (Continued)

switch bezel on the instrument panel (Fig. 2). When the rear window defogger switch is pressed to the On position, the instrument cluster energizes the rear window defogger (EBL) relay, which then directs fused battery current through the relay and to the rear defogger grid lines and the heated side view mirrors, when equipped. The grid lines heat the glass to help clear the rear window and side mirror surfaces of fog or frost.

An amber indicator in the rear window defogger switch will illuminate to indicate when the EBL system is turned on. The instrument cluster contains the EBL system control circuitry including the timer logic.

NOTE: The EBL system turns off automatically after ten minutes of initial operation. Each following activation cycle of the EBL system will last five minutes.

The EBL system will be automatically turned off after an initial programmed time interval of about ten minutes. After the initial time interval has expired, if the rear window defogger switch is turned on again during the same ignition cycle, the EBL system will automatically turn off after about five minutes. The EBL system will automatically shut off if the ignition switch is turned to the Off position, or it can be turned off manually by pressing the rear window defogger switch a second time.

Repair of the rear window defogger grid lines, bus bars, terminals or pigtail wires can be accomplished using the Mopar Rear Window Defogger Repair Kit (Part Number 04549275) or equivalent (Refer to 8 - ELECTRICAL/HEATED GLASS/REAR WINDOW DEFOGGER GRID - STANDARD PROCEDURE - GRID LINE AND TERMINAL REPAIR).

DIAGNOSIS AND TESTING

ELECTRIC BACKLIGHT (EBL) SYSTEM

NOTE: Illumination of the defogger switch indicator lamp does not necessary mean that electrical current is reaching the rear glass heating grid lines.

NOTE: For circuit descriptions and diagrams of the rear window defogger (EBL) system, refer to 8W - WIRING DIAGRAM INFORMATION.

Operation of the electric backlight (EBL) system can be confirmed by the following:

(1) Use a DRBIII® scan tool and check for diagnostic trouble codes (DTCs) related to the instrument cluster. If no DTCs are found, go to Step 2. If any DTCs are found, repair as required, then proceed to Step 2

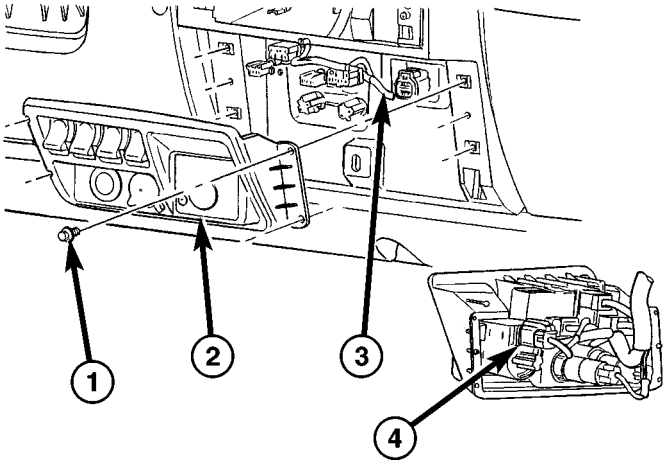

Fig. 2 03 ACCESSORY SWITCH BEZEL

1 - BEZEL SCREWS (4)
2 - BEZEL
3 - WIRE HARNESS
4 - ELECTRICAL CONNECTORS (7)

(2) Turn the ignition switch to the On position. Set the rear window defogger switch in the On position. The rear window defogger operation can be checked by feeling the surfaces of the rear window glass or outside heated rear view mirror glass, when equipped. A distinct difference in temperature between the grid lines and the adjacent clear glass or the mirror glass should be detected within three to four minutes of operation.

(3) If a temperature difference is not detected, use a 12-volt DC voltmeter and contact the rear glass heating grid power feed terminal A with the positive lead, and terminal B with the negative lead (Fig. 3). The voltmeter should read battery voltage. If the voltmeter does not read battery voltage, check the following:

- Confirm that the ignition switch is in the On position.
- Make sure that the EBL feed wire and ground wire are connected to the terminals. Confirm that the ground wire has continuity to ground.
- Check the EBL relay located in the power distribution center (PDC) in the engine compartment. Check the fuses in the fuse block located in the passenger compartment. The relay and fuses must be tight in their receptacles and all electrical connections must be secure. Refer to the appropriate wiring information for diagnosis and testing of the ISO-standard relay.

When the above steps have been completed and the rear glass heating grid is still inoperative, one or more of the following is faulty: