REAR WINDOW DEFOGGER SWITCH (Continued)

DIAGNOSIS AND TESTING

REAR WINDOW DEFOGGER SWITCH

WARNING: On vehicles equipped with airbags, disable the airbag system before attempting any steering wheel, steering column, or instrument panel component diagnosis or service. Disconnect and isolate the battery negative (ground) cable, then wait two minutes for the airbag system capacitor to discharge before performing further diagnosis or service. Failure to take the proper precautions could result in accidental airbag deployment and possible personal injury or death.

NOTE: For circuit descriptions and diagrams, refer to Rear Window Defogger in Group 8W - Wiring Diagrams.

(1) Disconnect and isolate the negative battery cable. Remove the accessory switch bezel from the instrument panel and disconnect the wire harness connector from the defogger switch.

(2) Check for continuity between the ground circuit cavity of the defogger switch wire harness connector and a good ground. There should be continuity. If OK, go to Step 3. If not OK, repair the open circuit as required.

(3) Check for continuity between the ground circuit terminal and the rear window defogger switch sense circuit terminal on the back of the defogger switch housing (Fig. 7). There should be momentary continuity as the defogger switch is pressed, and then no continuity. If OK, test the instrument cluster (Refer to 8 - ELECTRICAL/INSTRUMENT CLUSTER - DIAGNOSIS AND TESTING). If not OK, replace the faulty rear window defogger switch (Refer to 8 - ELECTRICAL/HEATED GLASS/REAR WINDOW DEFOGGER SWITCH - REMOVAL).

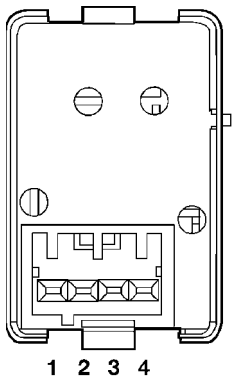

80a5035f

Fig. 7 Rear Window Defogger Switch Continuity

SWITCH POSITION	CONTINUITY BETWEEN
OFF	LAMPS
ON	MOMENTARY 1 AND 2
ILLUMINATION LAMP	1 AND 4
INDICATOR LAMP	1 AND 3

REMOVAL

WARNING: On vehicles equipped with airbags, disable the airbag system before attempting any steering wheel, steering column, or instrument panel component diagnosis or service. Disconnect and isolate the battery negative (ground) cable, then wait two minutes for the airbag system capacitor to discharge before performing further diagnosis or service. Failure to take the proper precautions could result in accidental airbag deployment and possible personal injury or death.

(1) Disconnect and isolate the negative battery cable.

(2) Remove the center bezel from the instrument panel (Refer to 23 - BODY/INSTRUMENT PANEL/CLUSTER BEZEL - REMOVAL).

(3) Remove the four screws that secure the accessory switch bezel to the instrument panel (Fig. 8).

(4) Pull the accessory switch bezel out from the instrument panel far enough to access the wire harness connectors.

(5) Disconnect the wire harness connectors from the rear of the accessory switches and the cigar lighter/power outlet.

(6) Remove the accessory switch bezel from the instrument panel.

(7) Using a small thin-bladed screwdriver, gently pry the snap clips at the top and at the bottom of the rear window defogger switch receptacle on the back of the accessory switch bezel and pull the switch out of the bezel.

INSTALLATION

(1) Install the rear window defogger switch into the back of the accessory switch bezel by pushing the switch firmly into the bezel.

(2) Connect the wire harness connectors to the rear of the accessory switches and the cigar lighter/power outlet.

(3) Install the accessory switch bezel to the instrument panel.