CAMSHAFT POSITION SENSOR - 2.4L (Continued)

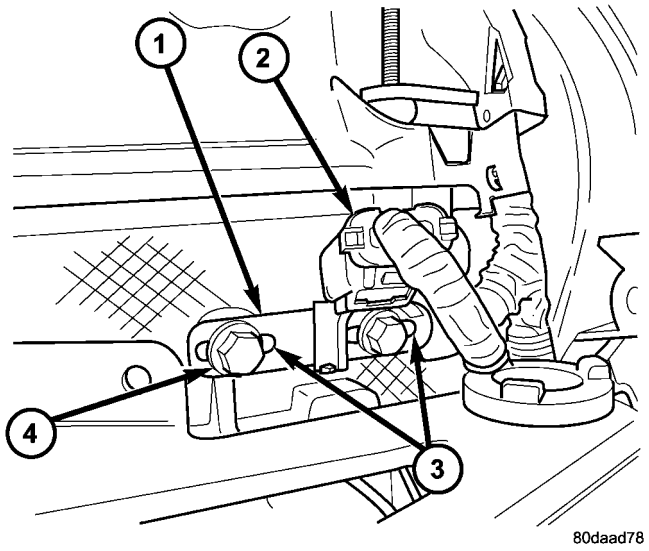

Fig. 7 CMP LOCATION - 2.4L

1 - CMP SENSOR
2 - ELECTRICAL CONNECTOR
3 - SLOTTED HOLES
4 - MOUNTING BOLTS (2)

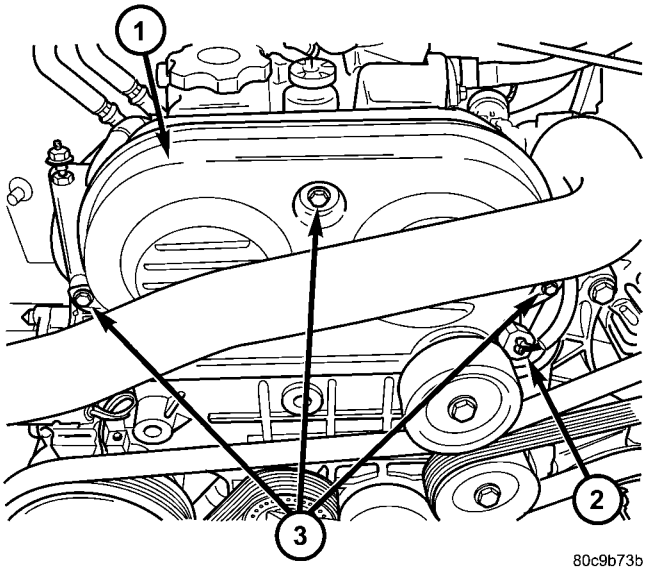

Fig. 8 UPPER TIMING BELT COVER/BOLTS-2.4L

1 - UPPER TIMING BELT COVER
2 - ELECTRICAL CONNECTOR (ECT)
3 - MOUNTING BOLTS (3)

tor from Engine Coolant Temperature (ECT) sensor (Fig. 8). This will prevent damage to sensor.

(2) Rotate (bump over) engine until camshaft timing gear and target wheel (tonewheel) are positioned and aligned to face of sensor as shown in (Fig. 9). **If not positioned as shown in (Fig. 9), damage to both sensor and target wheel will occur when attempting to start engine. Face of sensor MUST be behind target wheel while adjusting.**

(3) Position sensor to cylinder head and install 2 sensor mounting bolts finger tight.

(4) **SENSOR AIR GAP: .030"** Set air gap between rear of target wheel and face of sensor to .030". This can best be accomplished using an L-shaped, wire-type spark plug gapping gauge (Fig. 10). A piece of .030" brass shim stock may also be used.

(5) Gently push sensor forward until it contacts gapping gauge. **Do not push hard on sensor.** Tighten 2 sensor mounting bolts. Refer to torque specifications.

CAUTION: After tightening sensor mounting bolts, recheck air gap and adjust as necessary. Retorque bolts.

(6) Install upper timing belt cover and 3 bolts.
(7) Connect electrical connector to ECT sensor.
(8) Connect electrical connector to CMP sensor.

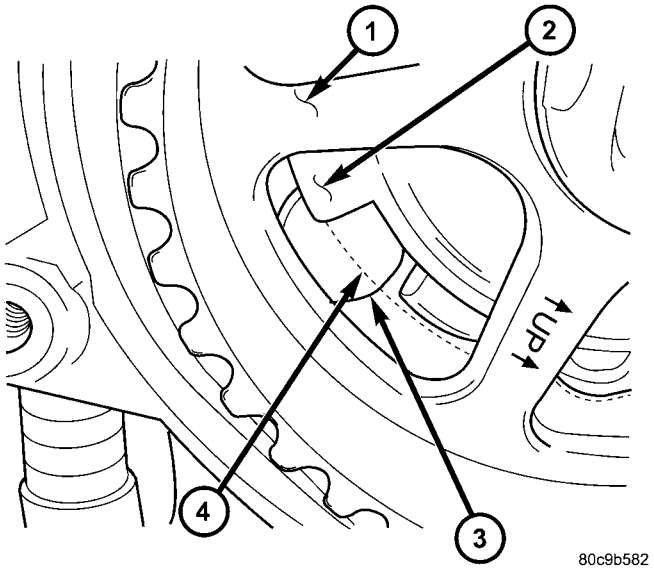

Fig. 9 CMP FACE AT TARGET WHEEL-2.4L

1 - CAMSHAFT DRIVE GEAR
2 - TARGETWHEEL (TONEWHEEL)
3 - FACE OF CMP SENSOR
4 - CUTOUT (NOTCH)