CAMSHAFT POSITION SENSOR - 4.0L (Continued)

REMOVAL - 4.0L

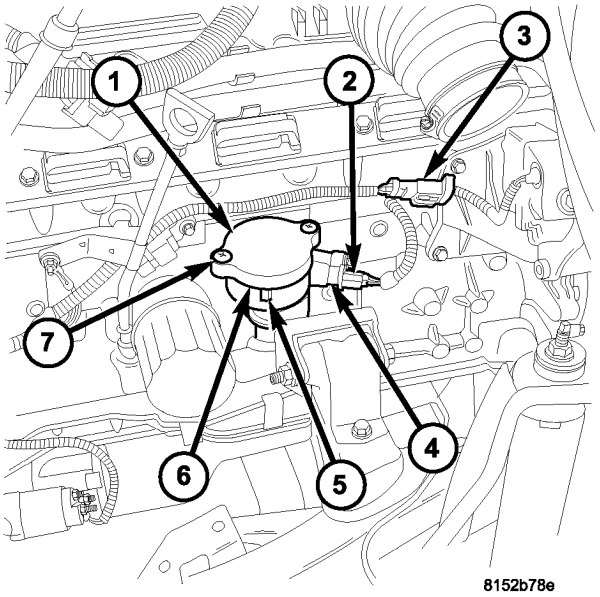


Fig. 13 4.0L CMP LOCATION ('05)

1 - OIL PUMP DRIVE ASSEMBLY
2 - CMP
3 - CMP ELECTRICAL CONNECTOR
4 - HOUSING HOLD DOWN BOLT
5 - HOUSING
6 - PLASTIC COVER
7 - COVER SCREWS (2)

The Camshaft Position Sensor (CMP) on the 4.0L 6–cylinder engine (2) is bolted to the side of the oil pump drive shaft housing assembly (5) (Fig. 13).

NOTE: Do not attempt to rotate the oil pump drive assembly to modify ignition timing.

Two different procedures are used for removal and installation. The first procedure will detail removal and installation of the sensor only. The second procedure will detail removal and installation of the sensor and oil pump drive shaft assembly. The second procedure is to be used if the engine has been disassembled.

CMP SENSOR ONLY - 4.0L

(1) Disconnect CMP electrical jumper harness (3) at engine wiring harness (Fig. 14).

(2) Remove sensor mounting bolt (3) (Fig. 15).

(3) Remove sensor (2) from oil pump drive housing (1) (Fig. 15).

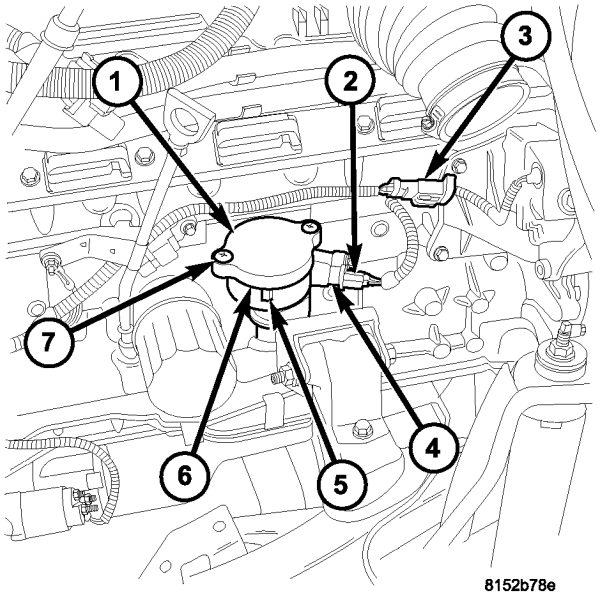


Fig. 14 4.0L CMP LOCATION ('05)

1 - OIL PUMP DRIVE ASSEMBLY
2 - CMP
3 - CMP ELECTRICAL CONNECTOR
4 - HOUSING HOLD DOWN BOLT
5 - HOUSING
6 - PLASTIC COVER
7 - COVER SCREWS (2)

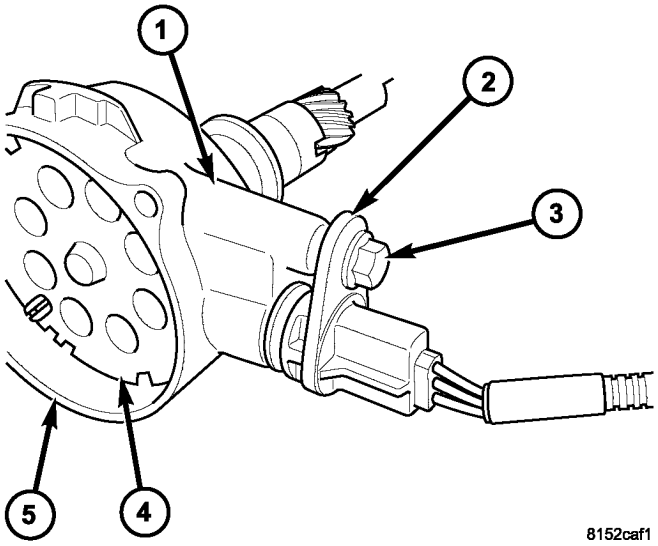


Fig. 15 4.0L CMP REMOVAL/INSTALLATION

1 - OIL PUMP DRIVE HOUSING
2 - CMP SENSOR
3 - SENSOR MOUNTING BOLT
4 - TARGET WHEEL
5 - HOUSING