CAMSHAFT POSITION SENSOR - 4.0L (Continued)

OIL PUMP DRIVE AND CMP SENSOR - 4.0L

If the CMP and oil pump drive are to be removed and installed, do not allow engine crankshaft or camshaft to rotate. CMP sensor relationship will be lost.

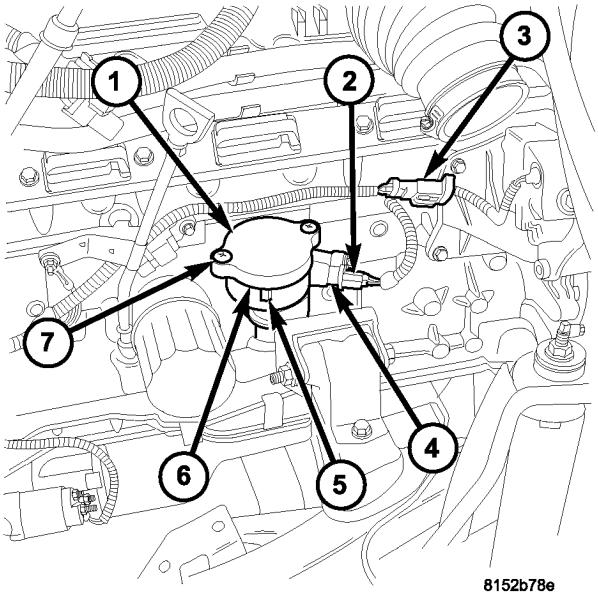

Fig. 16 4.0L CMP LOCATION ('05)

1 - OIL PUMP DRIVE ASSEMBLY
2 - CMP
3 - CMP ELECTRICAL CONNECTOR
4 - HOUSING HOLD DOWN BOLT
5 - HOUSING
6 - PLASTIC COVER
7 - COVER SCREWS (2)

(1) Remove two plastic cover screws (7) (Fig. 16) and remove plastic cover (6).

(2) Note and mark rotational position of target wheel (4) (Fig. 17) in relationship to housing (5).

(3) Disconnect CMP electrical jumper harness (3) at engine wiring harness (Fig. 16).

(4) Before proceeding to next step, mark and note rotational position of oil pump drive housing (5) (Fig. 16) in relationship to engine block. After installation, the CMP sensor should face the 4 o'clock position as viewed from right side of engine.

(5) Remove hold-down bolt (4) and clamp (Fig. 16).

(6) Pull assembly from engine.

(7) Remove and discard old oil pump drive-to-engine block gasket.

INSTALLATION - 4.0L

SENSOR ONLY - 4.0L

(1) Install sensor (2) (Fig. 18) to oil pump drive housing (1).

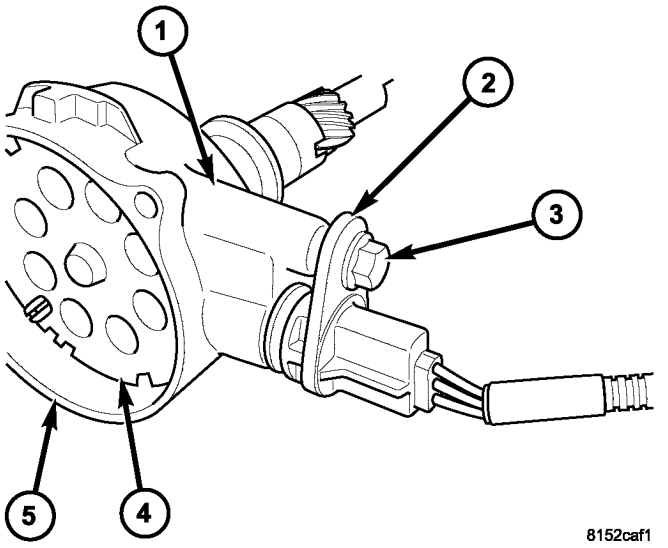

Fig. 17 4.0L CMP REMOVAL/INSTALLATION

1 - OIL PUMP DRIVE HOUSING
2 - CMP SENSOR
3 - SENSOR MOUNTING BOLT
4 - TARGET WHEEL
5 - HOUSING

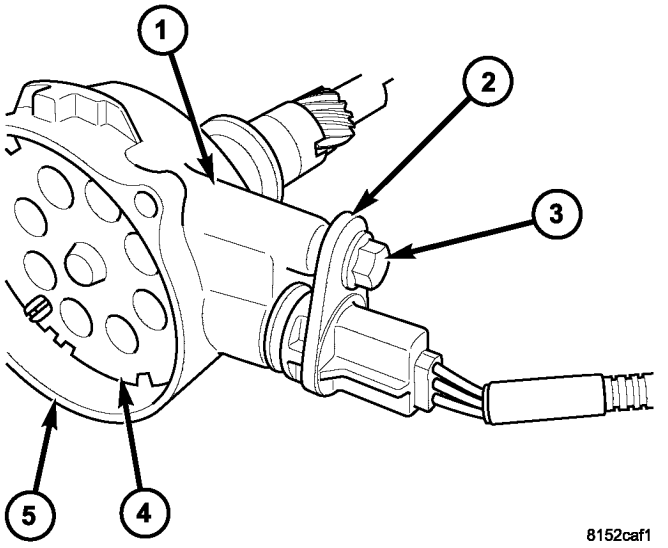

Fig. 18 4.0L CMP REMOVAL/INSTALLATION

1 - OIL PUMP DRIVE HOUSING
2 - CMP SENSOR
3 - SENSOR MOUNTING BOLT
4 - TARGET WHEEL
5 - HOUSING

(2) Install sensor mounting bolt (3) (Fig. 18) and tighten to 2 N·m (15 in. lbs.) torque.

(3) Connect CMP electrical jumper harness (3) (Fig. 19) to engine wiring harness.