INSTRUMENT CLUSTER (Continued)

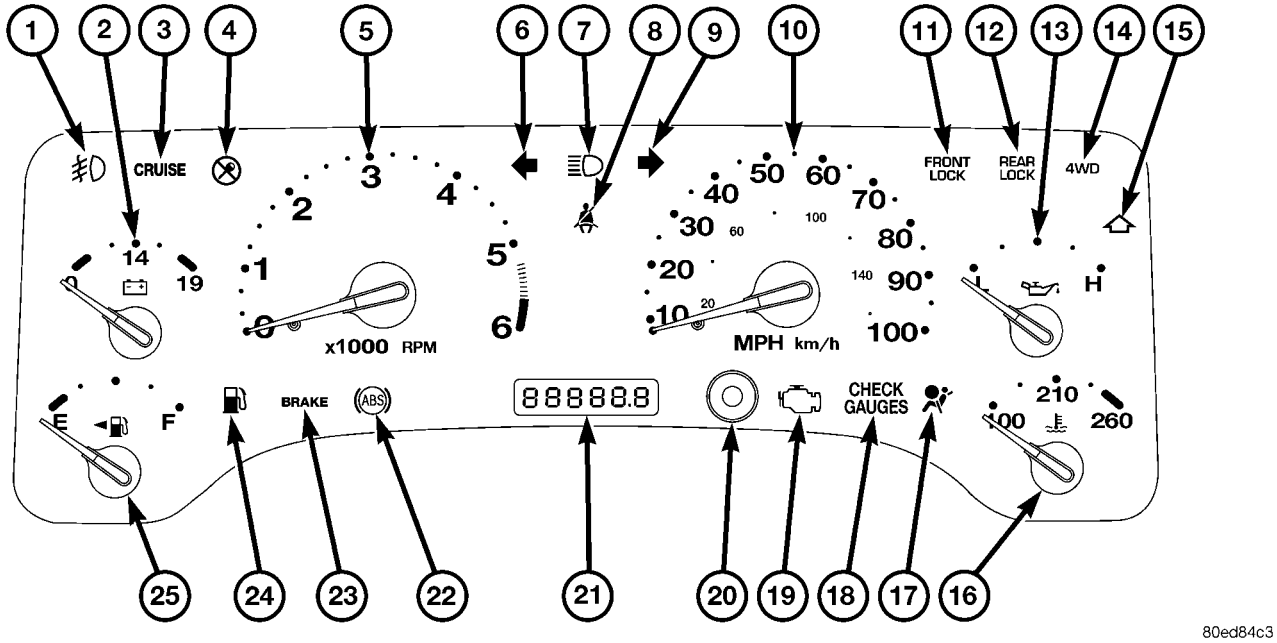

80ed84c3

Fig. 3 Gauges & Indicators

1 - FOG LAMP INDICATOR
2 - VOLTAGE GAUGE
3 - CRUISE INDICATOR
4 - SKIS INDICATOR
5 - TACHOMETER
6 - LEFT TURN INDICATOR
7 - HIGH BEAM INDICATOR
8 - SEATBELT INDICATOR
9 - RIGHT TURN INDICATOR
10 - SPEEDOMETER
11 - FRONT LOCK INDICATOR
12 - REAR LOCK INDICATOR
13 - OIL PRESSURE GAUGE
14 - 4WD INDICATOR
15 - NOT APPLICABLE
16 - ENGINE TEMPERATURE GAUGE
17 - AIRBAG INDICATOR
18 - CHECK GAUGES INDICATOR
19 - MALFUNCTION INDICATOR LAMP
20 - ODOMETER/TRIP ODOMETER SWITCH BUTTON
21 - ODOMETER/TRIP ODOMETER DISPLAY
22 - ABS INDICATOR
23 - BRAKE INDICATOR
24 - LOW FUEL INDICATOR
25 - FUEL GAUGE

tinct visual and/or audible indications of a problem to the vehicle operator. The instrument cluster circuitry may also produce audible warnings for other electronic modules in the vehicle based upon electronic tone request messages received over the PCI data bus. Each audible warning is intended to provide the vehicle operator with an audible alert to supplement a visual indication.

The EMIC circuitry operates on battery current received through the Ignition-Off Draw (IOD) fuse in the Power Distribution Center (PDC) on a non-switched fused B(+) circuit, and on battery current received through a fuse in the fuse block on a fused ignition switch output (run-start) circuit. This arrangement allows the EMIC to provide some features regardless of the ignition switch position, while other features will operate only with the ignition switch in the On or Start positions. The EMIC circuitry is grounded through a ground circuit and take out of the instrument panel wire harness with an eyelet terminal connector that is secured under a ground screw to the back of the instrument panel structural support near the lower left corner of the instrument panel, just inboard of the left instrument panel end bracket.

The EMIC also has a self-diagnostic actuator test capability, which will test each of the PCI bus message-controlled functions of the cluster by lighting the appropriate indicators, positioning the gauge needles at several predetermined calibration points across the gauge faces, and illuminating all segments of the odometer/trip odometer Vacuum-Fluorescent Display (VFD) unit. (Refer to 8 - ELECTRICAL/INSTRUMENT CLUSTER - DIAGNOSIS AND TESTING). See the owner's manual in the vehicle glove box for more information on the features, use and operation of the EMIC.

GAUGES

All gauges receive battery current through the EMIC circuitry only when the ignition switch is in the On or Start positions. With the ignition switch in