INSTRUMENT CLUSTER (Continued)

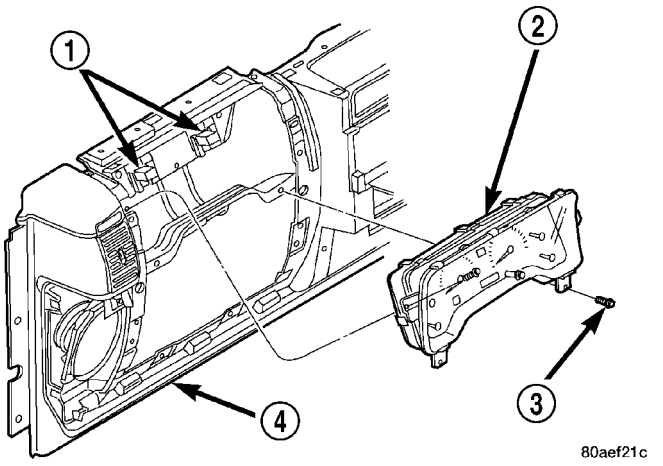

Fig. 4 Instrument Cluster Remove/Install

1 - WIRE HARNESS CONNECTORS
2 - INSTRUMENT CLUSTER
3 - SCREW (4)
4 - INSTRUMENT PANEL

DISASSEMBLY

Some of the components for the instrument cluster used in this vehicle are serviced individually. The serviced components include: the incandescent instrument cluster indicator and illumination lamp bulbs (including the integral bulb holders), the cluster lens, the trip odometer reset button boot, the cluster hood and mask unit, and the cluster housing rear cover. Following are the procedures for disassembling these components from the instrument cluster unit.

WARNING: TO AVOID PERSONAL INJURY OR DEATH, ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, AIRBAG, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT.

CLUSTER BULB

This procedure applies to each of the incandescent cluster illumination lamp or indicator bulb and bulb holder units. However, the illumination lamps and the indicators use different bulb and bulb holder unit sizes. They must never be interchanged.

(1) Disconnect and isolate the battery negative cable.

(2) Remove the instrument cluster from the instrument panel. (Refer to 8 - ELECTRICAL/INSTRUMENT CLUSTER - REMOVAL).

(3) Turn the bulb holder counterclockwise about sixty degrees on the cluster electronic circuit board (Fig. 5).

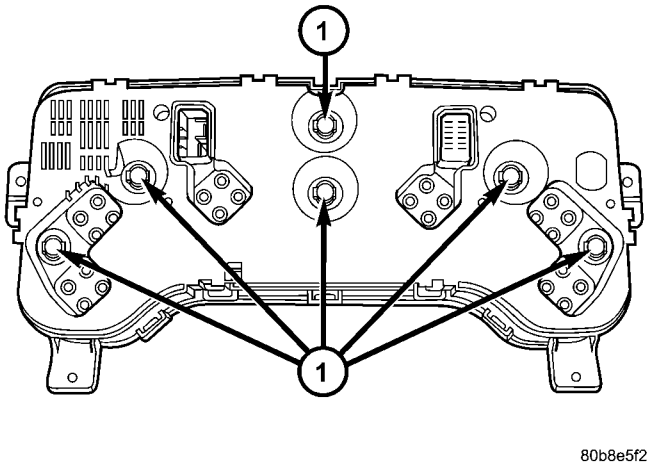

Fig. 5 Cluster Bulb Locations

1 - CLUSTER INCANDESCENT BULBS

(4) Pull the bulb and bulb holder unit straight back to remove it from the bulb mounting hole in the cluster electronic circuit board.

CLUSTER LENS

(1) Disconnect and isolate the battery negative cable.

(2) Remove the instrument cluster from the instrument panel. (Refer to 8 - ELECTRICAL/INSTRUMENT CLUSTER - REMOVAL).

(3) Work around the perimeter of the cluster lens and disengage each of the eight latches that secure the lens to the cluster mask and the cluster housing (Fig. 6).

(4) Gently pull the cluster lens away from the face of the instrument cluster.

TRIP ODOMETER RESET BUTTON BOOT

(1) Disconnect and isolate the battery negative cable.

(2) Remove the instrument cluster from the instrument panel. (Refer to 8 - ELECTRICAL/INSTRUMENT CLUSTER - REMOVAL).

(3) Remove the cluster lens from the cluster housing. Refer to CLUSTER LENS.

(4) Remove the odometer reset button boot by pulling it straight out of the pocketed hole from the face of the cluster lens (Fig. 6).