INSTRUMENT CLUSTER (Continued)

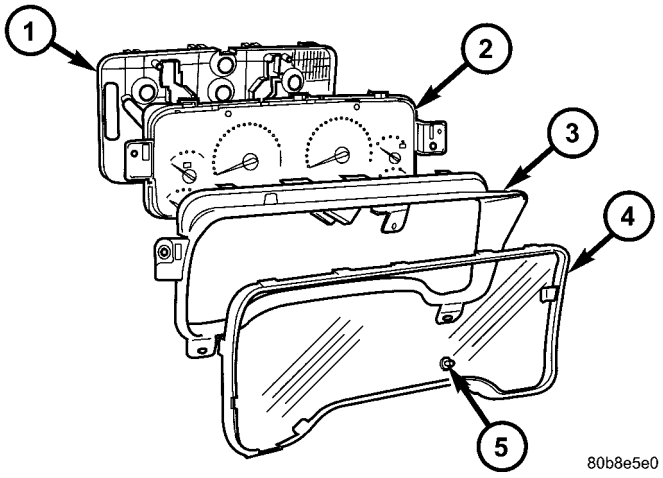

Fig. 6 Instrument Cluster Components

1 - REAR COVER
2 - CLUSTER HOUSING
3 - CLUSTER HOOD & MASK
4 - CLUSTER LENS
5 - SWITCH BUTTON BOOT

CLUSTER HOOD AND MASK

(1) Disconnect and isolate the battery negative cable.

(2) Remove the instrument cluster from the instrument panel. (Refer to 8 - ELECTRICAL/INSTRUMENT CLUSTER - REMOVAL).

(3) Remove the cluster lens from the cluster housing. Refer to CLUSTER LENS.

(4) Work around the perimeter of the cluster hood and mask unit and disengage each of the five latches that secure the cluster hood and mask unit to the cluster housing (Fig. 6).

(5) Gently pull the cluster hood and mask unit away from the face of the instrument cluster housing.

CLUSTER HOUSING REAR COVER

(1) Disconnect and isolate the battery negative cable.

(2) Remove the instrument cluster from the instrument panel. (Refer to 8 - ELECTRICAL/INSTRUMENT CLUSTER - REMOVAL).

(3) Remove the screw adjacent to each of the two cluster connector receptacles that secure the rear cover to the cluster housing.

(4) Work around the perimeter of the cluster housing rear cover and disengage each of the eight latches that secure the cover to the outside of the cluster housing (Fig. 6).

(5) Disengage the one inboard latch located in a receptacle near the lower edge of the rear cover just to the right of center that secures the rear cover to the cluster housing.

(6) Gently pull the cluster housing rear cover away from the back of the cluster housing.

ASSEMBLY

Some of the components for the instrument cluster used in this vehicle are serviced individually. The serviced components include: the incandescent instrument cluster indicator and illumination lamp bulbs (including the integral bulb holders), the cluster lens, the trip odometer reset button boot, the cluster hood and mask unit, and the cluster housing rear cover. Following are the procedures for disassembling these components from the instrument cluster unit.

WARNING: TO AVOID PERSONAL INJURY OR DEATH, ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, AIRBAG, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT.

CLUSTER BULB

This procedure applies to each of the incandescent cluster illumination lamp or indicator bulb and bulb holder units. However, the illumination lamps and the indicators use different bulb and bulb holder unit sizes. They must never be interchanged.

CAUTION: Be certain that any bulb and bulb holder unit removed from the cluster electronic circuit board is reinstalled in the correct position. Always use the correct bulb size and type for replacement. An incorrect bulb size or type may overheat and cause damage to the instrument cluster, the electronic circuit board and/or the gauges.

(1) Insert the bulb and bulb holder unit straight into the correct bulb mounting hole in the cluster electronic circuit board (Fig. 5).

(2) With the bulb holder fully seated against the cluster electronic circuit board, turn the bulb holder clockwise about sixty degrees to lock it into place.

(3) Reinstall the instrument cluster onto the instrument panel. (Refer to 8 - ELECTRICAL/INSTRUMENT CLUSTER - INSTALLATION).

(4) Reconnect the battery negative cable.