CENTER HIGH MOUNTED STOP LAMP (Continued)

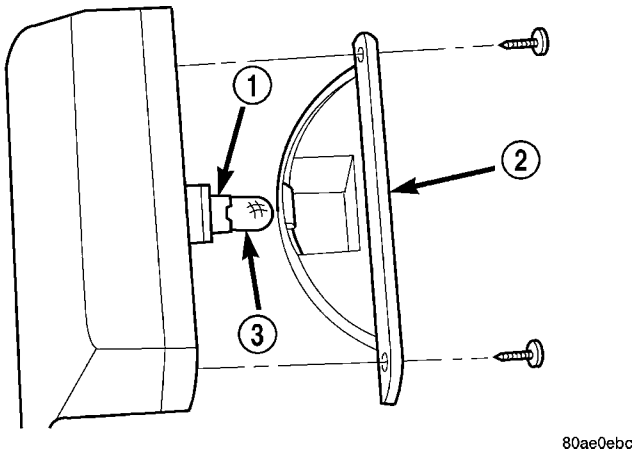

Fig. 4 CHMSL Lamp

1 - SOCKET
2 - CHMSL LENS
3 - LAMP

COMBINATION FLASHER

DESCRIPTION

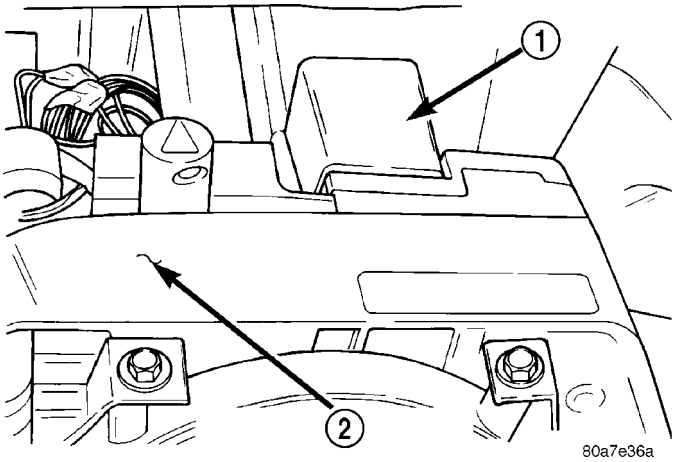

Fig. 5 Combination Flasher

1 - COMBINATION FLASHER
2 - LEFT MULTI-FUNCTION SWITCH

The combination flasher is located to the back of the left multi-function switch housing on the top of the steering column, where it is concealed beneath the upper steering column shroud (Fig. 5). The combination flasher is a smart relay that functions as both the turn signal system and the hazard warning system flasher. The combination flasher contains active electronic Integrated Circuitry (IC) elements. This flasher is designed to handle the current flow requirements of the factory-installed lighting. If supplemental lighting is added to the turn signal lamp circuits, such as when towing a trailer with lights, the combination flasher will automatically try to compensate to keep the flash rate the same.

The combination flasher cannot be repaired or adjusted and, if faulty or damaged, it must be replaced.

OPERATION

Constant battery voltage is supplied to the flasher so that it can perform the hazard warning function, and ignition switched battery voltage is supplied for the turn signal function. The Integrated Circuit (IC) within the combination flasher contains the logic that controls the flasher operation and the flash rate. The IC receives sense ground inputs from the multi-function switch for the hazard flasher, right turn signal, and left turn signal. A special design feature of the combination flasher allows it to ″sense″ that a turn signal circuit or bulb is not operating, and provide the driver an indication of the condition by flashing the remaining bulbs in the affected circuit at a higher rate.

Because of the active elements within the combination flasher, it cannot be tested with conventional automotive electrical test equipment. If the combination flasher is believed to be faulty, test the turn signal and hazard warning system prior to replacement. Refer to (Refer to 8 - ELECTRICAL/LAMPS/LIGHTING - EXTERIOR - DIAGNOSIS AND TESTING).

REMOVAL

WARNING: ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE AIRBAG SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE AIRBAG SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE AIRBAG SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY.

(1) Disconnect and isolate the battery negative cable.

(2) Remove the steering column cover from the instrument panel. (Refer to 23 - BODY/INSTRUMENT PANEL/STEERING COLUMN OPENING COVER - REMOVAL).

(3) Remove the screws that secure the lower steering column shroud to the upper shroud (Fig. 6).

(4) Move the tilt steering column to the fully lowered position and leave the tilt release lever in the released position.

(5) Remove the upper shroud from the steering column.