FOG LAMP RELAY

DESCRIPTION

The fog lamp relay is located in the Power Distribution Center (PDC) in the engine compartment of the vehicle. The fog lamp relay is a conventional International Standards Organization (ISO) micro relay (Fig. 12). Relays conforming to the ISO specifications have common physical dimensions, current capacities, terminal patterns, and terminal functions. The relay is contained within a small, rectangular, molded plastic housing and is connected to all of the required inputs and outputs by five integral male spade-type terminals that extend from the bottom of the relay base.

The fog lamp relay cannot be adjusted or repaired and, if faulty or damaged, it must be replaced.

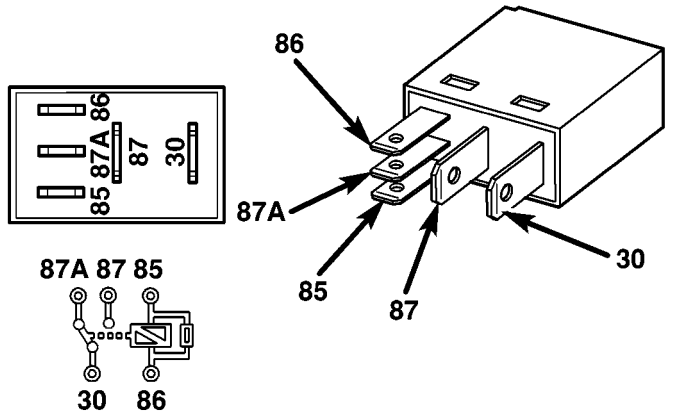

80ce807b

Fig. 12 ISO MICRO RELAY

30 - COMMON FEED
85 - COIL GROUND
86 - COIL BATTERY
87 - NORMALLY OPEN
87A - NORMALLY CLOSED

OPERATION

The fog lamp relay is an electromechanical switch that uses a low current input from the multi-function switch to control a high current output to the fog lamps. The movable common feed contact point is held against the fixed normally closed contact point by spring pressure. When the relay coil is energized, an electromagnetic field is produced by the coil windings. This electromagnetic field draws the movable relay contact point away from the fixed normally closed contact point, and holds it against the fixed normally open contact point. When the relay coil is de-energized, spring pressure returns the movable contact point back against the fixed normally closed contact point. A resistor is connected in parallel with the relay coil in the relay, and helps to dissipate voltage spikes and electromagnetic interference that can be generated as the electromagnetic field of the relay coil collapses.

The fog lamp relay terminals are connected to the vehicle electrical system through a connector receptacle in the Power Distribution Center (PDC).

The fog lamp relay can be diagnosed using conventional diagnostic tools and methods. Refer to the appropriate wiring information for diagnosis and testing of the fog lamp micro-relay and for complete wiring diagrams.

REMOVAL

(1) Disconnect and isolate the battery negative cable.

(2) Remove the cover for the Power Distribution Center (PDC).

(3) Remove the fog lamp relay by grasping it firmly and pulling it straight out from the receptacle in the PDC.

INSTALLATION

(1) Position the fog lamp relay to the proper receptacle in the Power Distribution Center (PDC).

(2) Align the fog lamp relay terminals with the terminal cavities in the PDC.

(3) Press firmly and evenly on the top of the fog lamp relay until the terminals are fully seated in the PDC.

(4) Reconnect the battery negative cable.

FOG LAMP UNIT - REAR

DESCRIPTION

Some vehicles are equipped with a rear fog lamp. The lamp unit can be found mounted to the rear bumper assembly. The rear fog lamp unit utilizes a red lens with a clear lamp for brightness, and an illuminated indicator in the instrument cluster.

Rear fog lamp(s) are standard equipment in certain parts of the world where excessive fog is experienced on a regular basis.

OPERATION

Battery positive (B+) voltage is supplied to the left multi-function switch. With the headlamp switch in the on position, battery positive voltage is supplied to the rear fog lamp switch contacts within the multi-function switch. Pulling the headlamp switch knob outward and then rotating the knob one detent counterclockwise will activate the rear fog lamp(s) and illuminate the rear fog lamp indicator in the instrument cluster. The rear fog lamp(s) can only be activated when either the Low Beam or High Beam headlamps are on. Refer to Wiring Diagrams for a complete system schematic.