FRONT PARK/TURN SIGNAL LAMP UNIT (Continued)

OPERATION

The parking light function is controlled by the headlamp switch located on the instrument panel. The turn signal function is controlled by the left multi-function switch located on the steering column. Each front turn signal/parking lamp assembly can be serviced separately.

REMOVAL

(1) Disconnect and isolate the battery negative cable.

(2) Remove the screws that secure the park/turn signal lamp housing to the front fender (Fig. 16).

(3) Remove the park/turn signal lamp housing from the fender.

(4) Rotate the socket one-third turn counterclockwise and separate the socket and lamp from the housing.

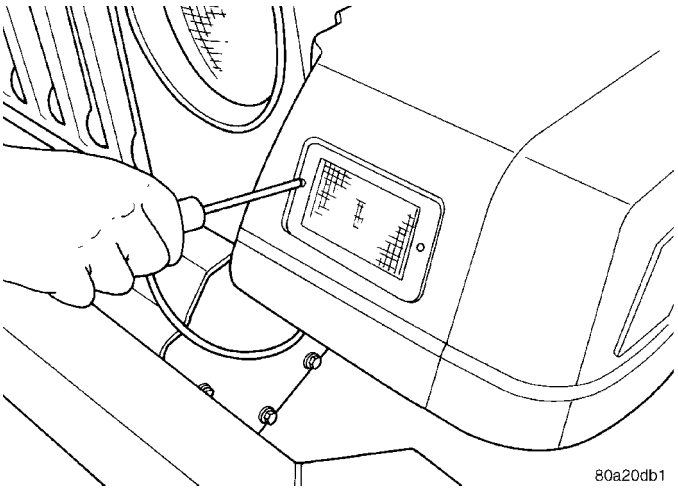

Fig. 16 Park/Turn Signal Lamp Assembly

INSTALLATION

(1) Install the socket and lamp into the housing and rotate the socket one-third turn clockwise.

(2) Position the park/turn signal lamp housing into the fender.

(3) Install the screws that secure the park/turn signal lamp housing to the fender. Tighten the screws securely.

(4) Reconnect the battery negative cable.

FRONT PARK/TURN SIGNAL LAMP

REMOVAL

(1) Disconnect and isolate the battery negative cable.

(2) Remove the park/turn signal lamp housing from the fender (Refer to 8 - ELECTRICAL/LAMPS/LIGHTING - EXTERIOR/PARK/TURN SIGNAL LAMP UNIT - REMOVAL).

(3) Pull the lamp straight out of the socket.

INSTALLATION

(1) Install the lamp by pushing it into the socket.

(2) Install the lamp housing into the fender (Refer to 8 - ELECTRICAL/LAMPS/LIGHTING - EXTERIOR/PARK/TURN SIGNAL LAMP UNIT - INSTALLATION).

(3) Reconnect the battery negative cable.

HEADLAMP

DESCRIPTION

The headlamps are sealed beam units. Each unit contains a high and low beam filament.

OPERATION

The headlamps are turned on and off by the headlamp switch. The high and low beam selection is controlled by the left multi-function switch. Each headlamp can be serviced individually.

REMOVAL

(1) Disconnect and isolate the battery negative cable.

(2) Remove the screws that secure the headlamp bezel to the grille (Fig. 17).

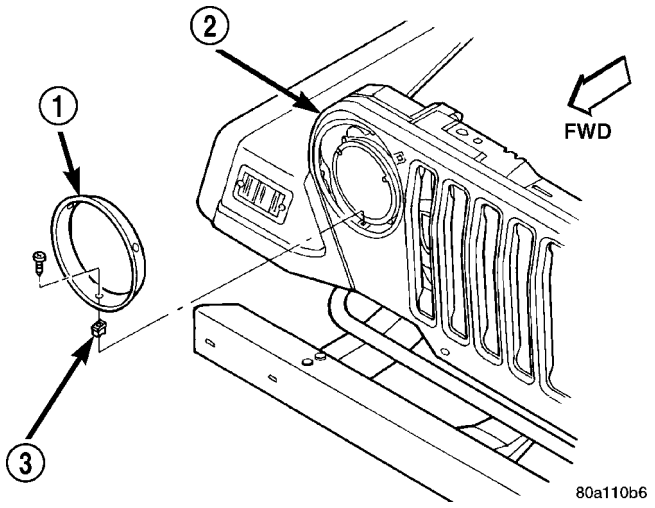

Fig. 17 Headlamp Bezel

1 - HEADLAMP BEZEL
2 - GRILLE
3 - RETAINER

(3) Remove the screws that secure the headlamp retaining ring to the headlamp bucket (Fig. 18).

(4) Remove the headlamp from the bucket and disconnect the wire harness connector from the headlamp (Fig. 19).