HEADLAMP (Continued)

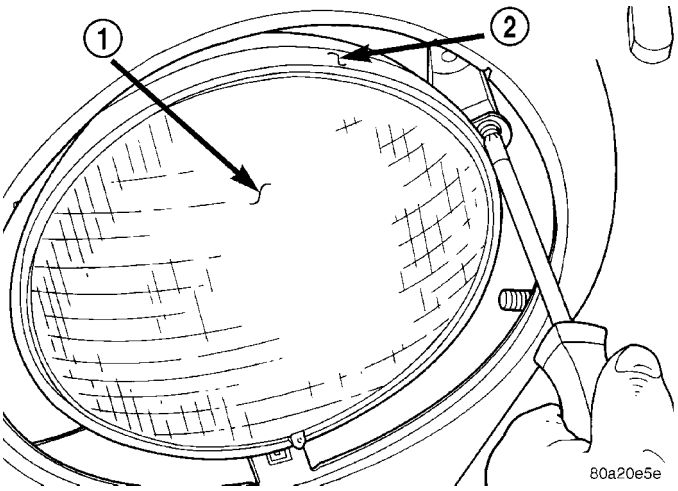

Fig. 18 Headlamp Retaining Ring

1 - HEADLAMP
2 - HEADLAMP RETAINING RING

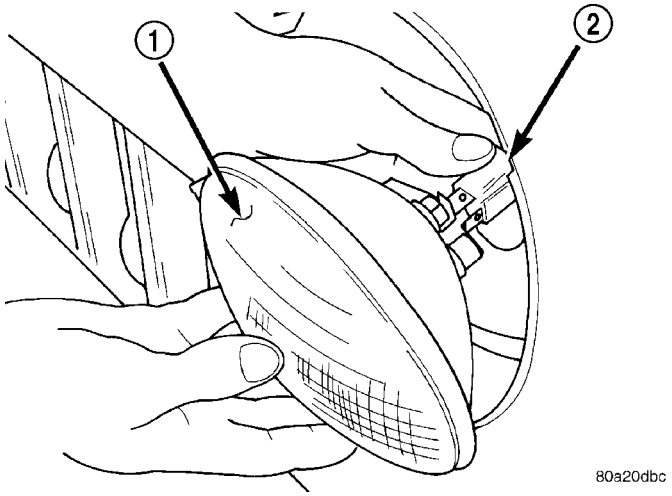

Fig. 19 Headlamp Wire Harness Connector

1 - HEADLAMP
2 - WIRE HARNESS CONNECTOR

INSTALLATION

(1) Connect the wire harness connector to the headlamp and position the headlamp into the bucket.

NOTE: Insure the bosses on the headlamp align with the slots in the bucket.

(2) Align the headlamp bosses with the slots in the bucket and install the retaining ring.

(3) Install the screws that secure the headlamp retaining ring to the headlamp bucket. Tighten the screws securely.

(4) Install the headlamp bezel.

NOTE: Do not overtighten the screws or damage to the headlamp bezel may result.

(5) Install the screws that secure the headlamp bezel. Tighten the screws securely.

(6) Reconnect the battery negative cable.

ADJUSTMENTS

HEADLAMP ALIGNMENT PREPARATION

NOTE: If the vehicle is equipped with a headlamp leveling system, be certain the headlamp leveling switch is in the "0" position.

(1) Verify headlamps are operational in all modes and illuminated in the low beam setting.

(2) Correct defective components that could hinder proper headlamp alignment.

(3) Verify proper tire inflation.

(4) Clean headlamp lenses.

(5) Verify that luggage area is not heavily loaded.

(6) Fuel tank should be FULL. Add 2.94 kg (6.5 lbs.) of weight over the fuel tank for each estimated gallon of missing fuel.

ALIGNMENT SCREEN PREPARATION

(1) Position vehicle on a level surface perpendicular to a flat wall 7.62 meters (25 ft.), export vehicles use 10 meters (32.8 ft.), away from front of headlamp lens (Fig. 20).

(2) If necessary, tape a line on the floor 7.62 meters (25 ft.), export vehicles use 10 meters (32.8 ft.), away from and parallel to the wall.

(3) Measure from the floor up 1.27 meters (5 ft.) and tape a vertical line on the wall at the centerline of the vehicle. Sight along the centerline of the vehicle (from rear of vehicle forward) to verify accuracy of the line placement.

(4) Rock vehicle side-to-side three times to allow suspension to stabilize.

(5) Jounce front suspension three times by pushing downward on front bumper and releasing.

(6) Measure the distance from the center of headlamp lens to the floor. Transfer measurement to the alignment screen (with tape). Use this horizontal line for up/down adjustment reference.

(7) Place a tape line 130 mm (5.12 in.) below parallel to center of headlamp line.

(8) Measure distance from the centerline of the vehicle to the center of each headlamp being aligned. Transfer measurements to screen (with tape) to each side of vehicle centerline. Use these lines for left/right adjustment reference.

HEADLAMP ADJUSTMENT

(1) Place headlamps on LOW beam.

(2) Cover front of the headlamp that is not being adjusted.