HEADLAMP LEVELING SWITCH

REMOVAL

HEADLAMP LEVELING SWITCH

WARNING: ON VEHICLES EQUIPPED WITH AIR-BAGS, REFER TO GROUP 8M - PASSIVE RESTRAINT SYSTEMS BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. FAILURE TO TAKE THE PROPER PRE-CAUTIONS COULD RESULT IN ACCIDENTAL AIR-BAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY.

(1) Disconnect the negative battery cable.
(2) Using a flat blade screwdriver or similar tool between the headlamp leveling switch and the steering column cover (Fig. 22). Gently pry the headlamp leveling switch out of the steering column cover.

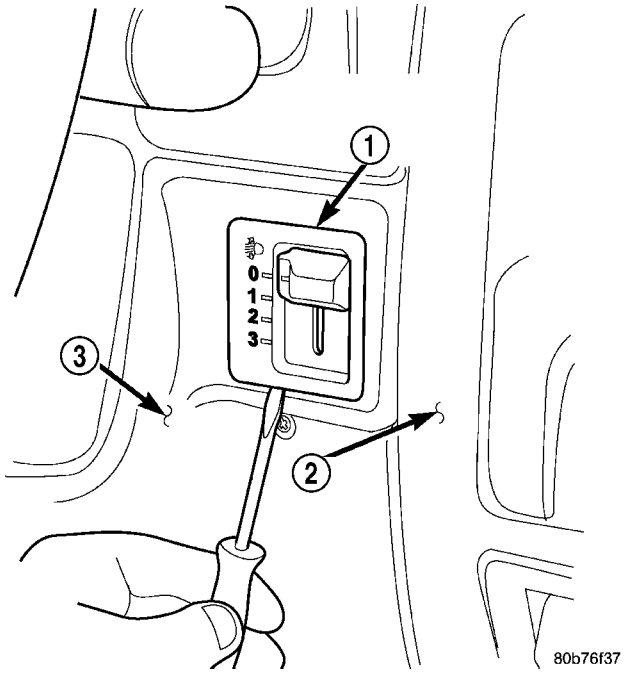

Fig. 22 Headlamp Leveling Switch

1 - HEADLAMP LEVELING SWITCH
2 - I/P CENTER BEZEL
3 - STEERING COLUMN COVER

(3) Disconnect the headlamp leveling switch electrical connector (Fig. 23) and remove the headlamp leveling switch.

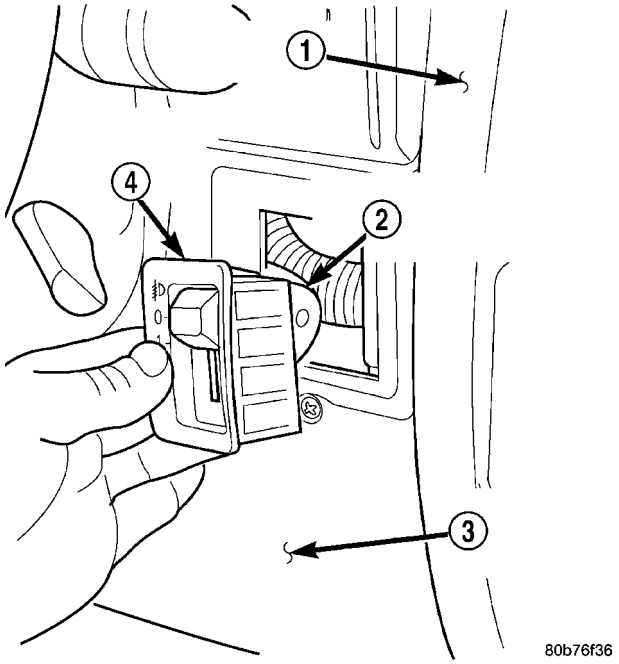

Fig. 23 Headlamp Leveling Switch Electrical Connector

1 - I/P CENTER BEZEL
2 - HEADLAMP LEVELING SWITCH ELECTRICAL CONNECTOR
3 - STEERING COLUMN COVER
4 - HEADLAMP LEVELING SWITCH

INSTALLATION

(1) Position the headlamp leveling switch in front of the steering column cover access hole and connect the switch electrical connector (Fig. 23).
(2) Properly seat the headlamp leveling switch into the steering column cover.
(3) Reconnect negative battery cable.

HEADLAMP LEVELING MOTOR

DIAGNOSIS AND TESTING - HEADLAMP LEVELING SYSTEM

The following test is designed to diagnosis a faulty headlamp leveling system. Refer to Wiring Diagrams for a complete system schematic.

NOTE: Headlamps must be operating properly and the battery must be completely charged (12.4v) prior to testing. It may also be necessary to install battery charger on the vehicles electrical system when performing this test. Refer to the Battery section of the service manual for detailed information.