LEFT MULTI-FUNCTION SWITCH (Continued)

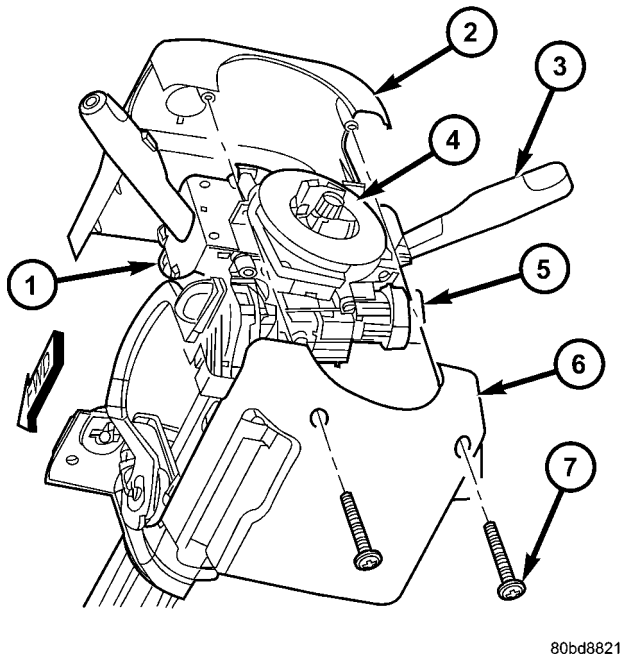

Fig. 27 Steering Column Shrouds Remove/Install

1 - LEFT MULTI-FUNCTION SWITCH
2 - UPPER SHROUD
3 - RIGHT MULTI-FUNCTION SWITCH
4 - CLOCKSPRING
5 - IGNITION LOCK CYLINDER HOUSING
6 - LOWER SHROUD
7 - SCREW (2)

(8) Remove the two screws that secure the multi-function switch assembly to the upper steering column housing (Fig. 28).

(9) Remove the multi-function switch assembly from the upper steering column housing.

(10) Remove the two small screws that secure the right multi-function switch to the left multi-function switch mounting housing.

(11) Grasp the right multi-function switch control stalk firmly and pull the switch toward the right far enough to disengage the alignment pins on the top (1) and bottom (2) of the right switch housing from the alignment ramps on the left multi-function switch mounting housing.

(12) Remove the right multi-function switch from the left multi-function switch.

(13) Remove the combination flasher from the connector receptacle on the back of the left multi-function switch.

INSTALLATION

WARNING: ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE AIRBAG SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE AIRBAG SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE AIRBAG SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY.

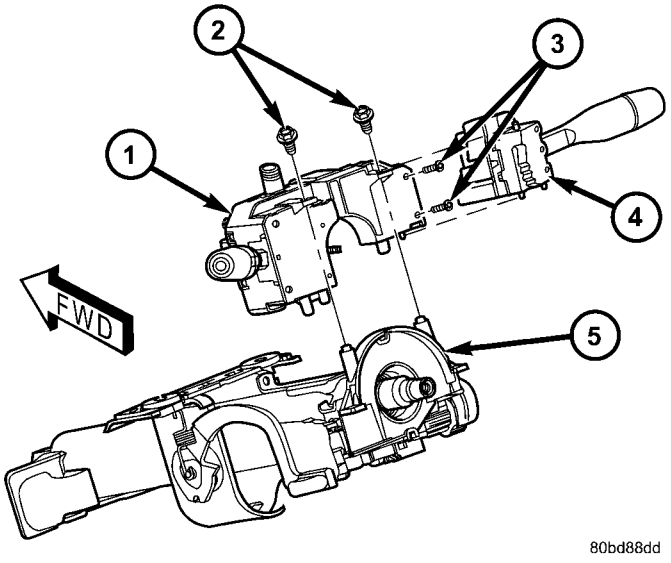

Fig. 28 Multi-Function Switch Remove/Install

1 - LEFT MULTI-FUNCTION SWITCH
2 - SCREW (2)
3 - SCREW (2)
4 - RIGHT MULTI-FUNCTION SWITCH
5 - UPPER STEERING COLUMN HOUSING

(1) Install the combination flasher into the connector receptacle on the back of the left multi-function switch.

(2) Position the right multi-function switch to the left multi-function switch.

(3) Grasp the right multi-function switch control stalk firmly and slide the switch toward the left far enough to engage the alignment pins on the top (1) and bottom (2) of the right switch housing into the alignment ramps on the left multi-function switch mounting housing.

(4) Install and tighten the screws that secure the right multi-function switch to the left multi-function switch mounting housing (Fig. 28). Tighten the screws to 2 N·m (17 in. lbs.).

(5) Position the multi-function switch assembly onto the upper steering column housing.

(6) Install and tighten the screws that secure the multi-function switch assembly to the upper steering column housing. Tighten the screws to 2 N·m (17 in. lbs.).