LEFT MULTI-FUNCTION SWITCH (Continued)

(7) Reconnect the cross body wire harness connector for the right multi-function switch to the connector receptacle on the back of the switch.

(8) Reconnect the cross body wire harness connector for the left multi-function switch to the connector on the back of the switch.

(9) Position both the upper and lower shrouds onto the steering column (Fig. 29). Be certain that the locating tabs for the left and right multi-function switch control stalk watershields are properly engaged in the openings of both the upper and lower shrouds.

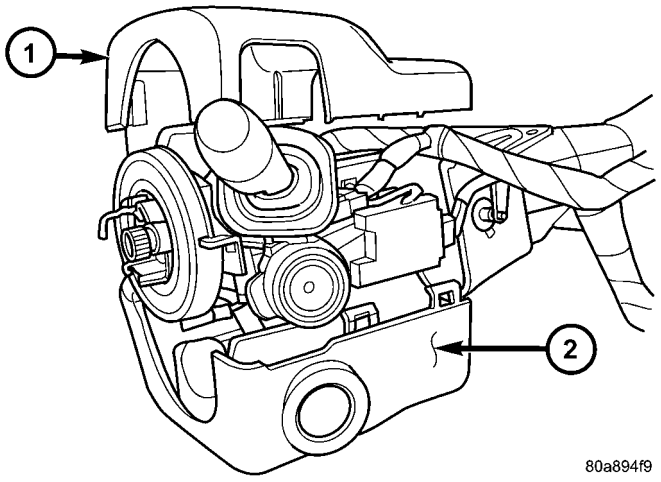

Fig. 29 Shroud Remove/Install

1 - UPPER SHROUD
2 - LOWER SHROUD

(10) Install and tighten the screws that secure the lower steering column shroud to the upper shroud. Tighten the screws to 2 N·m (17 in. lbs.).

(11) If the vehicle is equipped with the optional tilt steering column, move the tilt steering column to the fully raised position and secure it in place by moving the tilt release lever back to the locked (up) position.

(12) Reinstall the steering column opening cover onto the instrument panel. (Refer to 23 - BODY/INSTRUMENT PANEL/STEERING COLUMN OPENING COVER - INSTALLATION).

(13) Reconnect the battery negative cable.

SIDE MARKER LAMP UNIT

REMOVAL

(1) Disconnect and isolate the battery negative cable.

(2) From underside of the fender flare, remove the nut that secures the side marker lamp housing to the front fender flare.

(3) Remove the lamp housing from the fender flare.

(4) Rotate the socket one-third turn counterclockwise and separate the socket and lamp from the housing.

INSTALLATION

(1) Install the socket and lamp into the housing and rotate the socket one-third turn clockwise.

(2) Position the side marker lamp housing into the front fender flare.

(3) Install the nut that secures the side marker lamp housing to the fender flare. Tighten the nut securely.

(4) Reconnect battery negative cable.

SIDE MARKER LAMP

REMOVAL

(1) Disconnect and isolate the negative battery cable.

(2) From underside of the fender flare, rotate the side marker lamp socket one-third turn counterclockwise and separate it from the side marker lamp housing.

(3) Remove the lamp from the socket by pulling it straight out of the socket.

INSTALLATION

(1) Install the side marker lamp into the socket by pushing it straight into the socket.

(2) Install the socket into the housing and rotate the socket one-third turn clockwise.

(3) Reconnect the battery negative cable.

REPEATER LAMP

DESCRIPTION

Some export models are equipped with side repeater lamps instead of side marker lamps. The side repeater lamp operates with the turn signals and has an amber colored lens and a clear lamp. For Removal and Installation procedures, refer to Side Marker Lamps within this Group.

OPERATION

The side repeater lamps operate in series with the front and rear turn signal lamps and are controlled by the steering column mounted multi-function switch.

DIAGNOSIS AND TESTING - SIDE REPEATER LAMP

The following chart is designed to diagnosis a faulty side repeater lamp with the turn signals operating normally. Refer to Wiring Diagrams for a complete system schematic.