REPEATER LAMP (Continued)

SIDE REPEATER LAMP CONDITION CHART

CONDITION	POSSIBLE CAUSES	CORRECTION
TURN SIGNALS OPERATE NORMALLY, ONE REPEATER LAMP DOES NOT ILLUMINATE	1. Inoperative, damaged or burned out lamp.	4. Replace the lamp.
	2. Poor electrical connection at lamp.	2. Check for proper wire harness connection and circuit terminal tension at the lamp.
	3. Open or high resistance in the voltage circuit to the inoperative lamp.	3. Repair the open or high resistance in the repeater lamp voltage circuit.
	4. Open, high resistance in the ground circuit to the inoperative lamp.	4. Repair the open, high resistance in the repeater lamp ground circuit.

TAIL LAMP UNIT

DESCRIPTION

Each tail lamp assembly contains a lens, housing and two lamps. One lamp has two filaments and is used for tail, stop, turn signal, rear side marker and license plate (left side only) lamp functions. The other lamp has a single filament and is used for back-up light illumination.

OPERATION

Each tail lamp assembly can be serviced separately. Each lamp can also be serviced separately. The headlamp switch controls tail lamp operation. The multi-function switch controls turn signal operation. The back-up light switch controls back-up light operation. The brake lamp switch controls stop lamp operation.

REMOVAL

(1) Disconnect and isolate the negative battery cable.

(2) From the underside of the vehicle, remove the push-in fastener that secures the bottom rear edge of the rear wheelhouse splash shield to the body.

(3) Pull the rear of the wheelhouse splash shield away from the body and reach upward to disconnect the wire harness connector from the tail lamp.

(4) Remove the screws that secure the tail lamp lens to the tail lamp housing (Fig. 30).

(5) Remove the tail lamp lens and gasket from the tail lamp housing.

(6) Remove the bolts that secure the tail lamp housing to the body.

(7) Remove the tail lamp housing from the body.

INSTALLATION

(1) Position the tail lamp housing to the body.

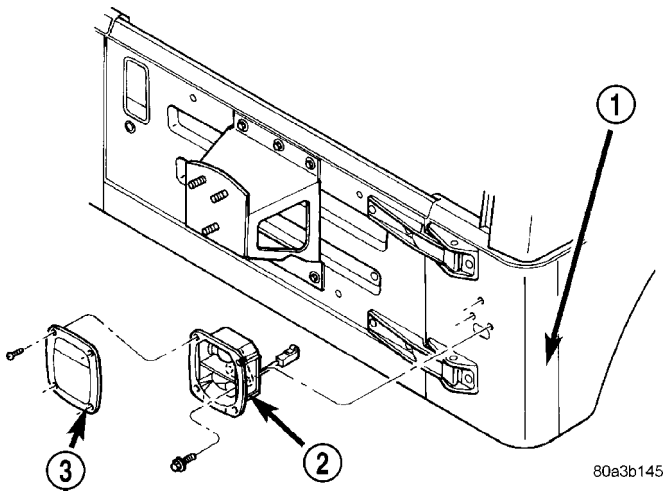

Fig. 30 Tail Lamp Housing

1 - BODY
2 - TAIL LAMP HOUSING
3 - TAIL LAMP LENS

(2) Install the bolts that secure the tail lamp housing to the body. Tighten the bolts securely.

NOTE: Install the tail lamp lens with the clear portion (back-up lens) at the top of the housing. Make sure that the gasket is correctly in place and not twisted or torn.

(3) Install the tail lamp lens and gasket onto the tail lamp housing.

NOTE: Do not overtighten the screws or damage to the tail lamp lens may result.

(4) Install the screws that secure the tail lamp lens to the tail lamp housing. Tighten the screws securely.

(5) Connect the wire harness connector to the tail lamp.