UNDERHOOD LAMP UNIT

REMOVAL

(1) Disconnect and isolate the negative battery cable.

(2) Disconnect the wire harness connector from the underhood lamp (Fig. 32).

(3) Remove the screw that secures the underhood lamp to the inner hood panel.

(4) Remove the underhood lamp from the vehicle.

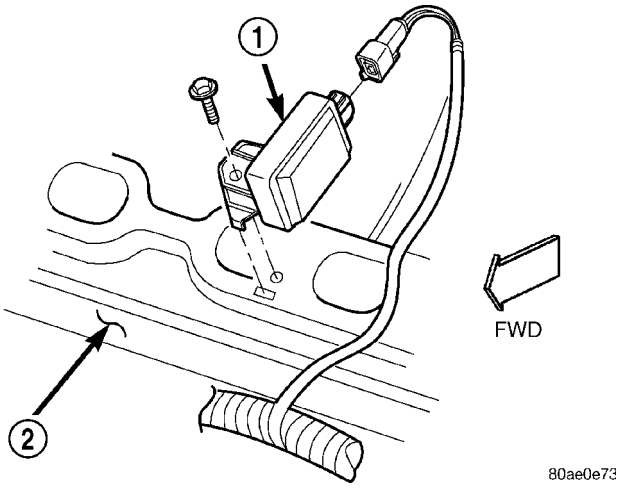

Fig. 32 Underhood Lamp

1 - UNDERHOOD LAMP
2 - HOOD

INSTALLATION

(1) Position the underhood lamp onto the inner hood panel.

(2) Install the screw that secures the underhood lamp to the inner hood panel. Tighten the screw securely.

(3) Connect the wire harness connector to the underhood lamp.

(4) Reconnect the negative battery cable.

UNDERHOOD LAMP

REMOVAL

(1) Disconnect and isolate the negative battery cable.

(2) Insert a small flat blade in the access slot between the lamp housing and lamp lens.

(3) Pry the lamp lens upward and remove the lamp lens.

(4) Press the lamp terminal inward (Fig. 33) to release the lamp.

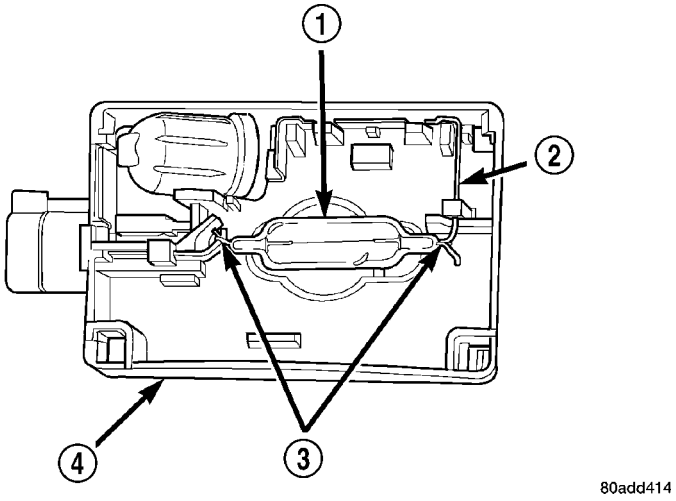

Fig. 33 Underhood Lamp

1 - LAMP
2 - LAMP TERMINAL
3 - LAMP WIRE LOOP
4 - LAMP HOUSING

INSTALLATION

(1) Engage the lamp wire loop to the terminal closest to the lamp housing wire connector.

(2) Press the opposite terminal inward and engage the remaining lamp wire loop onto the terminal.

(3) Position the lamp lens onto the lamp housing and press the lens into place.

(4) Reconnect the negative battery cable.