RESTRAINTS (Continued)

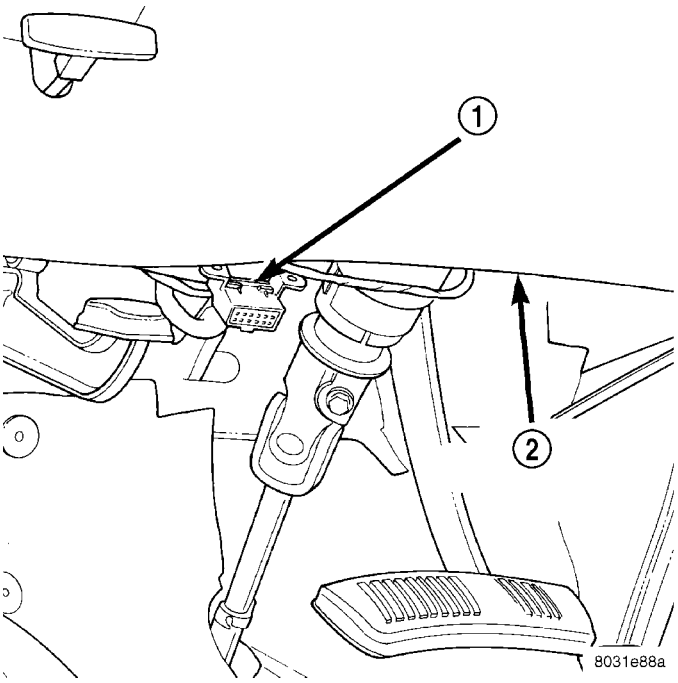

Fig. 5 16-Way Data Link Connector - Typical

1 - 16–WAY DATA LINK CONNECTOR
2 - BOTTOM OF INSTRUMENT PANEL

erase. Refer to the appropriate diagnostic information to diagnose any stored DTC that will not erase. If the stored DTC information is successfully erased, go to Step 9.

(9) Turn the ignition switch to the Off position for about fifteen seconds, and then back to the On position. Observe the airbag indicator in the instrument cluster. It should illuminate for six to eight seconds, and then go out. This indicates that the supplemental restraint system is functioning normally and that the repairs are complete. If the airbag indicator fails to light, or lights and stays on, there is still an active supplemental restraint system fault or malfunction. Refer to the appropriate diagnostic information to diagnose the problem.

AIRBAG CONTROL MODULE

DESCRIPTION

The Airbag Control Module (ACM) is secured with four screws to the top mounting surface of a stamped steel bracket welded onto the top of the floor panel transmission tunnel below the instrument panel and forward of the center floor console in the passenger compartment of the vehicle (Fig. 6). Concealed within a hollow in the center of the die cast aluminum ACM housing is the electronic circuitry of the ACM which includes a microprocessor, an electronic impact sensor, an electromechanical safing sensor, and an energy storage capacitor. A stamped metal cover

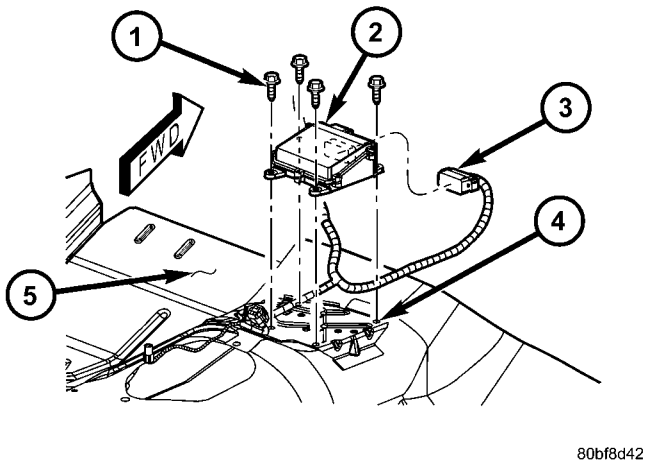

Fig. 6 Airbag Control Module

1 - SCREW (4)
2 - AIRBAG CONTROL MODULE
3 - WIRE HARNESS CONNECTOR
4 - MOUNTING BRACKET
5 - FRONT FLOOR PANEL

plate is secured to the bottom of the ACM housing with four screws to enclose and protect the internal electronic circuitry and components.

The ACM housing has an integral mounting flange on each side. Each mounting flange has an integral locating pin on its lower surface and two round mounting holes. An arrow cast into the top of the ACM housing near the rear provides a visual verification of the proper orientation of the unit, and should always be pointed toward the front of the vehicle. A molded plastic electrical connector receptacle containing twenty-three terminal pins exits the forward facing side of the ACM housing. These terminal pins connect the ACM to the vehicle electrical system through a dedicated take out and connector of the body wire harness.

The impact sensor and safing sensor internal to the ACM are calibrated for the specific vehicle, and are only serviced as a unit with the ACM. The ACM cannot be repaired or adjusted and, if damaged or faulty, it must be replaced.

OPERATION

The microprocessor in the Airbag Control Module (ACM) contains the front supplemental restraint system logic circuits and controls all of the supplemental restraint system components. The ACM uses On-Board Diagnostics (OBD) and can communicate with other electronic modules in the vehicle as well as with the DRBIII® scan tool using the Programmable Communications Interface (PCI) data bus network. This method of communication is used for control of the airbag indicator in the ElectroMechanical Instrument Cluster (EMIC) and for supplemental