AIRBAG CONTROL MODULE (Continued)

REMOVAL

WARNING: TO AVOID PERSONAL INJURY OR DEATH, ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, AIRBAG, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT.

WARNING: TO AVOID PERSONAL INJURY OR DEATH, NEVER STRIKE OR DROP THE AIRBAG CONTROL MODULE, AS IT CAN DAMAGE THE IMPACT SENSOR OR AFFECT ITS CALIBRATION. THE AIRBAG CONTROL MODULE CONTAINS THE IMPACT SENSOR, WHICH ENABLES THE SYSTEM TO DEPLOY THE SUPPLEMENTAL RESTRAINTS. IF AN AIRBAG CONTROL MODULE IS ACCIDENTALLY DROPPED DURING SERVICE, THE MODULE MUST BE SCRAPPED AND REPLACED WITH A NEW UNIT. FAILURE TO OBSERVE THIS WARNING COULD RESULT IN ACCIDENTAL, INCOMPLETE, OR IMPROPER SUPPLEMENTAL RESTRAINT DEPLOYMENT.

(1) Disconnect and isolate the battery negative cable. Wait two minutes for the system capacitor to discharge before further service.

(2) Pull the carpet on the right and left sides of the floor panel transmission tunnel rearward far enough to access the Airbag Control Module (ACM), which is forward of the floor console.

(3) On models equipped with the optional Anti-lock Brake System (ABS), remove the acceleration switch from the left side of the mounting bracket on the floor panel transmission tunnel. (Refer to 5 - BRAKES/ELECTRICAL/G-SWITCH - REMOVAL).

(4) Remove the four screws that secure the Airbag Control Module (ACM) to the mounting bracket on the floor panel transmission tunnel (Fig. 7).

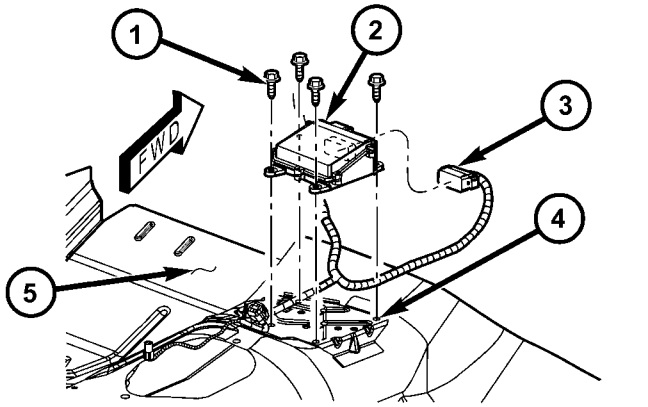

Fig. 7 Airbag Control Module Remove/Install

1 - SCREW (4)
2 - AIRBAG CONTROL MODULE
3 - WIRE HARNESS CONNECTOR
4 - MOUNTING BRACKET
5 - FRONT FLOOR PANEL

(5) Lift the ACM upward far enough to disengage the locator pins on the bottom of the ACM mounting flanges from the locating holes in the mounting bracket, then slide the ACM out from under the instrument panel far enough to access the wire harness connector.

(6) Disconnect the body wire harness connector for the ACM from the ACM connector receptacle located on the forward facing side of the module. To disconnect the body wire harness connector from the ACM (Fig. 8):

(a) Pull the white Connector Positive Assurance (CPA) locks on each side of the connector out about 3 millimeters (0.125 inch).

(b) Squeeze the latch tabs on each side of the connector between the thumb and forefinger and pull the connector straight away from the ACM connector receptacle.

(7) Remove the ACM from beneath the instrument panel.